
FireSim Documentation

**Sagar Karandikar, Howard Mao,
Donggyu Kim, David Biancolin,
Alon Amid,
Berkeley Architecture Research**

Nov 12, 2019

- 1 FireSim Basics** **3**
- 1.1 Two common use cases: 3
- 1.1.1 Single-Node Simulation, in Parallel 3
- 1.1.2 Datacenter/Cluster Simulation 3
- 1.2 Other Use Cases 4
- 1.3 Background/Terminology 4
- 1.4 Using FireSim/The FireSim Workflow 5

- 2 Initial Setup/Installation** **7**
- 2.1 First-time AWS User Setup 7
- 2.1.1 Creating an AWS Account 7
- 2.1.2 AWS Credit at Berkeley 7
- 2.1.3 Requesting Limit Increases 7
- 2.2 Configuring Required Infrastructure in Your AWS Account 8
- 2.2.1 Select a region 8
- 2.2.2 Key Setup 8
- 2.2.3 Check your EC2 Instance Limits 8
- 2.2.4 Start a t2.nano instance to run the remaining configuration commands 9
- 2.2.5 Run scripts from the t2.nano 9
- 2.2.6 Terminate the t2.nano 10
- 2.2.7 Subscribe to the AWS FPGA Developer AMI 10
- 2.3 Setting up your Manager Instance 10
- 2.3.1 Launching a “Manager Instance” 10
- 2.3.2 Setting up the FireSim Repo 13
- 2.3.3 Completing Setup Using the Manager 13

- 3 Running FireSim Simulations** **15**
- 3.1 Running a Single Node Simulation 15
- 3.1.1 Building target software 15
- 3.1.2 Setting up the manager configuration 16
- 3.1.3 Launching a Simulation! 18
- 3.2 Running a Cluster Simulation 23
- 3.2.1 Returning to a clean configuration 23
- 3.2.2 Building target software 23
- 3.2.3 Setting up the manager configuration 24
- 3.2.4 Launching a Simulation! 26

4	Building Your Own Hardware Designs (FireSim FPGA Images)	35
4.1	Amazon S3 Setup	35
4.2	Build Recipes	35
4.3	Running a Build	36
5	Manager Usage (the <code>firesim</code> command)	37
5.1	Overview	37
5.1.1	“Inputs” to the Manager	37
5.1.2	Logging	37
5.2	Manager Command Line Arguments	38
5.2.1	<code>--runtimeconfigfile FILENAME</code>	39
5.2.2	<code>--buildconfigfile FILENAME</code>	39
5.2.3	<code>--buildrecipesconfigfile FILENAME</code>	39
5.2.4	<code>--hwdbconfigfile FILENAME</code>	39
5.2.5	<code>--overrideconfigdata SECTION PARAMETER VALUE</code>	39
5.2.6	<code>TASK</code>	39
5.3	Manager Tasks	39
5.3.1	<code>firesim managerinit</code>	39
5.3.2	<code>firesim buildafi</code>	40
5.3.3	<code>firesim shareagfi</code>	40
5.3.4	<code>firesim launchrunfarm</code>	41
5.3.5	<code>firesim terminaterunfarm</code>	41
5.3.6	<code>firesim infrasetup</code>	42
5.3.7	<code>firesim boot</code>	42
5.3.8	<code>firesim kill</code>	42
5.3.9	<code>firesim runworkload</code>	43
5.3.10	<code>firesim runcheck</code>	43
5.4	Manager Configuration Files	43
5.4.1	<code>config_runtime.ini</code>	43
5.4.2	<code>config_build.ini</code>	47
5.4.3	<code>config_build_recipes.ini</code>	49
5.4.4	<code>config_hwdb.ini</code>	55
5.5	Manager Environment Variables	58
5.5.1	<code>FIRESIM_RUNFARM_PREFIX</code>	58
5.6	Manager Network Topology Definitions (<code>user_topology.py</code>)	58
5.6.1	<code>user_topology.py</code> contents:	58
5.7	AGFI Metadata/Tagging	66
6	Workloads	67
6.1	Defining Custom Workloads	67
6.1.1	Uniform Workload JSON	68
6.1.2	Non-uniform Workload JSON (explicit job per simulated node)	69
6.2	SPEC 2017	71
6.2.1	Intspeed	72
6.2.2	Intrate	72
6.3	Running Fedora on FireSim	73
6.4	ISCA 2018 Experiments	73
6.4.1	Prerequisites	74
6.4.2	Building Benchmark Binaries/Rootfses	74
6.4.3	Figure 5: Ping Latency vs. Configured Link Latency	74
6.4.4	Figure 6: Network Bandwidth Saturation	74
6.4.5	Figure 7: Memcached QoS / Thread Imbalance	75
6.4.6	Figure 8: Simulation Rate vs. Scale	75
6.4.7	Figure 9: Simulation Rate vs. Link Latency	75

6.4.8	Running all experiments at once	75
6.5	GAP Benchmark Suite	76
7	FireMarshal	77
7.1	Quick Start	77
8	Targets	79
8.1	Restrictions on Target RTL	79
8.2	Provided Target Designs	79
8.2.1	Target Generator Organization	79
8.2.2	Specifying A Target Instance	80
8.3	Rocket Chip Generator-based SoCs (firesim project)	81
8.3.1	Rocket-based SoCs	81
8.3.2	BOOM-based SoCs	81
8.3.3	Generating A Different FASED Memory-Timing Model Instance	82
8.4	Midas Examples (midasexamples project)	82
8.4.1	Examples	82
8.5	FASED Tests (fasedtests project)	82
8.5.1	Examples	83
9	Debugging	85
9.1	Debugging & Testing with RTL Simulation	85
9.1.1	Target-Level Simulation	86
9.1.2	MIDAS-Level Simulation	86
9.1.3	FPGA-Level Simulation	87
9.1.4	Scala Tests	88
9.2	Debugging Using FPGA Integrated Logic Analyzers (ILA)	88
9.2.1	Annotating Signals	89
9.2.2	Setting a ILA Depth	89
9.2.3	Using the ILA at Runtime	89
9.3	Debugging Using TracerV	90
9.3.1	Building a Design with TracerV	90
9.3.2	Enabling Tracing at Runtime	90
9.3.3	Interpreting the Trace Result	90
9.4	Assertion Synthesis	90
9.4.1	Enabling Assertion Synthesis	91
9.4.2	Runtime Behavior	91
9.4.3	Related Publications	91
9.5	Printf Synthesis	91
9.5.1	Enabling Printf Synthesis	91
9.5.2	Runtime Arguments	92
9.5.3	Related Publications	92
10	Supernode - Multiple Simulated SoCs Per FPGA	93
10.1	Introduction	93
10.2	Building Supernode Designs	93
10.3	Running Supernode Simulations	94
10.4	Work in Progress!	95
11	Miscellaneous Tips	97
11.1	Add the <code>fsimcluster</code> column to your AWS management console	97
11.2	FPGA Dev AMI Remote Desktop Setup	97
11.3	Experimental Support for SSHing into simulated nodes and accessing the internet from within simulations	98
11.4	Navigating the FireSim Codebase	99

12	FireSim Asked Questions	101
12.1	I just bumped the FireSim repository to a newer commit and simulations aren't running. What is going on?	101
12.2	Is there a good way to keep track of what AGFI corresponds to what FireSim commit?	101
13	Overview & Philosophy	103
13.1	Golden Gate vs FPGA Prototyping	103
13.2	Why Use Golden Gate & FireSim	103
13.3	Why Not Golden Gate	104
13.4	How is Host-Decoupling Implemented?	104
14	Target Abstraction & Host Decoupling	105
14.1	The Target as a Dataflow Graph	105
14.2	Model Implementations	105
14.3	Expressing the Target Graph	106
14.4	Latency-Insensitive Bounded Dataflow Networks	106
15	Target-to-Host Bridges	107
15.1	Terminology	107
15.2	Target Side	108
15.2.1	Type Parameters:	108
15.2.2	Abstract Members:	108
15.3	What Happens Next?	108
15.4	Host Side	109
15.5	Compile-Time (Parameterization) vs Runtime Configuration	109
15.6	Target-Side vs Host-Side Parameterization	109
16	Indices and tables	111

New to FireSim? Jump to the [FireSim Basics](#) page for more info.

FireSim is a cycle-accurate, FPGA-accelerated scale-out computer system simulation platform developed in the Berkeley Architecture Research Group in the EECS Department at the University of California, Berkeley.

FireSim is capable of simulating from **one to thousands of multi-core compute nodes**, derived from **silicon-proven** and **open** target-RTL, with an optional cycle-accurate network simulation tying them together. FireSim runs on FPGAs in **public cloud** environments like AWS EC2 F1, removing the high capex traditionally involved in large-scale FPGA-based simulation.

FireSim is useful both for datacenter architecture research as well as running many single-node architectural experiments in parallel on FPGAs. By harnessing a standardized host platform and providing a large amount of automation/tooling, FireSim drastically simplifies the process of building and deploying large-scale FPGA-based hardware simulations.

To learn more, see the [FireSim website](#) and the [FireSim ISCA 2018 paper](#).

For a two-minute overview that describes how FireSim simulates a datacenter, see our [ISCA 2018 lightning talk on YouTube](#).

1.1 Two common use cases:

1.1.1 Single-Node Simulation, in Parallel

In this mode, FireSim allows for simulation of individual Rocket Chip-based nodes without a network, which allows individual simulations to run at ~150 MHz. The FireSim manager has the ability to automatically distribute jobs to many parallel simulations, expediting the process of running large workloads like SPEC. For example, users can run all of SPECInt2017 on Rocket Chip in ~1 day by running the 10 separate workloads in parallel on 10 FPGAs.

1.1.2 Datacenter/Cluster Simulation

In this mode, FireSim also models a cycle-accurate network with parameterizeable bandwidth and link latency, as well as configurable topology, to accurately model current and future datacenter-scale systems. For example, FireSim has

been used to simulate 1024 quad-core Rocket Chip-based nodes, interconnected by a 200 Gbps, 2us network. To learn more about this use case, see our [ISCA 2018 paper](#) or [two-minute lightning talk](#).

1.2 Other Use Cases

This release does not support a non-cycle-accurate network as our [AWS Compute Blog Post/Demo](#) used. This feature will be restored in a future release.

If you have other use-cases that we haven't covered, feel free to contact us!

1.3 Background/Terminology

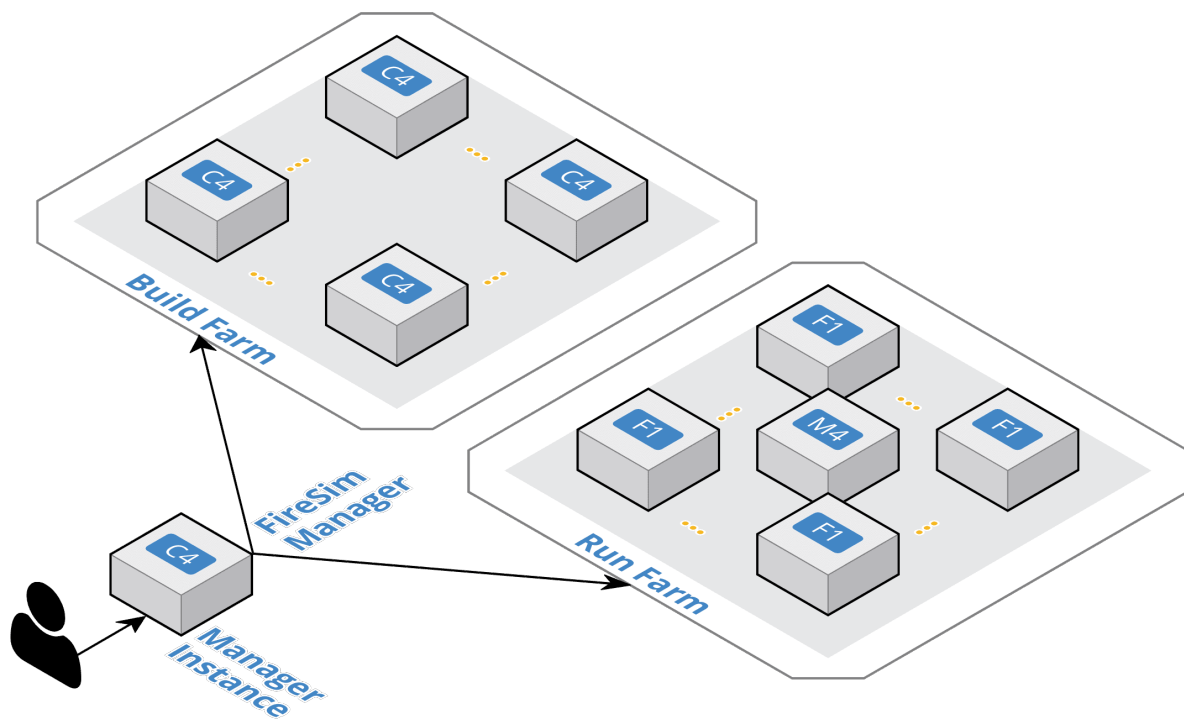


Fig. 1: FireSim Infrastructure Diagram

FireSim Manager (`firesim`) This program (available on your path as `firesim` once we source necessary scripts) automates the work required to launch FPGA builds and run simulations. Most users will only have to interact with the manager most of the time. If you're familiar with tools like Vagrant or Docker, the `firesim` command is just like the `vagrant` and `docker` commands, but for FPGA simulators instead of VMs/containers.

Manager Instance This is the AWS EC2 instance that you will SSH-into and do work on. This is where you'll clone your copy of FireSim and use the FireSim Manager to deploy builds/simulations from.

Build Farm These are instances that are elastically started/terminated by the FireSim manager when you run FPGA builds. The manager will automatically ship source for builds to these instances and run the Verilog -> FPGA Image process on them.

Run Farm These are a tagged collection of F1 (and M4) instances that the manager automatically launches and deploys simulations onto. You can launch multiple Run Farms in parallel, each with their own tag, to run multiple separate simulations in parallel.

To disambiguate between the computers being simulated and the computers doing the simulating, we also define:

Target The design and environment under simulation. Generally, a group of one or more multi-core RISC-V microprocessors with or without a network between them.

Host The computers executing the FireSim simulation – the **Run Farm** from above.

We frequently prefix words with these terms. For example, software can run on the simulated RISC-V system (*target-software*) or on a host x86 machine (*host-software*).

Golden Gate (MIDAS II) The FIRRTL compiler used by FireSim to convert target RTL into a decoupled simulator. Formerly named MIDAS.

1.4 Using FireSim/The FireSim Workflow

The tutorials that follow this page will guide you through the complete flow for getting an example FireSim simulation up and running. At the end of this tutorial, you'll have a simulation that simulates a single quad-core Rocket Chip-based node with a 4 MB last level cache, 16 GB DDR3, and no NIC. After this, you can continue to a tutorial that shows you how to simulate a globally-cycle-accurate cluster-scale FireSim simulation. The final tutorial will show you how to build your own FPGA images with customized hardware. After you complete these tutorials, you can look at the Advanced documentation in the sidebar to the left.

Here's a high-level outline of what we'll be doing in our tutorials:

1. Initial Setup/Installation

- (a) First-time AWS User Setup: You can skip this if you already have an AWS account/payment method set up.
 - (b) Configuring required AWS resources in your account: This sets up the appropriate VPCs/subnets/security groups required to run FireSim.
 - (c) Setting up a "Manager Instance" from which you will coordinate building and deploying simulations.
2. **Single-node simulation tutorial:** This tutorial guides you through the process of running one simulation on a Run Farm consisting of a single `f1.2xlarge`, using our pre-built public FireSim AGFIs.
 3. **Cluster simulation tutorial:** This tutorial guides you through the process of running an 8-node cluster simulation on a Run Farm consisting of one `f1.16xlarge`, using our pre-built public FireSim AGFIs and switch models.
 4. **Building your own hardware designs tutorial (Chisel to FPGA Image):** This tutorial guides you through the full process of taking Rocket Chip RTL and any custom RTL plugged into Rocket Chip and producing a FireSim AGFI to plug into your simulations. This automatically runs Chisel elaboration, FAME-1 Transformation, and the Vivado FPGA flow.

Generally speaking, you only need to follow step 4 if you're modifying Chisel RTL or changing non-runtime configurable hardware parameters.

Now, hit next to proceed with setup.

Initial Setup/Installation

This section will guide you through initial setup of your AWS account to support FireSim, as well as cloning/installing FireSim on your manager instance.

2.1 First-time AWS User Setup

If you've never used AWS before and don't have an account, follow the instructions below to get started.

2.1.1 Creating an AWS Account

First, you'll need an AWS account. Create one by going to aws.amazon.com and clicking "Sign Up." You'll want to create a personal account. You will have to give it a credit card number.

2.1.2 AWS Credit at Berkeley

If you're an internal user at Berkeley and affiliated with UCB-BAR or the RISE Lab, see the [RISE Lab Wiki](#) for instructions on getting access to the AWS credit pool. Otherwise, continue with the following section.

2.1.3 Requesting Limit Increases

In our experience, new AWS accounts do not have access to EC2 F1 instances by default. In order to get access, you should file a limit increase request.

Follow these steps to do so:

<https://docs.aws.amazon.com/AWSEC2/latest/UserGuide/ec2-resource-limits.html>

You'll probably want to start out with the following requests, depending on your existing limits:

Request 1:

```
Region:                US East (Northern Virginia)
Primary Instance Type: f1.2xlarge
Limit:                 Instance Limit
New limit value:       1
```

Request 2:

```
Region:                US East (Northern Virginia)
Primary Instance Type: f1.16xlarge
Limit:                 Instance Limit
New limit value:       1
```

This allows you to run one node on the `f1.2xlarge` or eight nodes on the `f1.16xlarge`.

For the “Use Case Description”, you should describe your project and write something about hardware simulation and mention that information about the tool you’re using can be found at: <https://firesim.org>

This process has a human in the loop, so you should submit it ASAP. At this point, you should wait for the response to this request.

If you’re at Berkeley/UCB-BAR, you also need to wait until your account has been added to the RISE billing pool, otherwise your personal CC will be charged for AWS usage.

Hit Next below to continue.

2.2 Configuring Required Infrastructure in Your AWS Account

Once we have an AWS Account setup, we need to perform some advance setup of resources on AWS. You will need to follow these steps even if you already had an AWS account as these are FireSim-specific.

2.2.1 Select a region

Head to the [EC2 Management Console](#). In the top right corner, ensure that the correct region is selected. You should select one of: `us-east-1` (N. Virginia), `us-west-2` (Oregon), or `eu-west-1` (Ireland), since F1 instances are only available in those regions.

Once you select a region, it’s useful to bookmark the link to the EC2 console, so that you’re always sent to the console for the correct region.

2.2.2 Key Setup

In order to enable automation, you will need to create a key named `firesim`, which we will use to launch all instances (Manager Instance, Build Farm, Run Farm).

To do so, click “Key Pairs” under “Network & Security” in the left-sidebar. Follow the prompts, name the key `firesim`, and save the private key locally as `firesim.pem`. You can use this key to access all instances from your local machine. We will copy this file to our manager instance later, so that the manager can also use it.

2.2.3 Check your EC2 Instance Limits

AWS limits access to particular instance types for new/infrequently used accounts to protect their infrastructure. You should make sure that your account has access to `f1.2xlarge`, `f1.4xlarge`, `f1.16xlarge`, `m4.16xlarge`, and `c5.4xlarge` instances by looking at the “Limits” page in the EC2 panel, which you can access [here](#). The values

listed on this page represent the maximum number of any of these instances that you can run at once, which will limit the size of simulations (# of nodes) that you can run. If you need to increase your limits, follow the instructions on the [Requesting Limit Increases](#) page. To follow this guide, you need to be able to run one `f1.2xlarge` instance and two `c5.4xlarge` instances.

2.2.4 Start a `t2.nano` instance to run the remaining configuration commands

To avoid having to deal with the messy process of installing packages on your local machine, we will spin up a very cheap `t2.nano` instance to run a series of one-time `aws` configuration commands to setup our AWS account for FireSim. At the end of these instructions, we'll terminate the `t2.nano` instance. If you happen to already have `boto3` and the AWS CLI installed on your local machine, you can do this locally.

Launch a `t2.nano` by following these instructions:

1. Go to the [EC2 Management Console](#) and click “Launch Instance”
2. On the AMI selection page, select “Amazon Linux AMI...”, which should be the top option.
3. On the Choose an Instance Type page, select `t2.nano`.
4. Click “Review and Launch” (we don’t need to change any other settings)
5. On the review page, click “Launch”
6. Select the `firesim` key pair we created previously, then click Launch Instances.
7. Click on the instance name and note its public IP address.

2.2.5 Run scripts from the `t2.nano`

SSH into the `t2.nano` like so:

```
ssh -i firesim.pem ec2-user@INSTANCE_PUBLIC_IP
```

Which should present you with something like:

```
Last login: Mon Feb 12 21:11:27 2018 from 136.152.143.34

  __|  __|_  )
 _| (      /   Amazon Linux AMI
  __|\__|__|

https://aws.amazon.com/amazon-linux-ami/2017.09-release-notes/
4 package(s) needed for security, out of 5 available
Run "sudo yum update" to apply all updates.
[ec2-user@ip-172-30-2-66 ~]$
```

On this machine, run the following:

```
aws configure
[follow prompts]
```

See <https://docs.aws.amazon.com/cli/latest/userguide/tutorial-ec2-ubuntu.html#configure-cli-launch-ec2> for more about `aws configure`. You should specify the same region that you chose above (one of `us-east-1`, `us-west-2`, `eu-west-1`) and set the default output format to `json`.

Again on the `t2.nano` instance, do the following:

```
sudo yum -y install python-pip
sudo pip install boto3
wget https://raw.githubusercontent.com/firesim/firesim/master/scripts/aws-setup.py
python aws-setup.py
```

This will create a VPC named `firesim` and a security group named `firesim` in your account.

2.2.6 Terminate the `t2.nano`

At this point, we are finished with the general account configuration. You should terminate the `t2.nano` instance you created, since we do not need it anymore (and it shouldn't contain any important data).

2.2.7 Subscribe to the AWS FPGA Developer AMI

Go to the [AWS Marketplace page for the FPGA Developer AMI](#). Click the button to subscribe to the FPGA Dev AMI (it should be free) and follow the prompts to accept the EULA (but do not launch any instances).

Now, hit next to continue on to setting up our Manager Instance.

2.3 Setting up your Manager Instance

2.3.1 Launching a “Manager Instance”

Now, we need to launch a “Manager Instance” that acts as a “head” node that we will `ssh` or `mosh` into to work from. Since we will deploy the heavy lifting to separate `c5.4xlarge` and `f1` instances later, the Manager Instance can be a relatively cheap instance. In this guide, however, we will use a `c5.4xlarge`, running the AWS FPGA Developer AMI (be sure to subscribe if you have not done so. See [Subscribe to the AWS FPGA Developer AMI](#)).

Head to the [EC2 Management Console](#). In the top right corner, ensure that the correct region is selected.

To launch a manager instance, follow these steps:

1. From the main page of the EC2 Management Console, click `Launch Instance`. We use an on-demand instance here, so that your data is preserved when you stop/start the instance, and your data is not lost when pricing spikes on the spot market.
2. When prompted to select an AMI, search in the `Community AMIs` tab for “FPGA” and select the option that starts with `FPGA Developer AMI - 1.6.0`. **DO NOT USE ANY OTHER VERSION.**
3. When prompted to choose an instance type, select the instance type of your choosing. A good choice is a `c5.4xlarge`.
4. On the “Configure Instance Details” page:
 - (a) First make sure that the `firesim` VPC is selected in the drop-down box next to “Network”. Any subnet within the `firesim` VPC is fine.
 - (b) Additionally, check the box for “Protect against accidental termination.” This adds a layer of protection to prevent your manager instance from being terminated by accident. You will need to disable this setting before being able to terminate the instance using usual methods.
 - (c) Also on this page, expand “Advanced Details” and in the resulting text box, paste the following:


```

#!/bin/bash
echo "machine launch script started" > /home/centos/machine-launchstatus
sudo yum install -y mosh
sudo yum groupinstall -y "Development tools"
sudo yum install -y gmp-devel mpfr-devel libmpc-devel zlib-devel vim git java_
↪ java-devel
curl https://bintray.com/sbt/rpm/rpm | sudo tee /etc/yum.repos.d/bintray-sbt-
↪ rpm.repo
sudo yum install -y sbt texinfo gengetopt
sudo yum install -y expat-devel libusb1-devel ncurses-devel cmake
↪ "perl(ExtUtils::MakeMaker) "
# deps for poky
sudo yum install -y python36 patch diffstat texi2html texinfo subversion_
↪ chrpath git wget
# deps for qemu
sudo yum install -y gtk3-devel
# deps for firesim-software (note that rsync is installed but too old)
sudo yum install -y python36-pip python36-devel rsync
# Install GNU make 4.x (needed to cross-compile glibc 2.28+)
sudo yum install -y centos-release-scl
sudo yum install -y devtoolset-8-make

# install DTC. it's not available in repos in FPGA AMI
DTCversion=dtc-1.4.4
wget https://git.kernel.org/pub/scm/utils/dtc/dtc.git/snapshot/$DTCversion.
↪ tar.gz
tar -xvf $DTCversion.tar.gz
cd $DTCversion
make -j16
make install
cd ..
rm -rf $DTCversion.tar.gz
rm -rf $DTCversion

# get a proper version of git
sudo yum -y remove git
sudo yum -y install epel-release
sudo yum -y install https://centos7.iuscommunity.org/ius-release.rpm
sudo yum -y install git2u

# install verilator
git clone http://git.veripool.org/git/verilator
cd verilator/
git checkout v4.002
autoconf && ./configure && make -j16 && sudo make install
cd ..

# bash completion for manager
sudo yum -y install bash-completion

# graphviz for manager
sudo yum -y install graphviz python-devel

# these need to match what's in deploy/requirements.txt
sudo pip2 install fabric==1.14.0
sudo pip2 install boto3==1.6.2
sudo pip2 install colorama==0.3.7

```

(continues on next page)

(continued from previous page)

```
sudo pip2 install argcomplete==1.9.3
sudo pip2 install graphviz==0.8.3
# for some of our workload plotting scripts
sudo pip2 install --upgrade --ignore-installed pyparsing
sudo pip2 install matplotlib==2.2.2
sudo pip2 install pandas==0.22.0
# new awscli on 1.6.0 AMI is broken with our versions of boto3
sudo pip2 install awscli==1.15.76

sudo activate-global-python-argcomplete

# get a regular prompt
echo "PS1='\u@\H:\w\ \$ '" >> /home/centos/.bashrc
echo "machine launch script completed" >> /home/centos/machine-launchstatus
```

This will pre-install all of the dependencies needed to run FireSim on your instance.

5. On the next page (“Add Storage”), increase the size of the root EBS volume to ~300GB. The default of 150GB can quickly become tight as you accumulate large Vivado reports/outputs, large waveforms, XSim outputs, and large root filesystems for simulations. You can get rid of the small (5GB) secondary volume that is added by default.
6. You can skip the “Add Tags” page, unless you want tags.
7. On the “Configure Security Group” page, select the `firesim` security group that was automatically created for you earlier.
8. On the review page, click the button to launch your instance.

Make sure you select the `firesim` key pair that we setup earlier.

Access your instance

We **HIGHLY** recommend using `mosh` instead of `ssh` or using `ssh` with a `screen`/`tmux` session running on your manager instance to ensure that long-running jobs are not killed by a bad network connection to your manager instance. On this instance, the `mosh` server is installed as part of the setup script we pasted before, so we need to first `ssh` into the instance and make sure the setup is complete.

In either case, `ssh` into your instance (e.g. `ssh -i firesim.pem centos@YOUR_INSTANCE_IP`) and wait until the `~/machine-launchstatus` file contains all the following text:

```
centos@ip-172-30-2-140.us-west-2.compute.internal:~$ cat machine-launchstatus
machine launch script started
machine launch script completed!
```

Once this line appears, exit and re-`ssh` into the system. If you want to use `mosh`, `mosh` back into the system.

Key Setup, Part 2

Now that our manager instance is started, copy the private key that you downloaded from AWS earlier (`firesim.pem`) to `~/firesim.pem` on your manager instance. This step is required to give the manager access to the instances it launches for you.

2.3.2 Setting up the FireSim Repo

We're finally ready to fetch FireSim's sources. Run:

```
git clone https://github.com/firesim/firesim
cd firesim
./build-setup.sh fast
```

This will have initialized submodules and installed the RISC-V tools and other dependencies.

Next, run:

```
source sourceme-f1-manager.sh
```

This will have initialized the AWS shell, added the RISC-V tools to your path, and started an `ssh-agent` that supplies `~/firesim.pem` automatically when you use `ssh` to access other nodes. Sourcing this the first time will take some time – however each time after that should be instantaneous. Also, if your `firesim.pem` key requires a passphrase, you will be asked for it here and `ssh-agent` should cache it.

Every time you login to your manager instance to use FireSim, you should “cd” into your firesim directory and source this file again.

2.3.3 Completing Setup Using the Manager

First, run the following to setup your AWS credentials on the instance:

```
aws configure
```

This will prompt you to setup AWS credentials on the instance, which allows the manager to automatically manage build/simulation nodes. See <https://docs.aws.amazon.com/cli/latest/userguide/tutorial-ec2-ubuntu.html#configure-cli-launch-ec2> for more about these credentials. When prompted, you should specify the same region that you chose above and set the default output format to `json`.

The FireSim manager contains a command that will interactively guide you through the rest of the FireSim setup process. To run it, do the following:

```
firesim managerinit
```

This will first prompt you to setup AWS credentials on the instance, which we just did in the previous step. You can simply hit enter to skip these four prompts.

Next, it will create initial configuration files, which we will edit in later sections. Finally, it will prompt you for an email address, which is used to send email notifications upon FPGA build completion and optionally for workload completion. You can leave this blank if you do not wish to receive any notifications, but this is not recommended.

Now you're ready to launch FireSim simulations! Hit Next to learn how to run single-node simulations.

Running FireSim Simulations

These guides will walk you through running two kinds of simulations:

- First, we will simulate a single-node, non-networked target, using a pre-generated hardware image.
- Then, we will simulate an eight-node, networked cluster target, also using a pre-generated hardware image.

Hit next to get started!

3.1 Running a Single Node Simulation

Now that we've completed the setup of our manager instance, it's time to run a simulation! In this section, we will simulate **1 target node**, for which we will need a single `f1.2xlarge` (1 FPGA) instance.

Make sure you are `ssh` or `mosh`'d into your manager instance and have sourced `source me-f1-manager.sh` before running any of these commands.

3.1.1 Building target software

In these instructions, we'll assume that you want to boot Linux on your simulated node. To do so, we'll need to build our FireSim-compatible RISC-V Linux distro. For this tutorial, we will use a simple buildroot-based distribution. You can do this like so:

```
cd firesim/sw/firesim-software
./marshal -v build workloads/br-base.json
```

This process will take about 10 to 15 minutes on a `c5.4xlarge` instance. Once this is completed, you'll have the following files:

- `firesim/sw/firesim-software/images/br-base-bin` - a bootloader + Linux kernel image for the nodes we will simulate.
- `firesim/sw/firesim-software/images/br-base.img` - a disk image for each the nodes we will simulate

These files will be used to form base images to either build more complicated workloads (see the *Defining Custom Workloads* section) or to copy around for deploying.

3.1.2 Setting up the manager configuration

All runtime configuration options for the manager are set in a file called `firesim/deploy/config_runtime.ini`. In this guide, we will explain only the parts of this file necessary for our purposes. You can find full descriptions of all of the parameters in the *Manager Configuration Files* section.

If you open up this file, you will see the following default config (assuming you have not modified it):

```
# RUNTIME configuration for the FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for documentation,
↳ of all of these params.

[runfarm]
runfarmtag=mainrunfarm

f1_16xlarges=1
m4_16xlarges=0
f1_4xlarges=0
f1_2xlarges=0

runinstancemarket=ondemand
spotinterruptionbehavior=terminate
spotmaxprice=ondemand

[targetconfig]
topology=example_8config
no_net_num_nodes=2
linklatency=6405
switchinglatency=10
netbandwidth=200
profileinterval=-1

# This references a section from config_hwconfigs.ini
# In homogeneous configurations, use this to set the hardware config deployed
# for all simulators
defaulthwconfig=firesim-quadcore-nic-12-11c4mb-ddr3

[tracing]
enable=no
startcycle=0
endcycle=-1

[workload]
workloadname=linux-uniform.json
terminateoncompletion=no
```

We'll need to modify a couple of these lines.

First, let's tell the manager to use the correct numbers and types of instances. You'll notice that in the `[runfarm]` section, the manager is configured to launch a Run Farm named `mainrunfarm`, consisting of one `f1.16xlarge` and no `m4.16xlarges`, `f1.4xlarges`, or `f1.2xlarges`. The tag specified here allows the manager to differentiate amongst many parallel run farms (each running a workload) that you may be operating – but more on that later.

Since we only want to simulate a single node, let's switch to using one `f1.2xlarge` and no `f1.16xlarges`. To do so, change this section to:

```
[runfarm]
# per aws restrictions, this tag cannot be longer than 255 chars
runfarmtag=mainrunfarm
f1_16xlarges=0
f1_4xlarges=0
m4_16xlarges=0
f1_2xlarges=1
```

You'll see other parameters here, like `runinstancemarket`, `spotinterruptionbehavior`, and `spotmaxprice`. If you're an experienced AWS user, you can see what these do by looking at the *Manager Configuration Files* section. Otherwise, don't change them.

Now, let's change the `[targetconfig]` section to model the correct target design. By default, it is set to model an 8-node cluster with a cycle-accurate network. Instead, we want to model a single-node with no network. To do so, we will need to change a few items in this section:

```
[targetconfig]
topology=no_net_config
no_net_num_nodes=1
linklatency=6405
switchinglatency=10
netbandwidth=200

# This references a section from config_hwconfigs.ini
# In homogeneous configurations, use this to set the hardware config deployed
# for all simulators
defaulthwconfig=firesim-quadcore-no-nic-l2-llc4mb-ddr3
```

Note that we changed three of the parameters here: `topology` is now set to `no_net_config`, indicating that we do not want a network. Then, `no_net_num_nodes` is set to 1, indicating that we only want to simulate one node. Lastly, we changed `defaulthwconfig` from `firesim-quadcore-nic-l2-llc4mb-ddr3` to `firesim-quadcore-no-nic-l2-llc4mb-ddr3`. Notice the subtle difference in this last option? All we did is switch to a hardware configuration that does not have a NIC. This hardware configuration models a Quad-core Rocket Chip with 4 MB of L2 cache and 16 GB of DDR3, and **no** network interface card.

We will leave the last section (`[workload]`) unchanged here, since we do want to run the buildroot-based Linux on our simulated system. The `terminateoncompletion` feature is an advanced feature that you can learn more about in the *Manager Configuration Files* section.

As a final sanity check, your `config_runtime.ini` file should now look like this:

```
# RUNTIME configuration for the FireSim Simulation Manager
# See docs/Configuration-Details.rst for documentation of all of these params.

[runfarm]
runfarmtag=mainrunfarm

f1_16xlarges=0
f1_4xlarges=0
m4_16xlarges=0
f1_2xlarges=1

runinstancemarket=ondemand
spotinterruptionbehavior=terminate
spotmaxprice=ondemand
```

(continues on next page)

(continued from previous page)

```
[targetconfig]
topology=no_net_config
no_net_num_nodes=1
linklatency=6405
switchinglatency=10
netbandwidth=200

# This references a section from config_hwconfigs.ini
# In homogeneous configurations, use this to set the hardware config deployed
# for all simulators
defaulthwconfig=firesim-quadcore-no-nic-l2-11c4mb-ddr3

[workload]
workloadname=linux-uniform.json
terminateoncompletion=no
```

Attention: [Advanced users] **Simulating BOOM instead of Rocket Chip:** If you would like to simulate a single-core **BOOM** as a target, set `defaulthwconfig` to `fireboom-singlecore-no-nic-l2-11c4mb-ddr3`.

3.1.3 Launching a Simulation!

Now that we've told the manager everything it needs to know in order to run our single-node simulation, let's actually launch an instance and run it!

Starting the Run Farm

First, we will tell the manager to launch our Run Farm, as we specified above. When you do this, you will start getting charged for the running EC2 instances (in addition to your manager).

To do launch your run farm, run:

```
firesim launchrunfarm
```

You should expect output like the following:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↪ launchrunfarm
FireSim Manager. Docs: http://docs.firesim.im
Running: launchrunfarm

Waiting for instance boots: f1.16xlarges
Waiting for instance boots: f1.4xlarges
Waiting for instance boots: m4.16xlarges
Waiting for instance boots: f1.2xlarges
i-0d6c29ac507139163 booted!
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--00-19-43-launchrunfarm-
↪ B4Q2ROAK0JN9EDE4.log
```

The output will rapidly progress to `Waiting for instance boots: f1.2xlarges` and then take a minute or two while your `f1.2xlarge` instance launches. Once the launches complete, you should see the instance id

printed and the instance will also be visible in your AWS EC2 Management console. The manager will tag the instances launched with this operation with the value you specified above as the `runfarmtag` parameter from the `config_runtime.ini` file, which we left set as `mainrunfarm`. This value allows the manager to tell multiple Run Farms apart – i.e., you can have multiple independent Run Farms running different workloads/hardware configurations in parallel. This is detailed in the *Manager Configuration Files* and the *firesim launchrunfarm* sections – you do not need to be familiar with it here.

Setting up the simulation infrastructure

The manager will also take care of building and deploying all software components necessary to run your simulation. The manager will also handle flashing FPGAs. To tell the manager to setup our simulation infrastructure, let's run:

```
firesim infrasetup
```

For a complete run, you should expect output like the following:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↪infrasetup
FireSim Manager. Docs: http://docs.firesim.im
Running: infrasetup

Building FPGA software driver for FireSimNoNIC-FireSimRocketChipQuadCoreConfig-
↪FireSimDDR3FRFCFSLLC4MBConfig
[172.30.2.174] Executing task 'instance_liveness'
[172.30.2.174] Checking if host instance is up...
[172.30.2.174] Executing task 'infrasetup_node_wrapper'
[172.30.2.174] Copying FPGA simulation infrastructure for slot: 0.
[172.30.2.174] Installing AWS FPGA SDK on remote nodes.
[172.30.2.174] Unloading XDMA/EDMA/XOCL Driver Kernel Module.
[172.30.2.174] Copying AWS FPGA XDMA driver to remote node.
[172.30.2.174] Loading XDMA Driver Kernel Module.
[172.30.2.174] Clearing FPGA Slot 0.
[172.30.2.174] Flashing FPGA Slot: 0 with agfi: agfi-0eaa90f6bb893c0f7.
[172.30.2.174] Unloading XDMA/EDMA/XOCL Driver Kernel Module.
[172.30.2.174] Loading XDMA Driver Kernel Module.
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--00-32-02-infrasetup-9DJJCX29PF4GAIVL.
↪log
```

Many of these tasks will take several minutes, especially on a clean copy of the repo. The console output here contains the “user-friendly” version of the output. If you want to see detailed progress as it happens, `tail -f` the latest logfile in `firesim/deploy/logs/`.

At this point, the `f1.2xlarge` instance in our Run Farm has all the infrastructure necessary to run a simulation.

So, let's launch our simulation!

Running a simulation!

Finally, let's run our simulation! To do so, run:

```
firesim runworkload
```

This command boots up a simulation and prints out the live status of the simulated nodes every 10s. When you do this, you will initially see output like:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↳runworkload
FireSim Manager. Docs: http://docs.firesim.com
Running: runworkload

Creating the directory: /home/centos/firesim-new/deploy/results-workload/2018-05-19--
↳00-38-52-linux-uniform/
[172.30.2.174] Executing task 'instance_liveness'
[172.30.2.174] Checking if host instance is up...
[172.30.2.174] Executing task 'boot_simulation_wrapper'
[172.30.2.174] Starting FPGA simulation for slot: 0.
[172.30.2.174] Executing task 'monitor_jobs_wrapper'
```

If you don't look quickly, you might miss it, since it will get replaced with a live status page:

```
FireSim Simulation Status @ 2018-05-19 00:38:56.062737
-----
This workload's output is located in:
/home/centos/firesim-new/deploy/results-workload/2018-05-19--00-38-52-linux-uniform/
This run's log is located in:
/home/centos/firesim-new/deploy/logs/2018-05-19--00-38-52-runworkload-
↳JS5IGTV166X169DZ.log
This status will update every 10s.
-----
Instances
-----
Instance IP:   172.30.2.174 | Terminated: False
-----
Simulated Switches
-----
Simulated Nodes/Jobs
-----
Instance IP:   172.30.2.174 | Job: linux-uniform0 | Sim running: True
-----
Summary
-----
1/1 instances are still running.
1/1 simulations are still running.
-----
```

This will only exit once all of the simulated nodes have shut down. So, let's let it run and open another ssh connection to the manager instance. From there, `cd` into your firesim directory again and `source source-me-f1-manager.sh` again to get our ssh key setup. To access our simulated system, ssh into the IP address being printed by the status page, **from your manager instance**. In our case, from the above output, we see that our simulated system is running on the instance with IP `172.30.2.174`. So, run:

```
[RUN THIS ON YOUR MANAGER INSTANCE!]
ssh 172.30.2.174
```

This will log you into the instance running the simulation. Then, to attach to the console of the simulated system, run:

```
screen -r fsm0
```

Voila! You should now see Linux booting on the simulated system and then be prompted with a Linux login prompt, like so:

```
[truncated Linux boot output]
[ 0.020000] VFS: Mounted root (ext2 filesystem) on device 254:0.
[ 0.020000] devtmpfs: mounted
[ 0.020000] Freeing unused kernel memory: 140K
[ 0.020000] This architecture does not have kernel memory protection.
mount: mounting sysfs on /sys failed: No such device
Starting logging: OK
Starting mdev...
mdev: /sys/dev: No such file or directory
modprobe: can't change directory to '/lib/modules': No such file or directory
Initializing random number generator... done.
Starting network: ip: SIOCGIFFLAGS: No such device
ip: can't find device 'eth0'
FAIL
Starting dropbear sshd: OK

Welcome to Buildroot
buildroot login:
```

You can ignore the messages about the network – that is expected because we are simulating a design without a NIC.

Now, you can login to the system! The username is `root` and the password is `firesim`. At this point, you should be presented with a regular console, where you can type commands into the simulation and run programs. For example:

```
Welcome to Buildroot
buildroot login: root
Password:
# uname -a
Linux buildroot 4.15.0-rc6-31580-g9c3074b5c2cd #1 SMP Thu May 17 22:28:35 UTC 2018_
↪riscv64 GNU/Linux
#
```

At this point, you can run workloads as you'd like. To finish off this tutorial, let's poweroff the simulated system and see what the manager does. To do so, in the console of the simulated system, run `poweroff -f`:

```
Welcome to Buildroot
buildroot login: root
Password:
# uname -a
Linux buildroot 4.15.0-rc6-31580-g9c3074b5c2cd #1 SMP Thu May 17 22:28:35 UTC 2018_
↪riscv64 GNU/Linux
# poweroff -f
```

You should see output like the following from the simulation console:

```
# poweroff -f
[ 12.456000] reboot: Power down
Power off
time elapsed: 468.8 s, simulation speed = 88.50 MHz
*** PASSED *** after 41492621244 cycles
Runs 41492621244 cycles
[PASS] FireSimNoNIC Test
SEED: 1526690334
Script done, file is uartlog

[screen is terminating]
```

You'll also notice that the manager polling loop exited! You'll see output like this from the manager:

```
FireSim Simulation Status @ 2018-05-19 00:46:50.075885
-----
This workload's output is located in:
/home/centos/firesim-new/deploy/results-workload/2018-05-19--00-38-52-linux-uniform/
This run's log is located in:
/home/centos/firesim-new/deploy/logs/2018-05-19--00-38-52-runworkload-
↪JS5IGTV166X169DZ.log
This status will update every 10s.
-----
Instances
-----
Instance IP:   172.30.2.174 | Terminated: False
-----
Simulated Switches
-----
-----
Simulated Nodes/Jobs
-----
Instance IP:   172.30.2.174 | Job: linux-uniform0 | Sim running: False
-----
Summary
-----
1/1 instances are still running.
0/1 simulations are still running.
-----
FireSim Simulation Exited Successfully. See results in:
/home/centos/firesim-new/deploy/results-workload/2018-05-19--00-38-52-linux-uniform/
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--00-38-52-runworkload-
↪JS5IGTV166X169DZ.log
```

If you take a look at the workload output directory given in the manager output (in this case, `/home/centos/firesim-new/deploy/results-workload/2018-05-19--00-38-52-linux-uniform/`), you'll see the following:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy/results-
↪workload/2018-05-19--00-38-52-linux-uniform$ ls -la */*
-rw-rw-r-- 1 centos centos 797 May 19 00:46 linux-uniform0/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 00:46 linux-uniform0/os-release
-rw-rw-r-- 1 centos centos 7316 May 19 00:46 linux-uniform0/uartlog
```

What are these files? They are specified to the manager in a configuration file (`firesim/deploy/workloads/linux-uniform.json`) as files that we want automatically copied back to our manager after we run a simulation, which is useful for running benchmarks automatically. The [Defining Custom Workloads](#) section describes this process in detail.

For now, let's wrap-up our tutorial by terminating the `f1.2xlarge` instance that we launched. To do so, run:

```
firesim terminatorunfarm
```

Which should present you with the following:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↪terminaterunfarm
FireSim Manager. Docs: http://docs.firesim.com
Running: terminatorunfarm
```

(continues on next page)

(continued from previous page)

```

IMPORTANT!: This will terminate the following instances:
f1.16xlarges
[]
f1.4xlarges
[]
m4.16xlarges
[]
f1.2xlarges
['i-0d6c29ac507139163']
Type yes, then press enter, to continue. Otherwise, the operation will be cancelled.

```

You must type `yes` then hit enter here to have your instances terminated. Once you do so, you will see:

```

[ truncated output from above ]
Type yes, then press enter, to continue. Otherwise, the operation will be cancelled.
yes
Instances terminated. Please confirm in your AWS Management Console.
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--00-51-54-terminaterunfarm-
↳T9ZAED3LJUQQ3K0N.log

```

At this point, you should always confirm in your AWS management console that the instance is in the shutting-down or terminated states. You are ultimately responsible for ensuring that your instances are terminated appropriately.

Congratulations on running your first FireSim simulation! At this point, you can check-out some of the advanced features of FireSim in the sidebar to the left (for example, we expect that many people will be interested in the ability to automatically run the SPEC17 benchmarks: *SPEC 2017*), or you can continue on with the cluster simulation tutorial.

3.2 Running a Cluster Simulation

Now, let's move on to simulating a cluster of eight nodes, interconnected by a network with one 8-port Top-of-Rack (ToR) switch and 200 Gbps, 2 μ s links. This will require one `f1.16xlarge` (8 FPGA) instance.

Make sure you are `ssh` or `mosh`'d into your manager instance and have sourced `source manager-f1-manager.sh` before running any of these commands.

3.2.1 Returning to a clean configuration

If you already ran the single-node tutorial, let's return to a clean FireSim manager configuration by doing the following:

```

cd firesim/deploy
cp sample-backup-configs/sample_config_runtime.ini config_runtime.ini

```

3.2.2 Building target software

If you already built target software during the single-node tutorial, you can skip to the next part (Setting up the manager configuration). If you haven't followed the single-node tutorial, continue with this section.

In these instructions, we'll assume that you want to boot the buildroot-based Linux distribution on each of the nodes in your simulated cluster. To do so, we'll need to build our FireSim-compatible RISC-V Linux distro. You can do this like so:

```
cd firesim/sw/firesim-software
./marshal -v build workloads/br-base.json
```

This process will take about 10 to 15 minutes on a `c5.4xlarge` instance. Once this is completed, you'll have the following files:

- `firesim/sw/firesim-software/images/br-disk-bin` - a bootloader + Linux kernel image for the nodes we will simulate.
- `firesim/sw/firesim-software/images/br-disk.img` - a disk image for each the nodes we will simulate

These files will be used to form base images to either build more complicated workloads (see the *Defining Custom Workloads* section) or to copy around for deploying.

3.2.3 Setting up the manager configuration

All runtime configuration options for the manager are set in a file called `firesim/deploy/config_runtime.ini`. In this guide, we will explain only the parts of this file necessary for our purposes. You can find full descriptions of all of the parameters in the *Manager Configuration Files* section.

If you open up this file, you will see the following default config (assuming you have not modified it):

```
# RUNTIME configuration for the FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for documentation,
↳ of all of these params.

[runfarm]
runfarmtag=mainrunfarm

f1_16xlarges=1
m4_16xlarges=0
f1_4xlarges=0
f1_2xlarges=0

runinstancemarket=ondemand
spotinterruptionbehavior=terminate
spotmaxprice=ondemand

[targetconfig]
topology=example_8config
no_net_num_nodes=2
linklatency=6405
switchinglatency=10
netbandwidth=200
profileinterval=-1

# This references a section from config_hwconfigs.ini
# In homogeneous configurations, use this to set the hardware config deployed
# for all simulators
defaulthwconfig=firesim-quadcore-nic-l2-11c4mb-ddr3

[tracing]
enable=no
startcycle=0
endcycle=-1
```

(continues on next page)

(continued from previous page)

```
[workload]
workloadname=linux-uniform.json
terminateoncompletion=no
```

For the 8-node cluster simulation, the defaults in this file are exactly what we want. Let's outline the important parameters:

- `f1_16xlarges=1`: This tells the manager that we want to launch one `f1.16xlarge` when we call the `launchrunfarm` command.
- `topology=example_8config`: This tells the manager to use the topology named `example_8config` which is defined in `deploy/runtools/user_topology.py`. This topology simulates an 8-node cluster with one ToR switch.
- `linklatency=6405`: This models a network with 6405 cycles of link latency. Since we are modeling processors running at 3.2 Ghz, 1 cycle = 1/3.2 ns, so 6405 cycles is roughly 2 microseconds.
- `switchinglatency=10`: This models switches with a minimum port-to-port latency of 10 cycles.
- `netbandwidth=200`: This sets the bandwidth of the NICs to 200 Gbit/s. Currently you can set any integer value less than this without making hardware modifications.
- `defaulthwconfig=firesim-quadcore-nic-12-11c4mb-ddr3`: This tells the manager to use a quad-core Rocket Chip configuration with 512 KB of L2, 4 MB of L3 (LLC) and 16 GB of DDR3, with a NIC, for each of the simulated nodes in the topology.

You'll see other parameters here, like `runinstancemarket`, `spotinterruptionbehavior`, and `spotmaxprice`. If you're an experienced AWS user, you can see what these do by looking at the [Manager Configuration Files](#) section. Otherwise, don't change them.

As in the single-node tutorial, we will leave the last section (`[workload]`) unchanged here, since we do want to run the buildroot-based Linux on our simulated system. The `terminateoncompletion` feature is an advanced feature that you can learn more about in the [Manager Configuration Files](#) section.

As a final sanity check, your `config_runtime.ini` file should now look like this:

```
# RUNTIME configuration for the FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for documentation,
↳ of all of these params.

[runfarm]
runfarmtag=mainrunfarm

f1_16xlarges=1
m4_16xlarges=0
f1_4xlarges=0
f1_2xlarges=0

runinstancemarket=ondemand
spotinterruptionbehavior=terminate
spotmaxprice=ondemand

[targetconfig]
topology=example_8config
no_net_num_nodes=2
linklatency=6405
switchinglatency=10
netbandwidth=200
profileinterval=-1
```

(continues on next page)

(continued from previous page)

```
# This references a section from config_hwconfigs.ini
# In homogeneous configurations, use this to set the hardware config deployed
# for all simulators
defaulthwconfig=firesim-quadcore-nic-l2-11c4mb-ddr3

[tracing]
enable=no
startcycle=0
endcycle=-1

[workload]
workloadname=linux-uniform.json
terminateoncompletion=no
```

Attention: [Advanced users] **Simulating BOOM instead of Rocket Chip:** If you would like to simulate a single-core **BOOM** as a target, set `defaulthwconfig` to `fireboom-singlecore-nic-l2-11c4mb-ddr3`.

3.2.4 Launching a Simulation!

Now that we've told the manager everything it needs to know in order to run our single-node simulation, let's actually launch an instance and run it!

Starting the Run Farm

First, we will tell the manager to launch our Run Farm, as we specified above. When you do this, you will start getting charged for the running EC2 instances (in addition to your manager).

To do launch your run farm, run:

```
firesim launchrunfarm
```

You should expect output like the following:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↪ launchrunfarm
FireSim Manager. Docs: http://docs.firesim
Running: launchrunfarm

Waiting for instance boots: f1.16xlarges
i-09e5491cce4d5f92d booted!
Waiting for instance boots: f1.4xlarges
Waiting for instance boots: m4.16xlarges
Waiting for instance boots: f1.2xlarges
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--06-05-53-launchrunfarm-
↪ ZGVP753DSU1Y9Q6R.log
```

The output will rapidly progress to `Waiting for instance boots: f1.16xlarges` and then take a minute or two while your `f1.16xlarge` instance launches. Once the launches complete, you should see the instance id printed and the instance will also be visible in your AWS EC2 Management console. The manager will tag

the instances launched with this operation with the value you specified above as the `runfarmtag` parameter from the `config_runtime.ini` file, which we left set as `mainrunfarm`. This value allows the manager to tell multiple Run Farms apart – i.e., you can have multiple independent Run Farms running different workloads/hardware configurations in parallel. This is detailed in the *Manager Configuration Files* and the *firesim launchrunfarm* sections – you do not need to be familiar with it here.

Setting up the simulation infrastructure

The manager will also take care of building and deploying all software components necessary to run your simulation (including switches for the networked case). The manager will also handle flashing FPGAs. To tell the manager to setup our simulation infrastructure, let's run:

```
firesim infrasetup
```

For a complete run, you should expect output like the following:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↪infrasetup
FireSim Manager. Docs: http://docs.firesim.im
Running: infrasetup

Building FPGA software driver for FireSim-FireSimRocketChipQuadCoreConfig-
↪FireSimDDR3FRFCFSLLC4MBCconfig
Building switch model binary for switch switch0
[172.30.2.178] Executing task 'instance_liveness'
[172.30.2.178] Checking if host instance is up...
[172.30.2.178] Executing task 'infrasetup_node_wrapper'
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 0.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 1.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 2.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 3.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 4.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 5.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 6.
[172.30.2.178] Copying FPGA simulation infrastructure for slot: 7.
[172.30.2.178] Installing AWS FPGA SDK on remote nodes.
[172.30.2.178] Unloading XDMA/EDMA/XOCL Driver Kernel Module.
[172.30.2.178] Copying AWS FPGA XDMA driver to remote node.
[172.30.2.178] Loading XDMA Driver Kernel Module.
[172.30.2.178] Clearing FPGA Slot 0.
[172.30.2.178] Clearing FPGA Slot 1.
[172.30.2.178] Clearing FPGA Slot 2.
[172.30.2.178] Clearing FPGA Slot 3.
[172.30.2.178] Clearing FPGA Slot 4.
[172.30.2.178] Clearing FPGA Slot 5.
[172.30.2.178] Clearing FPGA Slot 6.
[172.30.2.178] Clearing FPGA Slot 7.
[172.30.2.178] Flashing FPGA Slot: 0 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 1 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 2 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 3 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 4 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 5 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 6 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Flashing FPGA Slot: 7 with agfi: agfi-09e85ffabe3543903.
[172.30.2.178] Unloading XDMA/EDMA/XOCL Driver Kernel Module.
```

(continues on next page)

(continued from previous page)

```
[172.30.2.178] Loading XDMA Driver Kernel Module.
[172.30.2.178] Copying switch simulation infrastructure for switch slot: 0.
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--06-07-33-infrasetup-2Z7EBCBIF2TSI66Q.
↪log
```

Many of these tasks will take several minutes, especially on a clean copy of the repo (in particular, `f1.16xlarge` usually take a couple of minutes to start, so don't be alarmed if you're stuck at `Checking if host instance is up...`). The console output here contains the "user-friendly" version of the output. If you want to see detailed progress as it happens, `tail -f` the latest logfile in `firesim/deploy/logs/`.

At this point, the `f1.16xlarge` instance in our Run Farm has all the infrastructure necessary to run everything in our simulation.

So, let's launch our simulation!

Running a simulation!

Finally, let's run our simulation! To do so, run:

```
firesim runworkload
```

This command boots up the 8-port switch simulation and then starts 8 Rocket Chip FPGA Simulations, then prints out the live status of the simulated nodes and switch every 10s. When you do this, you will initially see output like:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↪runworkload
FireSim Manager. Docs: http://docs.firesim.im
Running: runworkload

Creating the directory: /home/centos/firesim-new/deploy/results-workload/2018-05-19--
↪06-28-43-linux-uniform/
[172.30.2.178] Executing task 'instance_liveness'
[172.30.2.178] Checking if host instance is up...
[172.30.2.178] Executing task 'boot_switch_wrapper'
[172.30.2.178] Starting switch simulation for switch slot: 0.
[172.30.2.178] Executing task 'boot_simulation_wrapper'
[172.30.2.178] Starting FPGA simulation for slot: 0.
[172.30.2.178] Starting FPGA simulation for slot: 1.
[172.30.2.178] Starting FPGA simulation for slot: 2.
[172.30.2.178] Starting FPGA simulation for slot: 3.
[172.30.2.178] Starting FPGA simulation for slot: 4.
[172.30.2.178] Starting FPGA simulation for slot: 5.
[172.30.2.178] Starting FPGA simulation for slot: 6.
[172.30.2.178] Starting FPGA simulation for slot: 7.
[172.30.2.178] Executing task 'monitor_jobs_wrapper'
```

If you don't look quickly, you might miss it, because it will be replaced with a live status page once simulations are kicked-off:

```
FireSim Simulation Status @ 2018-05-19 06:28:56.087472
-----
This workload's output is located in:
/home/centos/firesim-new/deploy/results-workload/2018-05-19--06-28-43-linux-uniform/
This run's log is located in:
/home/centos/firesim-new/deploy/logs/2018-05-19--06-28-43-runworkload-
↪ZHZEJED9MDWNscv7.log
```

(continues on next page)

(continued from previous page)

```

This status will update every 10s.
-----
Instances
-----
Instance IP:   172.30.2.178 | Terminated: False
-----
Simulated Switches
-----
Instance IP:   172.30.2.178 | Switch name: switch0 | Switch running: True
-----
Simulated Nodes/Jobs
-----
Instance IP:   172.30.2.178 | Job: linux-uniform1 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform0 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform3 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform2 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform5 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform4 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform7 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform6 | Sim running: True
-----
Summary
-----
1/1 instances are still running.
8/8 simulations are still running.
-----

```

In cycle-accurate networked mode, this will only exit when any ONE of the simulated nodes shuts down. So, let's let it run and open another ssh connection to the manager instance. From there, `cd` into your `firesim` directory again and source `source srcmgr-f1-manager.sh` again to get our ssh key setup. To access our simulated system, ssh into the IP address being printed by the status page, **from your manager instance**. In our case, from the above output, we see that our simulated system is running on the instance with IP `172.30.2.178`. So, run:

```
[RUN THIS ON YOUR MANAGER INSTANCE!]
ssh 172.30.2.178
```

This will log you into the instance running the simulation. On this machine, run `screen -ls` to get the list of all running simulation components. Attaching to the screens `fsim0` to `fsim7` will let you attach to the consoles of any of the 8 simulated nodes. You'll also notice an additional screen for the switch, however by default there is no interesting output printed here for performance reasons.

For example, if we want to enter commands into node zero, we can attach to its console like so:

```
screen -r fsim0
```

Voila! You should now see Linux booting on the simulated node and then be prompted with a Linux login prompt, like so:

```
[truncated Linux boot output]
[ 0.020000] Registered IceNet NIC 00:12:6d:00:00:02
[ 0.020000] VFS: Mounted root (ext2 filesystem) on device 254:0.
[ 0.020000] devtmpfs: mounted
[ 0.020000] Freeing unused kernel memory: 140K
[ 0.020000] This architecture does not have kernel memory protection.
mount: mounting sysfs on /sys failed: No such device
Starting logging: OK
```

(continues on next page)

(continued from previous page)

```
Starting mdev...
mdev: /sys/dev: No such file or directory
modprobe: can't change directory to '/lib/modules': No such file or directory
Initializing random number generator... done.
Starting network: OK
Starting dropbear sshd: OK

Welcome to Buildroot
buildroot login:
```

If you also ran the single-node no-nic simulation you'll notice a difference in this boot output – here, Linux sees the NIC and its assigned MAC address and automatically brings up the `eth0` interface at boot.

Now, you can login to the system! The username is `root` and the password is `firesim`. At this point, you should be presented with a regular console, where you can type commands into the simulation and run programs. For example:

```
Welcome to Buildroot
buildroot login: root
Password:
# uname -a
Linux buildroot 4.15.0-rc6-31580-g9c3074b5c2cd #1 SMP Thu May 17 22:28:35 UTC 2018_
↪riscv64 GNU/Linux
#
```

At this point, you can run workloads as you'd like. To finish off this tutorial, let's poweroff the simulated system and see what the manager does. To do so, in the console of the simulated system, run `poweroff -f`:

```
Welcome to Buildroot
buildroot login: root
Password:
# uname -a
Linux buildroot 4.15.0-rc6-31580-g9c3074b5c2cd #1 SMP Thu May 17 22:28:35 UTC 2018_
↪riscv64 GNU/Linux
# poweroff -f
```

You should see output like the following from the simulation console:

```
# poweroff -f
[ 3.748000] reboot: Power down
Power off
time elapsed: 360.5 s, simulation speed = 37.82 MHz
*** PASSED *** after 13634406804 cycles
Runs 13634406804 cycles
[PASS] FireSim Test
SEED: 1526711978
Script done, file is uartlog

[screen is terminating]
```

You'll also notice that the manager polling loop exited! You'll see output like this from the manager:

```
-----
Instances
-----
Instance IP: 172.30.2.178 | Terminated: False
-----
Simulated Switches
```

(continues on next page)

(continued from previous page)

```

-----
Instance IP:   172.30.2.178 | Switch name: switch0 | Switch running: True
-----
Simulated Nodes/Jobs
-----
Instance IP:   172.30.2.178 | Job: linux-uniform1 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform0 | Sim running: False
Instance IP:   172.30.2.178 | Job: linux-uniform3 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform2 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform5 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform4 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform7 | Sim running: True
Instance IP:   172.30.2.178 | Job: linux-uniform6 | Sim running: True
-----
Summary
-----
1/1 instances are still running.
7/8 simulations are still running.
-----
Teardown required, manually tearing down...
[172.30.2.178] Executing task 'kill_switch_wrapper'
[172.30.2.178] Killing switch simulation for switchslot:0.
[172.30.2.178] Executing task 'kill_simulation_wrapper'
[172.30.2.178] Killing FPGA simulation for slot: 0.
[172.30.2.178] Killing FPGA simulation for slot: 1.
[172.30.2.178] Killing FPGA simulation for slot: 2.
[172.30.2.178] Killing FPGA simulation for slot: 3.
[172.30.2.178] Killing FPGA simulation for slot: 4.
[172.30.2.178] Killing FPGA simulation for slot: 5.
[172.30.2.178] Killing FPGA simulation for slot: 6.
[172.30.2.178] Killing FPGA simulation for slot: 7.
[172.30.2.178] Executing task 'screens'
Confirming exit...
[172.30.2.178] Executing task 'monitor_jobs_wrapper'
[172.30.2.178] Slot 0 completed! copying results.
[172.30.2.178] Slot 1 completed! copying results.
[172.30.2.178] Slot 2 completed! copying results.
[172.30.2.178] Slot 3 completed! copying results.
[172.30.2.178] Slot 4 completed! copying results.
[172.30.2.178] Slot 5 completed! copying results.
[172.30.2.178] Slot 6 completed! copying results.
[172.30.2.178] Slot 7 completed! copying results.
[172.30.2.178] Killing switch simulation for switchslot: 0.
FireSim Simulation Exited Successfully. See results in:
/home/centos/firesim-new/deploy/results-workload/2018-05-19--06-39-35-linux-uniform/
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--06-39-35-runworkload-
↪4CDB78E3A4IA9IYQ.log

```

In the cluster case, you'll notice that shutting down ONE simulator causes the whole simulation to be torn down – this is because we currently do not implement any kind of “disconnect” mechanism to remove one node from a globally-cycle-accurate simulation.

If you take a look at the workload output directory given in the manager output (in this case, `/home/centos/firesim-new/deploy/results-workload/2018-05-19--06-39-35-linux-uniform/`), you'll see the following:

```

centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy/results-
↳ workload/2018-05-19--06-39-35-linux-uniform$ ls -la */*
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform0/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform0/os-release
-rw-rw-r-- 1 centos centos 7476 May 19 06:45 linux-uniform0/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform1/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform1/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform1/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform2/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform2/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform2/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform3/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform3/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform3/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform4/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform4/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform4/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform5/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform5/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform5/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform6/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform6/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform6/uartlog
-rw-rw-r-- 1 centos centos 797 May 19 06:45 linux-uniform7/memory_stats.csv
-rw-rw-r-- 1 centos centos 125 May 19 06:45 linux-uniform7/os-release
-rw-rw-r-- 1 centos centos 8157 May 19 06:45 linux-uniform7/uartlog
-rw-rw-r-- 1 centos centos 153 May 19 06:45 switch0/switchlog

```

What are these files? They are specified to the manager in a configuration file (`firesim/deploy/workloads/linux-uniform.json`) as files that we want automatically copied back to our manager after we run a simulation, which is useful for running benchmarks automatically. Note that there is a directory for each simulated node and each simulated switch in the cluster. The *Defining Custom Workloads* section describes this process in detail.

For now, let's wrap-up our tutorial by terminating the `f1.16xlarge` instance that we launched. To do so, run:

```
firesim terminaterunfarm
```

Which should present you with the following:

```

centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy$ firesim_
↳ terminaterunfarm
FireSim Manager. Docs: http://docs.firesim.im
Running: terminaterunfarm

IMPORTANT!: This will terminate the following instances:
f1.16xlarges
['i-09e5491cce4d5f92d']
f1.4xlarges
[]
m4.16xlarges
[]
f1.2xlarges
[]
Type yes, then press enter, to continue. Otherwise, the operation will be cancelled.

```

You must type `yes` then hit enter here to have your instances terminated. Once you do so, you will see:

```
[ truncated output from above ]
Type yes, then press enter, to continue. Otherwise, the operation will be cancelled.
yes
Instances terminated. Please confirm in your AWS Management Console.
The full log of this run is:
/home/centos/firesim-new/deploy/logs/2018-05-19--06-50-37-terminaterunfarm-
↪3VF0Z2KCAKKDY0ZU.log
```

At this point, you should always confirm in your AWS management console that the instance is in the shutting-down or terminated states. You are ultimately responsible for ensuring that your instances are terminated appropriately.

Congratulations on running a cluster FireSim simulation! At this point, you can check-out some of the advanced features of FireSim in the sidebar to the left. Or, hit next to continue to a tutorial that shows you how to build your own custom FPGA images.

Building Your Own Hardware Designs (FireSim FPGA Images)

This section will guide you through building an AFI image for a FireSim simulation.

4.1 Amazon S3 Setup

During the build process, the build system will need to upload a tar file to Amazon S3 in order to complete the build process using Amazon's backend scripts (which convert the Vivado-generated tar into an AFI). The manager will create this bucket for you automatically, you just need to specify a name.

So, choose a bucket name, e.g. `firesim-yourname`. Bucket names must be globally unique. If you choose one that's already taken, the manager will notice and complain when you tell it to build an AFI. To set your bucket name, open `deploy/config_build.ini` in your editor and under the `[afibuild]` header, replace

```
s3bucketname=firesim-yournamehere
```

with your own bucket name, e.g.:

```
s3bucketname=firesim-sagar
```

4.2 Build Recipes

In the `deploy/config_build.ini` file, you will notice that the `[builds]` section currently contains several lines, which indicates to the build system that you want to run all of these builds in parallel, with the parameters listed in the relevant section of the `deploy/config_build_recipes.ini` file. Here you can set parameters of the simulated system, and also select the type of instance on which the Vivado build will be deployed. From our experimentation, there are diminishing returns using anything above a `c5.4xlarge`, so we default to that.

To start out, let's build a simple design, `firesim-singlecore-no-nic-lbp`. This is a design that has one core, no nic, and uses the latency-bandwidth pipe memory model. To do so, comment out all of the other build entries in `deploy/config_build.ini`, besides the one we want.. So, you should end up with something like this (a line beginning with a `#` is a comment):

```
[builds]
# this section references builds defined in config_build_recipes.ini
# if you add a build here, it will be built when you run buildafi
#firesim-singlecore-nic-lbp
firesim-singlecore-no-nic-lbp
#firesim-quadcore-nic-lbp
#firesim-quadcore-no-nic-lbp
#firesim-quadcore-nic-12-11c4mb-ddr3
#firesim-quadcore-no-nic-12-11c4mb-ddr3
```

4.3 Running a Build

Now, we can run a build like so:

```
firesim buildafi
```

This will run through the entire build process, taking the Chisel RTL and producing an AGFI/AGFI that runs on the FPGA. This whole process will usually take a few hours. When the build completes, you will see a directory in `deploy/results-build/`, named after your build parameter settings, that contains AGFI information (the `AGFI_INFO` file) and all of the outputs of the Vivado build process (in the `cl_firesim` subdirectory). Additionally, the manager will print out a path to a log file that describes everything that happened, in-detail, during this run (this is a good file to send us if you encounter problems). If you provided the manager with your email address, you will also receive an email upon build completion, that should look something like this:

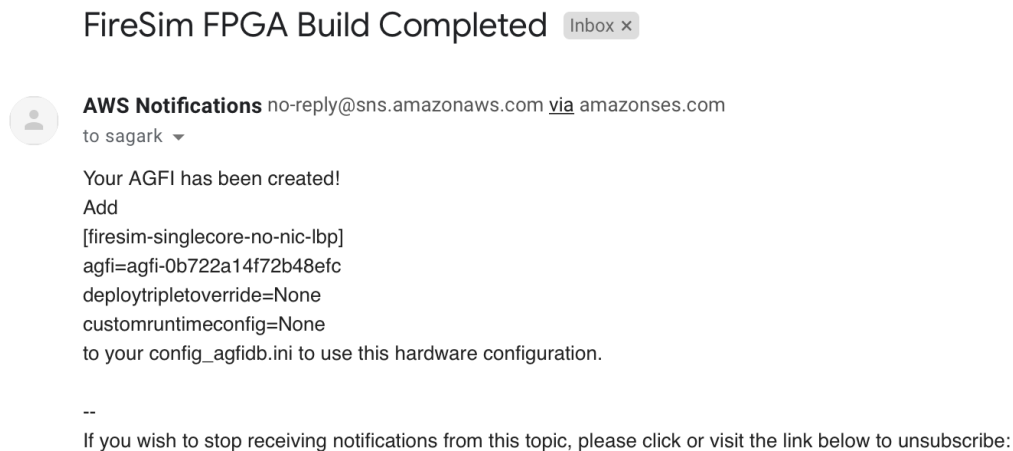


Fig. 1: Build Completion Email

Now that you know how to generate your own FPGA image, you can modify the target-design to add your own features, then build a FireSim-compatible FPGA image automatically! To learn more advanced FireSim features, you can choose a link under the “Advanced Docs” section to the left.

Manager Usage (the `firesim` command)

5.1 Overview

When you source `source me-fl-manager.sh` in your copy of the `firesim` repo, you get access to a new command, `firesim`, which is the FireSim simulation manager. If you've used tools like Vagrant or Docker, the `firesim` program is to FireSim what `vagrant` and `docker` are to Vagrant and Docker respectively. In essence, `firesim` lets us manage the entire lifecycle of FPGA simulations, just like `vagrant` and `docker` do for VMs and containers respectively.

5.1.1 “Inputs” to the Manager

The manager gets configuration information from several places:

- Command Line Arguments, consisting of:
 - Paths to configuration files to use
 - A task to run
 - Arguments to the task
- Configuration Files
- Environment Variables
- Topology definitions for networked simulations (`user_topology.py`)

The following sections detail these inputs. Hit Next to continue.

5.1.2 Logging

The manager produces detailed logs when you run any command, which is useful to share with the FireSim developers for debugging purposes in case you encounter issues. The logs contain more detailed output than the manager sends to `stdout/stderr` during normal operation, so it's also useful if you want to take a peek at the detailed commands manager is running to facilitate builds and simulations. Logs are stored in `firesim/deploy/logs/`.

5.2 Manager Command Line Arguments

The manager provides built-in help output for the command line arguments it supports if you run `firesim --help`

```
usage: firesim [-h] [-c RUNTIMECONFIGFILE] [-b BUILDCONFIGFILE]
              [-r BUILDRECIPESCONFIGFILE] [-a HWDBCONFIGFILE]
              [-x OVERRIDECONFIGDATA] [-f TERMINATESOMEF116]
              [-g TERMINATESOMEF12] [-i TERMINATESOMEF14]
              [-m TERMINATESOMEM416] [-q]

              {managerinit,builder,launchrunfarm,infrasetup,boot,kill,
↪terminaterunfarm,runworkload,shareagfi,runcheck}

FireSim Simulation Manager.

positional arguments:
  {managerinit,builder,launchrunfarm,infrasetup,boot,kill,terminaterunfarm,
↪runworkload,shareagfi,runcheck}
                        Management task to run.

optional arguments:
  -h, --help            show this help message and exit
  -c RUNTIMECONFIGFILE, --runtimeconfigfile RUNTIMECONFIGFILE
                        Optional custom runtime/workload config file. Defaults
                        to config_runtime.ini.
  -b BUILDCONFIGFILE, --buildconfigfile BUILDCONFIGFILE
                        Optional custom build config file. Defaults to
                        config_build.ini.
  -r BUILDRECIPESCONFIGFILE, --buildrecipesconfigfile BUILDRECIPESCONFIGFILE
                        Optional custom build recipe config file. Defaults to
                        config_build_recipes.ini.
  -a HWDBCONFIGFILE, --hwdbconfigfile HWDBCONFIGFILE
                        Optional custom HW database config file. Defaults to
                        config_hwdb.ini.
  -x OVERRIDECONFIGDATA, --overrideconfigdata OVERRIDECONFIGDATA
                        Override a single value from one of the the RUNTIME
                        e.g.: --overrideconfigdata "targetconfig linklatency
                        6405".
  -f TERMINATESOMEF116, --terminatesomef116 TERMINATESOMEF116
                        Only used by terminatessome. Terminates this many of
                        the previously launched f1.16xlarges.
  -g TERMINATESOMEF12, --terminatesomef12 TERMINATESOMEF12
                        Only used by terminatessome. Terminates this many of
                        the previously launched f1.2xlarges.
  -i TERMINATESOMEF14, --terminatesomef14 TERMINATESOMEF14
                        Only used by terminatessome. Terminates this many of
                        the previously launched f1.4xlarges.
  -m TERMINATESOMEM416, --terminatesomem416 TERMINATESOMEM416
                        Only used by terminatessome. Terminates this many of
                        the previously launched m4.16xlarges.
  -q, --forceterminate For terminaterunfarm, force termination without
                        prompting user for confirmation. Defaults to False
```

On this page, we will go through some of these options – others are more complicated, so we will give them their own section on the following pages.

5.2.1 `--runtimeconfigfile` FILENAME

This lets you specify a custom runtime config file. By default, `config_runtime.ini` is used. See `FIRESIM_RUNFARM_PREFIX` for what this config file does.

5.2.2 `--buildconfigfile` FILENAME

This lets you specify a custom build config file. By default, `config_build.ini` is used. See `config_build.ini` for what this config file does.

5.2.3 `--buildrecipesconfigfile` FILENAME

This lets you specify a custom build **recipes** config file. By default, `config_build_recipes.ini` is used. See `config_build_recipes.ini` for what this config file does.

5.2.4 `--hwdbconfigfile` FILENAME

This lets you specify a custom hardware database config file. By default, `config_hwdb.ini` is used. See `config_hwdb.ini` for what this config file does.

5.2.5 `--overrideconfigdata` SECTION PARAMETER VALUE

This lets you override a single value from the runtime config file. For example, if you want to use a link latency of 3003 cycles for a particular run (and your `config_runtime.ini` file specifies differently), you can pass `--overrideconfigdata targetconfig linklatency 6405` to the manager. This can be used with any task that uses the runtime config.

5.2.6 TASK

This is the only required/positional command line argument to the manager. It tells the manager what it should be doing. See the next section for a list of tasks and what they do. Some tasks also take other command line arguments, which are specified with those tasks.

5.3 Manager Tasks

This page outlines all of the tasks that the FireSim manager supports.

5.3.1 `firesim managerinit`

This is a setup command that does the following:

- Run `aws configure`, prompt for credentials
- Replace the default config files (`config_runtime.ini`, `config_build.ini`, `config_build_recipes.ini`, and `config_hwdb.ini`) with clean example versions.
- Prompt the user for email address and subscribe them to notifications for their own builds.

You can re-run this whenever you want to get clean configuration files – you can just hit enter when prompted for aws configure credentials and your email address, and both will keep your previously specified values.

If you run this command by accident and didn't mean to overwrite your configuration files, you'll find backed-up versions in `firesim/deploy/sample-backup-configs/backup*`.

5.3.2 `firesim buildafi`

This command builds a FireSim AGFI (FPGA Image) from the Chisel RTL for the configurations that you specify. The process of defining configurations to build is explained in the documentation for `config_build.ini` and `config_build_recipes.ini`.

For each config, the build process entails:

1. [Locally] Run the elaboration process for your hardware configuration
2. [Locally] FAME-1 transform the design with MIDAS
3. [Locally] Attach simulation models (I/O widgets, memory model, etc.)
4. [Locally] Emit Verilog to run through the AWS FPGA Flow
5. Launch an FPGA Dev AMI build instance for each configuration you want built.
6. [Local/Remote] Prep build instances, copy generated verilog for hardware configuration to build instance.
7. [Remote] Run Vivado Synthesis and P&R for the configuration
8. [Local/Remote] Copy back all output generated by Vivado, including the final tar file
9. [Local/AWS Infra] Submit the tar file to the AWS backend for conversion to an AFI
10. [Local] Wait for the AFI to become available, then notify the user of completion by email.

This process happens in parallel for all of the builds you specify. The command will exit when all builds are completed (but you will get notified as INDIVIDUAL builds complete).

It is highly recommended that you either run this command in a “screen“ or use “mosh“ to access the build instance. Builds will not finish if the manager is killed due to disconnection to the instance.

When you run a build for a particular configuration, a directory named `LAUNCHTIME-CONFIG_TRIPLET-BUILD_NAME` is created in `firesim/deploy/results-build/`. This directory will contain:

- `AGFI_INFO`: Describes the state of the AFI being built, while the manager is running. Upon build completion, this contains the AGFI/AFI that was produced, along with its metadata.
- `cl_firesim::` This directory is essentially the Vivado project that built the FPGA image, in the state it was in when the Vivado build process completed. This contains reports, stdout from the build, and the final tar file produced by Vivado.
- `cl_firesim_generated.sv`: This is a copy of the generated verilog used to produce this build. You can also find a copy inside `cl_firesim`.

5.3.3 `firesim shareagfi`

This command allows you to share AGFIs that you have already built (that are listed in `config_hwdb.ini`) with other users. It will take the named hardware configurations that you list in the `[agfistoshare]` section of `config_build.ini`, grab the respective AGFIs for each from `config_hwdb.ini`, and share them across all F1 regions with the users listed in the `[sharewithaccounts]` section of `config_build.ini`. You can also specify `public=public` in `[sharewithaccounts]` to make the AGFIs public.

You must own the AGFIs in order to do this – this will NOT let you share AGFIs that someone else owns and gave you access to.

5.3.4 firesim launchrunfarm

This command launches a Run Farm on which you run simulations. Run Farms consist of `f1.16xlarge`, `f1.4xlarge`, `f1.2xlarge`, and `m4.16xlarge` instances. Before you run the command, you define the number of each that you want in `config_runtime.ini`.

A launched Run Farm is tagged with a `runfarmtag` from `config_runtime.ini`, which is used to disambiguate multiple parallel Run Farms; that is, you can have many Run Farms running, each running a different experiment at the same time, each with its own unique `runfarmtag`. One convenient feature to add to your AWS management panel is the column for `fsimcluster`, which contains the `runfarmtag` value. You can see how to do that in the [Add the fsimcluster column to your AWS management console](#) section.

The other options in the `[runfarm]` section, `runinstancemarket`, `spotinterruptionbehavior`, and `spotmaxprice` define *how* instances in the Run Farm are launched. See the documentation for `config_runtime.ini` for more details.

ERRATA: One current requirement is that you must define a target config in the `[targetconfig]` section of `config_runtime.ini` that does not require more resources than the Run Farm you are trying to launch. Thus, you should also setup your `[targetconfig]` parameters before trying to launch the corresponding Run Farm. This requirement will be removed in the future.

Once you setup your configuration and call `firesim launchrunfarm`, the command will launch the requested numbers and types of instances. If all succeeds, you will see the command print out instance IDs for the correct number/types of launched instances (you do not need to pay attention to these or record them). If an error occurs, it will be printed to console.

Once you run this command, your Run Farm will continue to run until you call “firesim terminaterunfarm“. This means you will be charged for the running instances in your Run Farm until you call “terminaterunfarm“. You are responsible for ensuring that instances are only running when you want them to be by checking the AWS EC2 Management Panel.

5.3.5 firesim terminaterunfarm

This command terminates some or all of the instances in the Run Farm defined in your `config_runtime.ini` file, depending on the command line arguments you supply. By default, running `firesim terminaterunfarm` will terminate ALL instances with the specified `runfarmtag`. When you run this command, it will prompt for confirmation that you want to terminate the listed instances. If you respond in the affirmative, it will move forward with the termination.

If you do not want to have to confirm the termination (e.g. you are using this command in a script), you can give the command the `--forceterminat` command line argument. For example, the following will TERMINATE ALL INSTANCES IN THE RUN FARM WITHOUT PROMPTING FOR CONFIRMATION:

```
firesim terminaterunfarm --forceterminat
```

There a few additional commandline arguments that let you terminate only some of the instances in a particular Run Farm: `--terminatesomef116 INT`, `--terminatesomef14 INT`, `--terminatesomef12 INT`, and `--terminatesomem416 INT`, which will terminate ONLY as many of each type of instance as you specify.

Here are some examples:

```
[ start with 2 f1.16xlarges, 2 f1.2xlarges, 2 m4.16xlarges ]  
firesim terminaterunfarm --terminatesomef116 1 --forceterminate  
[ now, we have: 1 f1.16xlarges, 2 f1.2xlarges, 2 m4.16xlarges ]
```

```
[ start with 2 f1.16xlarges, 2 f1.2xlarges, 2 m4.16xlarges ]  
firesim terminaterunfarm --terminatesomef116 1 --terminatesomef12 2 --forceterminate  
[ now, we have: 1 f1.16xlarges, 0 f1.2xlarges, 2 m4.16xlarges ]
```

Once you call “`lauchrunfarm`“, you will be charged for running instances in your Run Farm until you call “`terminaterunfarm`“. You are responsible for ensuring that instances are only running when you want them to be by checking the AWS EC2 Management Panel.

5.3.6 `firesim infrasetup`

Once you have launched a Run Farm and setup all of your configuration options, the `infrasetup` command will build all components necessary to run the simulation and deploy those components to the machines in the Run Farm. Here is a rough outline of what the command does:

- Constructs the internal representation of your simulation. This is a tree of components in the simulation (simulated server blades, switches)
- For each type of server blade, query the AWS AFI API to get the build-triplet needed to construct the software simulation driver, then build each driver
- For each type of switch in the simulation, generate the switch model binary
- For each host instance in the Run Farm, collect information about all the resources necessary to run a simulation on that host instance, then copy files and flash FPGAs with the required AGFIs.

Details about setting up your simulation configuration can be found in *[FIRESIM_RUNFARM_PREFIX](#)*.

Once you run a simulation, you should re-run “`firesim infrasetup`“ before starting another one, even if it is the same exact simulation on the same Run Farm.

You can see detailed output from an example run of `infrasetup` in the *[Running a Single Node Simulation](#)* and *[Running a Cluster Simulation](#)* Tutorials.

5.3.7 `firesim boot`

Once you have run `firesim infrasetup`, this command will actually start simulations. It begins by launching all switches (if they exist in your simulation config), then launches all server blade simulations. This simply launches simulations and then exits – it does not perform any monitoring.

This command is useful if you want to launch a simulation, then plan to interact with the simulation by-hand (i.e. by directly interacting with the console).

5.3.8 `firesim kill`

Given a simulation configuration and simulations running on a Run Farm, this command force-terminates all components of the simulation. Importantly, this does not allow any outstanding changes to the filesystem in the simulated systems to be committed to the disk image.

5.3.9 firesim runworkload

This command is the standard tool that lets you launch simulations, monitor the progress of workloads running on them, and collect results automatically when the workloads complete. To call this command, you must have first called `firesim infrasetup` to setup all required simulation infrastructure on the remote nodes.

This command will first create a directory in `firesim/deploy/results-workload/` named as `LAUNCH_TIME-WORKLOADNAME`, where results will be completed as simulations complete. This command will then automatically call `firesim boot` to start simulations. Then, it polls all the instances in the Run Farm every 10 seconds to determine the state of the simulated system. If it notices that a simulation has shutdown (i.e. the simulation disappears from the output of `screen -ls`), it will automatically copy back all results from the simulation, as defined in the workload configuration (see the *Defining Custom Workloads* section).

For non-networked simulations, it will wait for ALL simulations to complete (copying back results as each workload completes), then exit.

For globally-cycle-accurate networked simulations, the global simulation will stop when any single node powers off. Thus, for these simulations, `runworkload` will copy back results from all nodes and force them to terminate by calling `kill` when ANY SINGLE ONE of them shuts down cleanly.

A simulation shuts down cleanly when the workload running on the simulator calls `poweroff`.

5.3.10 firesim runcheck

This command is provided to let you debug configuration options without launching instances. In addition to the output produced at command line/in the log, you will find a pdf diagram of the topology you specify, annotated with information about the workloads, hardware configurations, and abstract host mappings for each simulation (and optionally, switch) in your design. These diagrams are located in `firesim/deploy/generated-topology-diagrams/`, named after your topology.

Here is an example of such a diagram (click to expand/zoom):



Fig. 1: Example diagram for an 8-node cluster with one ToR switch

5.4 Manager Configuration Files

This page contains a centralized reference for all of the configuration options in `config_runtime.ini`, `config_build.ini`, `config_build_recipes.ini`, and `config_hwdb.ini`.

5.4.1 config_runtime.ini

Here is a sample of this configuration file:

```
# RUNTIME configuration for the FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for documentation,
# of all of these params.

[runfarm]
```

(continues on next page)

```
runfarmtag=mainrunfarm

f1_16xlarges=1
m4_16xlarges=0
f1_4xlarges=0
f1_2xlarges=0

runinstancemarket=ondemand
spotinterruptionbehavior=terminate
spotmaxprice=ondemand

[targetconfig]
topology=example_8config
no_net_num_nodes=2
linklatency=6405
switchinglatency=10
netbandwidth=200
profileinterval=-1

# This references a section from config_hwconfigs.ini
# In homogeneous configurations, use this to set the hardware config deployed
# for all simulators
defaulthwconfig=firesim-quadcore-nic-12-11c4mb-ddr3

[tracing]
enable=no
startcycle=0
endcycle=-1

[workload]
workloadname=linux-uniform.json
terminateoncompletion=no
```

Below, we outline each section and parameter in detail.

[runfarm]

The [runfarm] options below allow you to specify the number, types, and other characteristics of instances in your FireSim Run Farm, so that the manager can automatically launch them, run workloads on them, and terminate them.

runfarmtag

Use `runfarmtag` to differentiate between different Run Farms in FireSim. Having multiple `config_runtime.ini` files with different `runfarmtag` values allows you to run many experiments at once from the same manager instance.

The instances launched by the `launchrunfarm` command will be tagged with this value. All later operations done by the manager rely on this tag, so you should not change it unless you are done with your current Run Farm.

Per AWS restrictions, this tag can be no longer than 255 characters.

`f1_16xlarges, m4_16xlarges, f1_4xlarges, f1_2xlarges`

Set these three values respectively based on the number and types of instances you need. While we could automate this setting, we choose not to, so that users are never surprised by how many instances they are running.

Note that these values are ONLY used to launch instances. After launch, the manager will query the AWS API to find the instances of each type that have the `runfarmtag` set above assigned to them.

`runinstancemarket`

You can specify either `spot` or `ondemand` here, to use one of those markets on AWS.

`spotinterruptionbehavior`

When `runinstancemarket=spot`, this value determines what happens to an instance if it receives the interruption signal from AWS. You can specify either `hibernate`, `stop`, or `terminate`.

`spotmaxprice`

When `runinstancemarket=spot`, this value determines the max price you are willing to pay per instance, in dollars. You can also set it to `ondemand` to set your max to the on-demand price for the instance.

`[targetconfig]`

The `[targetconfig]` options below allow you to specify the high-level configuration of the target you are simulating. You can change these parameters after launching a Run Farm (assuming you have the correct number of instances), but in many cases you will need to re-run the `infrasetup` command to make sure the correct simulation infrastructure is available on your instances.

`topology`

This field dictates the network topology of the simulated system. Some examples:

`no_net_config`: This runs N (see `no_net_num_nodes` below) independent simulations, without a network simulation. You can currently only use this option if you build one of the NoNIC hardware configs of FireSim.

`example_8config`: This requires a single `f1.16xlarge`, which will simulate 1 ToR switch attached to 8 simulated servers.

`example_16config`: This requires two `f1.16xlarge` instances and one `m4.16xlarge` instance, which will simulate 2 ToR switches, each attached to 8 simulated servers, with the two ToR switches connected by a root switch.

`example_64config`: This requires eight `f1.16xlarge` instances and one `m4.16xlarge` instance, which will simulate 8 ToR switches, each attached to 8 simulated servers (for a total of 64 nodes), with the eight ToR switches connected by a root switch.

Additional configurations are available in `deploy/runtools/user_topology.py` and more can be added there. See the *Manager Network Topology Definitions (`user_topology.py`)* section for more info.

`no_net_num_nodes`

This determines the number of simulated nodes when you are using `topology=no_net_config`.

`linklatency`

In a networked simulation, this allows you to specify the link latency of the simulated network in CYCLES. For example, 6405 cycles is roughly 2 microseconds at 3.2 GHz. A current limitation is that this value (in cycles) must be a multiple of 7. Furthermore, you must not exceed the buffer size specified in the NIC's simulation widget.

`switchinglatency`

In a networked simulation, this specifies the minimum port-to-port switching latency of the switch models, in CYCLES.

`netbandwidth`

In a networked simulation, this specifies the maximum output bandwidth that a NIC is allowed to produce as an integer in Gbit/s. Currently, this must be a number between 1 and 200, allowing you to model NICs between 1 and 200 Gbit/s.

`defaulthwconfig`

This sets the server configuration launched by default in the above topologies. Heterogeneous configurations can be achieved by manually specifying different names within the topology itself, but all the `example_nconfig` configurations are homogeneous and use this value for all nodes.

You should set this to one of the hardware configurations you have defined already in `config_hwdb.ini`. You should set this to the NAME (section title) of the hardware configuration from `config_hwdb.ini`, NOT the actual `agfi` itself (NOT something like `agfi-XYZ...`).

`[workload]`

This section defines the software that will run on the simulated system.

`workloadname`

This selects a workload to run across the set of simulated nodes. A workload consists of a series of jobs that need to be run on simulated nodes (one job per node).

Workload definitions are located in `firesim/deploy/workloads/*.json`.

Some sample workloads:

`linux-uniform.json`: This runs the default FireSim Linux distro on as many nodes as you specify when setting the `[targetconfig]` parameters.

`spec17-intrate.json`: This runs SPECint 2017's rate benchmarks. In this type of workload, you should launch EXACTLY the correct number of nodes necessary to run the benchmark. If you specify fewer nodes, the manager will warn that not all jobs were assigned to a simulation. If you specify too many simulations and not enough jobs, the manager will not launch the jobs.

Others can be found in the aforementioned directory.

terminateoncompletion

Set this to `no` if you want your Run Farm to keep running once the workload has completed. Set this to `yes` if you want your Run Farm to be TERMINATED after the workload has completed and results have been copied off.

5.4.2 config_build.ini

Here is a sample of this configuration file:

```
# BUILDTIME/AGFI management configuration for the FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for documentation,
↳ of all of these params.

[afibuild]

s3bucketname=firesim-AWSUSERNAME
buildinstancemarket=ondemand
spotinterruptionbehavior=terminate
spotmaxprice=ondemand
postbuildhook=

[builds]
# this section references builds defined in config_build_recipes.ini
# if you add a build here, it will be built when you run buildafi
# Legacy recipe without an L2
firesim-quadcore-nic-11c4mb-ddr3
firesim-singlecore-no-nic-l2-lbp
#firesim-singlecore-nic-l2-lbp
#firesim-quadcore-no-nic-l2-lbp
#firesim-quadcore-nic-l2-lbp
firesim-quadcore-no-nic-l2-11c4mb-ddr3
firesim-quadcore-nic-l2-11c4mb-ddr3
#fireboom-singlecore-no-nic-l2-lbp
fireboom-singlecore-no-nic-l2-11c4mb-ddr3
#fireboom-singlecore-nic-l2-lbp
fireboom-singlecore-nic-l2-11c4mb-ddr3
#firesim-supernode-singlecore-nic-11c4mb-ddr3
#firesim-supernode-quadcore-nic-11c4mb-ddr3
firesim-supernode-singlecore-nic-lbp
fireboom-singlecore-no-nic-l2-11c4mb-ddr3-ramopts
# for MICRO 2019 tutorial. May be removed in the future.
firesim-singlecore-sha3-nic-l2-11c4mb-ddr3
firesim-singlecore-sha3-no-nic-l2-11c4mb-ddr3
firesim-singlecore-sha3-nic-l2-11c4mb-ddr3-print
firesim-singlecore-sha3-no-nic-l2-11c4mb-ddr3-print
#fireboom-dualcore-no-nic-l2-11c4mb-ddr3
#fireboom-dualcore-nic-l2-11c4mb-ddr3
firerocketboom-1rx1b-no-nic-l2-ddr3-11c4mb

[agfistoshare]
# Legacy recipe without an L2
firesim-quadcore-nic-11c4mb-ddr3
firesim-singlecore-no-nic-l2-lbp
```

(continues on next page)

```
#firesim-singlecore-nic-l2-lbp
#firesim-quadcore-no-nic-l2-lbp
#firesim-quadcore-nic-l2-lbp
firesim-quadcore-no-nic-l2-11c4mb-ddr3
firesim-quadcore-nic-l2-11c4mb-ddr3
#fireboom-singlecore-no-nic-l2-lbp
fireboom-singlecore-no-nic-l2-11c4mb-ddr3
#fireboom-singlecore-nic-l2-lbp
fireboom-singlecore-nic-l2-11c4mb-ddr3
#firesim-supernode-singlecore-nic-11c4mb-ddr3
#firesim-supernode-quadcore-nic-11c4mb-ddr3
firesim-supernode-singlecore-nic-lbp
fireboom-singlecore-no-nic-l2-11c4mb-ddr3-ramopts
# for MICRO 2019 tutorial. May be removed in the future.
firesim-singlecore-sha3-nic-l2-11c4mb-ddr3
firesim-singlecore-sha3-no-nic-l2-11c4mb-ddr3
firesim-singlecore-sha3-nic-l2-11c4mb-ddr3-print
firesim-singlecore-sha3-no-nic-l2-11c4mb-ddr3-print
#fireboom-dualcore-no-nic-l2-11c4mb-ddr3
#fireboom-dualcore-nic-l2-11c4mb-ddr3
firerocketboom-1rx1b-no-nic-l2-ddr3-11c4mb

[sharewithaccounts]
somebodysname=123456789012
```

Below, we outline each section and parameter in detail.

[afibuild]

This exposes options for AWS resources used in the process of building FireSim AGFIs (FPGA Images).

s3bucketname

This is used behind the scenes in the AGFI creation process. You will only ever need to access this bucket manually if there is a failure in AGFI creation in Amazon's backend.

Naming rules: this must be all lowercase and you should stick to letters and numbers.

The first time you try to run a build, the FireSim manager will try to create the bucket you name here. If the name is unavailable, it will complain and you will need to change this name. Once you choose a working name, you should never need to change it.

In general, `firesim-yournamehere` is a good choice.

buildinstancemarket

You can specify either `spot` or `ondemand` here, to use one of those markets on AWS.

spotinterruptionbehavior

When `buildinstancemarket=spot`, this value determines what happens to an instance if it receives the interruption signal from AWS. You can specify either `hibernate`, `stop`, or `terminate`.

spotmaxprice

When `buildinstancemarket=spot`, this value determines the max price you are willing to pay per instance, in dollars. You can also set it to `ondemand` to set your max to the on-demand price for the instance.

[builds]

In this section, you can list as many build entries as you want to run for a particular call to the `buildafi` command (see `config_build_recipes.ini` below for how to define a build entry). For example, if we want to run the builds named `[awesome-firesim-config]` and `[quad-core-awesome-firesim-config]`, we would write:

```
[builds]
awesome-firesim-config
quad-core-awesome-firesim-config
```

[agfistoshare]

This is used by the `shareagfi` command to share the specified agfis with the users specified in the next (`[sharewithaccounts]`) section. In this section, you should specify the section title (i.e. the name you made up) for a hardware configuration in `config_hwdb.ini`. For example, to share the hardware config:

```
[firesim-quadcore-nic-12-11c4mb-ddr3]
# this is a comment that describes my favorite configuration!
agfi=agfi-0a6449b5894e96e53
deploytripletoverride=None
customruntimeconfig=None
```

you would use:

```
[agfistoshare]
firesim-quadcore-nic-12-11c4mb-ddr3
```

[sharewithaccounts]

A list of AWS account IDs that you want to share the AGFIs listed in `[agfistoshare]` with when calling the manager's `shareagfi` command. You should specify names in the form `username=AWSACCTID`. The left-hand-side is just for human readability, only the actual account IDs listed here matter. If you specify `public=public` here, the AGFIs are shared publicly, regardless of any other entries that are present.

5.4.3 config_build_recipes.ini

Here is a sample of this configuration file:

```
# Build-time design configuration for the FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for documentation,
# of all of these params.

# this file contains sections that describe hardware designs that /can/ be built.
# edit config_build.ini to actually "turn on" a config to be built when you run
# buildafi
```

(continues on next page)

(continued from previous page)

```

# Single-core, Rocket-based recipes

[firesim-singlecore-nic-l2-lbp]
DESIGN=FireSim
TARGET_CONFIG=L2SingleBank512K_FireSimRocketChipSingleCoreConfig
PLATFORM_CONFIG=BaseF1Config
instancetype=c5.4xlarge
deploytriplet=None

[firesim-singlecore-no-nic-l2-lbp]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_FireSimRocketChipSingleCoreConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-singlecore-nic-lbp]
DESIGN=FireSim
TARGET_CONFIG=FireSimRocketChipSingleCoreConfig
PLATFORM_CONFIG=BaseF1Config
instancetype=c5.4xlarge
deploytriplet=None

[firesim-singlecore-no-nic-lbp]
DESIGN=FireSimNoNIC
TARGET_CONFIG=FireSimRocketChipSingleCoreConfig
PLATFORM_CONFIG=BaseF1Config_F130MHz
instancetype=c5.4xlarge
deploytriplet=None

#[firesim-quadcore-nic-lbp]
#DESIGN=FireSim
#TARGET_CONFIG=FireSimRocketChipQuadCoreConfig
#PLATFORM_CONFIG=BaseF1Config
#instancetype=c5.4xlarge
#deploytriplet=None
#
#[firesim-quadcore-no-nic-lbp]
#DESIGN=FireSimNoNIC
#TARGET_CONFIG=FireSimRocketChipQuadCoreConfig
#PLATFORM_CONFIG=BaseF1Config
#instancetype=c5.4xlarge
#deploytriplet=None

# Quad-core, Rocket-based recipes

[firesim-quadcore-nic-l2-11c4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F90MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-quadcore-no-nic-l2-11c4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimRocketChipQuadCoreConfig

```

(continues on next page)

(continued from previous page)

```
PLATFORM_CONFIG=BaseF1Config_F90MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-quadcore-nic-11c4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F90MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-quadcore-no-nic-11c4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F90MHz
instancetype=c5.4xlarge
deploytriplet=None

# Single-core, BOOM-based targets
[fireboom-singlecore-no-nic-l2-lbp]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_FireSimBoomConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-singlecore-no-nic-l2-11c4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-singlecore-nic-l2-11c4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomConfig
PLATFORM_CONFIG=BaseF1Config_F50MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-singlecore-no-nic-lbp]
DESIGN=FireSimNoNIC
TARGET_CONFIG=FireSimBoomConfig
PLATFORM_CONFIG=BaseF1Config
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-singlecore-no-nic-11c4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimBoomConfig
PLATFORM_CONFIG=BaseF1Config_F80MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-singlecore-nic-11c4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimBoomConfig
```

(continues on next page)

```
PLATFORM_CONFIG=BaseF1Config_F80MHz
instancetype=c5.4xlarge
deploytriplet=None

# Dual-core, BOOM-based targets
[fireboom-dualcore-no-nic-l2-lbp]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_FireSimBoomDualCoreConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-dualcore-no-nic-l2-llc4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomDualCoreConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-dualcore-nic-l2-llc4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomDualCoreConfig
PLATFORM_CONFIG=BaseF1Config_F50MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-dualcore-no-nic-lbp]
DESIGN=FireSimNoNIC
TARGET_CONFIG=FireSimBoomDualCoreConfig
PLATFORM_CONFIG=BaseF1Config
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-dualcore-no-nic-llc4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimBoomDualCoreConfig
PLATFORM_CONFIG=BaseF1Config_F80MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-dualcore-nic-llc4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimBoomDualCoreConfig
PLATFORM_CONFIG=BaseF1Config_F80MHz
instancetype=c5.4xlarge
deploytriplet=None

# Quad-core, BOOM-based targets
[fireboom-quadcore-nic-l2-llc4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F50MHz
instancetype=c5.4xlarge
deploytriplet=None

# As above, with Golden Gate multi-ported RAM optimizations
[fireboom-quadcore-nic-l2-llc4mb-ddr3-ramopt]
```

(continues on next page)

(continued from previous page)

```

DESIGN=FireSim
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F50MHz_MCRams
instancetype=c5.4xlarge
deploytriplet=None

# Supernode configurations -- multiple instances of an SoC in a single simulator
[firesim-supernode-singlecore-nic-lbp]
DESIGN=FireSimSupernode
TARGET_CONFIG=SupernodeFireSimRocketChipConfig
PLATFORM_CONFIG=BaseF1Config_F85MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-supernode-quadcore-nic-lbp]
DESIGN=FireSimSupernode
TARGET_CONFIG=SupernodeFireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-supernode-singlecore-nic-1lc4mb-ddr3]
DESIGN=FireSimSupernode
TARGET_CONFIG=DDR3FRFCFSLLC4MB_SupernodeFireSimRocketChipConfig
PLATFORM_CONFIG=BaseF1Config_F90MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-supernode-quadcore-nic-1lc4mb-ddr3]
DESIGN=FireSimSupernode
TARGET_CONFIG=DDR3FRFCFSLLC4MB_SupernodeFireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

# MIDAS Examples -- BUILD SUPPORT ONLY; Can't launch driver correctly on runfarm
[midasexamples-gcd]
TARGET_PROJECT=midasexamples
DESIGN=GCD
TARGET_CONFIG=NoConfig
PLATFORM_CONFIG=DefaultF1Config
instancetype=c5.4xlarge
deploytriplet=None

# Golden Gate Multi-Cycle RAM Optimization Demo Recipes
# RAM Optimizations enabled by adding _MCRams PLATFORM_CONFIG string
[firesim-quadcore-no-nic-l2-1lc4mb-ddr3-ramopts]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=BaseF1Config_MCRams_F90MHz
instancetype=c5.4xlarge
deploytriplet=None

[fireboom-singlecore-no-nic-l2-1lc4mb-ddr3-ramopts]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimBoomConfig
PLATFORM_CONFIG=BaseF1Config_MCRams_F90MHz

```

(continues on next page)

```

instancetype=c5.4xlarge
deploytriplet=None

# ADDITIONAL MICRO DEMO RECIPES

# SHA-3 Demo Recipes
[firesim-singlecore-sha3-nic-l2-1lc4mb-ddr3]
DESIGN=FireSim
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipSha3L2Config
PLATFORM_CONFIG=BaseF1Config_F120MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-singlecore-sha3-no-nic-l2-1lc4mb-ddr3]
DESIGN=FireSimNoNIC
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipSha3L2Config
PLATFORM_CONFIG=BaseF1Config_F120MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-singlecore-sha3-nic-l2-1lc4mb-ddr3-print]
DESIGN=FireSim
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipSha3L2PrintfConfig
PLATFORM_CONFIG=WithPrintfSynthesis_BaseF1Config_F120MHz
instancetype=c5.4xlarge
deploytriplet=None

[firesim-singlecore-sha3-no-nic-l2-1lc4mb-ddr3-print]
DESIGN=FireSimNoNIC
TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipSha3L2PrintfConfig
PLATFORM_CONFIG=WithPrintfSynthesis_BaseF1Config_F120MHz
instancetype=c5.4xlarge
deploytriplet=None

[firerocketboom-1rx1b-no-nic-l2-ddr3-1lc4mb]
DESIGN=FireSimNoNIC
TARGET_CONFIG=L2SingleBank512K_DDR3FRFCFSLLC4MB_FireSimRocketBoomConfig
PLATFORM_CONFIG=BaseF1Config_F75MHz
instancetype=c5.4xlarge
deploytriplet=None

```

Below, we outline each section and parameter in detail.

Build definition sections, e.g. [awesome-firesim-config]

In this file, you can specify as many build definition sections as you want, each with a header like [awesome-firesim-config] (i.e. a nice, short name you made up). Such a section must contain the following fields:

DESIGN

This specifies the basic target design that will be built. Unless you are defining a custom system, this should either be `FireSim`, for systems with a NIC, or `FireSimNoNIC`, for systems without a NIC. These are defined in `firesim/src/main/scala/firesim/Targets.scala`. We describe this in greater detail in [Generating Different](#)

Targets).

TARGET_CONFIG

This specifies the hardware configuration of the target being simulated. Some examples include `FireSimRocketChipConfig` and `FireSimRocketChipQuadCoreConfig`. These are defined in `firesim/sim/src/main/scala/firesim/TargetConfigs.scala`. We describe this in greater detail in *Generating Different Targets*.

PLATFORM_CONFIG

This specifies hardware parameters of the simulation environment - for example, selecting between a Latency-Bandwidth Pipe or DDR3 memory models. These are defined in `firesim/sim/src/main/scala/firesim/SimConfigs.scala`. We specify the host FPGA frequency in the `PLATFORM_CONFIG` by appending a frequency Config with an underscore (ex. `BaseF1Config_F160MHz`). We describe this in greater detail in *Generating Different Targets*.

instancetype

This defines the type of instance that the build will run on. Generally, running on a `c5.4xlarge` is sufficient. In our experience, using more powerful instances than this provides little gain.

deploytriplet

This allows you to override the `deploytriplet` stored with the AGFI. Otherwise, the `DESIGN/TARGET_CONFIG/PLATFORM_CONFIG` you specify above will be used. See the AGFI Tagging section for more details. Most likely, you should leave this set to `None`. This is usually only used if you have proprietary RTL that you bake into an FPGA image, but don't want to share with users of the simulator.

TARGET_PROJECT (Optional)

This specifies the target project in which the target is defined (this is described in greater detail [here](#)). If `TARGET_PROJECT` is undefined the manager will default to `firesim`. Setting `TARGET_PROJECT` is required for building the MIDAS examples (`TARGET_PROJECT=midasexamples`) with the manager, or for building a user-provided target project.

5.4.4 config_hwdb.ini

Here is a sample of this configuration file:

```
# Hardware config database for FireSim Simulation Manager
# See docs/Advanced-Usage/Manager/Manager-Configuration-Files.rst for
↳documentation of all of these params.

# Hardware configs represent a combination of an agfi, a deploytriplet,
↳override
# (if needed), and a custom runtime config (if needed)

# The AGFIs provided below are public and available to all users.
```

```
# Only AGFIs for the latest release of FireSim are guaranteed to be available.  
# If you are using an older version of FireSim, you will need to generate your  
# own images.
```

```
[fireboom-singlecore-nic-l2-11c4mb-ddr3]  
agfi=agfi-034446a72078958bf  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[fireboom-singlecore-no-nic-l2-11c4mb-ddr3]  
agfi=agfi-06b58ae1ea302ace3  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[fireboom-singlecore-no-nic-l2-11c4mb-ddr3-ramopts]  
agfi=agfi-0a06502cc7c58b625  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firerocketboom-1rx1b-no-nic-l2-ddr3-11c4mb]  
agfi=agfi-0cc77cc4cf98bd869  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-quadcore-nic-l2-11c4mb-ddr3]  
agfi=agfi-0df8a925e514efb6a  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-quadcore-no-nic-l2-11c4mb-ddr3]  
agfi=agfi-0a8470ccd41803f9d  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-quadcore-nic-11c4mb-ddr3]  
agfi=agfi-0dae3e34749496fe0  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-singlecore-sha3-nic-l2-11c4mb-ddr3]  
agfi=agfi-0b3b731fbbc3534cf  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-singlecore-sha3-nic-l2-11c4mb-ddr3-print]  
agfi=agfi-02cb8a85c9dc309ec  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-singlecore-sha3-no-nic-l2-11c4mb-ddr3]  
agfi=agfi-0b22b8732efd763df  
deploytripletoverride=None  
customruntimeconfig=None
```

```
[firesim-singlecore-sha3-no-nic-l2-llc4mb-ddr3-print]
agfi=agfi-0120c872049eac274
deploytripletoverride=None
customruntimeconfig=None
```

```
[firesim-supernode-singlecore-nic-lbp]
agfi=agfi-0ef33fc78be7fe4e7
deploytripletoverride=None
customruntimeconfig=None
```

This file tracks hardware configurations that you can deploy as simulated nodes in FireSim. Each such configuration contains a name for easy reference in higher-level configurations, defined in the section header, an agfi, which represents the FPGA image, a custom runtime config, if one is needed, and a deploy triplet override if one is necessary.

When you build a new AGFI, you should put the default version of it in this file so that it can be referenced from your other configuration files.

The following is an example section from this file - you can add as many of these as necessary:

```
[firesim-quadcore-nic-l2-llc4mb-ddr3]
# this is a comment that describes my favorite configuration!
agfi=agfi-0a6449b5894e96e53
deploytripletoverride=None
customruntimeconfig=None
```

[NAME_GOES_HERE]

In this example, `firesim-quadcore-nic-l2-llc4mb-ddr3` is the name that will be used to reference this hardware design in other configuration locations. The following items describe this hardware configuration:

agfi

This represents the AGFI (FPGA Image) used by this hardware configuration.

deploytripletoverride

This is an advanced feature - under normal conditions, you should leave this set to `None`, so that the manager uses the configuration triplet that is automatically stored with the AGFI at build time. Advanced users can set this to a different value to build and use a different driver when deploying simulations. Since the driver depends on logic now hardwired into the FPGA bitstream, drivers cannot generally be changed without requiring FPGA recompilation.

customruntimeconfig

This is an advanced feature - under normal conditions, you can use the default parameters generated automatically by the simulator by setting this field to `None`. If you want to customize runtime parameters for certain parts of the simulation (e.g. the DRAM model's runtime parameters), you can place a custom config file in `sim/custom-runtime-configs/`. Then, set this field to the relative name of the config. For example, `sim/custom-runtime-configs/GREATCONFIG.conf` becomes `customruntimeconfig=GREATCONFIG.conf`.

Add more hardware config sections, like [NAME_GOES_HERE_2]

You can add as many of these entries to `config_hwdb.ini` as you want, following the format discussed above (i.e. you provide `agfi`, `deploytripletoverride`, or `customruntimeconfig`).

5.5 Manager Environment Variables

This page contains a centralized reference for the environment variables used by the manager.

5.5.1 FIRESIM_RUNFARM_PREFIX

This environment variable is used to prefix all Run Farm tags with some prefix. This is useful for separating run farms between multiple copies of FireSim.

This is set in `sourceceme-fl-manager.sh`, so you can change it and commit it (e.g. if you're maintaining a branch for special runs). It can be unset or set to the empty string.

5.6 Manager Network Topology Definitions (`user_topology.py`)

Custom network topologies are specified as Python snippets that construct a tree. You can see examples of these in `firesim/deploy/runtools/user_topology.py`, shown below. Better documentation of this API will be available once it stabilizes.

Fundamentally, you create a list of roots, which consists of switch or server nodes, then construct a tree by adding downlinks to these roots. Since links are bi-directional, adding a downlink from node A to node B implicitly adds an uplink from B to A.

You can add additional topology generation methods here, then use them in `config_runtime.ini`.

5.6.1 `user_topology.py` contents:

```
""" Define your additional topologies here. The FireSimTopology class inherits
from UserTopologies and thus can instantiate your topology. """

from runtools.firesim_topology_elements import *

class UserTopologies(object):
    """ A class that just separates out user-defined/configurable topologies
    from the rest of the boilerplate in FireSimTopology() """

    def clos_m_n_r(self, m, n, r):
        """ DO NOT USE THIS DIRECTLY, USE ONE OF THE INSTANTIATIONS BELOW. """
        """ Clos topol where:
        m = number of root switches
        n = number of links to nodes on leaf switches
        r = number of leaf switches

        and each leaf switch has a link to each root switch.

        With the default mapping specified below, you will need:
```

(continues on next page)

(continued from previous page)

```

m m4.16xlarges.
n fl.16xlarges.

TODO: improve this later to pack leaf switches with <= 4 downlinks onto
one 16x.large.
"""

rootswitches = [FireSimSwitchNode() for x in range(m)]
self.roots = rootswitches
leafswitches = [FireSimSwitchNode() for x in range(r)]
servers = [[FireSimServerNode() for x in range(n)] for y in range(r)]
for rswitch in rootswitches:
    rswitch.add_downlinks(leafswitches)

for leafswitch, servergroup in zip(leafswitches, servers):
    leafswitch.add_downlinks(servergroup)

def custom_mapper(fsim_topol_with_passes):
    for i, rswitch in enumerate(rootswitches):
        fsim_topol_with_passes.run_farm.m4_16s[i].add_switch(rswitch)

        for j, lswitch in enumerate(leafswitches):
            fsim_topol_with_passes.run_farm.fl_16s[j].add_switch(lswitch)
            for sim in servers[j]:
                fsim_topol_with_passes.run_farm.fl_16s[j].add_simulation(sim)

self.custom_mapper = custom_mapper

def clos_2_8_2(self):
    """ clos topol with:
    2 roots
    8 nodes/leaf
    2 leaves. """
    self.clos_m_n_r(2, 8, 2)

def clos_8_8_16(self):
    """ clos topol with:
    8 roots
    8 nodes/leaf
    16 leaves. = 128 nodes. """
    self.clos_m_n_r(8, 8, 16)

def fat_tree_4ary(self):
    # 4-ary fat tree as described in
    # http://ccr.sigcomm.org/online/files/p63-alfares.pdf
    coreswitches = [FireSimSwitchNode() for x in range(4)]
    self.roots = coreswitches
    agrswitches = [FireSimSwitchNode() for x in range(8)]
    edgeswitches = [FireSimSwitchNode() for x in range(8)]
    servers = [FireSimServerNode() for x in range(16)]
    for switchno in range(len(coreswitches)):
        core = coreswitches[switchno]
        base = 0 if switchno < 2 else 1
        dls = range(base, 8, 2)
        dls = map(lambda x: agrswitches[x], dls)
        core.add_downlinks(dls)
    for switchbaseno in range(0, len(agrswitches), 2):

```

(continues on next page)

```

switchno = switchbaseno + 0
aggr = aggrswitches[switchno]
aggr.add_downlinks([edgeswitches[switchno], edgeswitches[switchno+1]])
switchno = switchbaseno + 1
aggr = aggrswitches[switchno]
aggr.add_downlinks([edgeswitches[switchno-1], edgeswitches[switchno]])
for edgeno in range(len(edgeswitches)):
    edgeswitches[edgeno].add_downlinks([servers[edgeno*2], ↵
↵servers[edgeno*2+1]])

def custom_mapper(fsim_topol_with_passes):
    """ In a custom mapper, you have access to the firesim topology with ↵
↵passes,
    where you can access the run_farm nodes:

    fsim_topol_with_passes.run_farm.{f1_16s, f1_2s, m4_16s}

    To map, call add_switch or add_simulation on run farm instance
    objs in the aforementioned arrays.

    Because of the scope of this fn, you also have access to whatever
    stuff you created in the topology itself, which we expect will be
    useful for performing the mapping."""

    # map the fat tree onto one m4.16xlarge (for core switches)
    # and two f1.16xlarges (two pods of aggr/edge/4sims per f1.16xlarge)
    for core in coreswitches:
        fsim_topol_with_passes.run_farm.m4_16s[0].add_switch(core)

    for aggrsw in aggrswitches[:4]:
        fsim_topol_with_passes.run_farm.f1_16s[0].add_switch(aggrsw)
    for aggrsw in aggrswitches[4:]:
        fsim_topol_with_passes.run_farm.f1_16s[1].add_switch(aggrsw)

    for edgesw in edgeswitches[:4]:
        fsim_topol_with_passes.run_farm.f1_16s[0].add_switch(edgesw)
    for edgesw in edgeswitches[4:]:
        fsim_topol_with_passes.run_farm.f1_16s[1].add_switch(edgesw)

    for sim in servers[:8]:
        fsim_topol_with_passes.run_farm.f1_16s[0].add_simulation(sim)
    for sim in servers[8:]:
        fsim_topol_with_passes.run_farm.f1_16s[1].add_simulation(sim)

    self.custom_mapper = custom_mapper

def example_multilink(self):
    self.roots = [FireSimSwitchNode()]
    midswitch = FireSimSwitchNode()
    lowerlayer = [midswitch for x in range(16)]
    self.roots[0].add_downlinks(lowerlayer)
    servers = [FireSimServerNode()]
    midswitch.add_downlinks(servers)

def example_multilink_32(self):
    self.roots = [FireSimSwitchNode()]

```

(continues on next page)

(continued from previous page)

```

midswitch = FireSimSwitchNode()
lowerlayer = [midswitch for x in range(32)]
self.roots[0].add_downlinks(lowerlayer)
servers = [FireSimServerNode()]
midswitch.add_downlinks(servers)

def example_multilink_64(self):
    self.roots = [FireSimSwitchNode()]
    midswitch = FireSimSwitchNode()
    lowerlayer = [midswitch for x in range(64)]
    self.roots[0].add_downlinks(lowerlayer)
    servers = [FireSimServerNode()]
    midswitch.add_downlinks(servers)

def example_cross_links(self):
    self.roots = [FireSimSwitchNode() for x in range(2)]
    midswitches = [FireSimSwitchNode() for x in range(2)]
    self.roots[0].add_downlinks(midswitches)
    self.roots[1].add_downlinks(midswitches)
    servers = [FireSimServerNode() for x in range(2)]
    midswitches[0].add_downlinks([servers[0]])
    midswitches[1].add_downlinks([servers[1]])

def small_hierarchy_8sims(self):
    self.custom_mapper = 'mapping_use_one_f1_16xlarge'
    self.roots = [FireSimSwitchNode()]
    midlevel = [FireSimSwitchNode() for x in range(4)]
    servers = [[FireSimServerNode() for x in range(2)] for x in range(4)]
    self.roots[0].add_downlinks(midlevel)
    for swno in range(len(midlevel)):
        midlevel[swno].add_downlinks(servers[swno])

def small_hierarchy_2sims(self):
    self.custom_mapper = 'mapping_use_one_f1_16xlarge'
    self.roots = [FireSimSwitchNode()]
    midlevel = [FireSimSwitchNode() for x in range(1)]
    servers = [[FireSimServerNode() for x in range(2)] for x in range(1)]
    self.roots[0].add_downlinks(midlevel)
    for swno in range(len(midlevel)):
        midlevel[swno].add_downlinks(servers[swno])

def example_1config(self):
    self.roots = [FireSimSwitchNode()]
    servers = [FireSimServerNode() for y in range(1)]
    self.roots[0].add_downlinks(servers)

def example_2config(self):
    self.roots = [FireSimSwitchNode()]
    servers = [FireSimServerNode() for y in range(2)]
    self.roots[0].add_downlinks(servers)

def example_4config(self):
    self.roots = [FireSimSwitchNode()]
    servers = [FireSimServerNode() for y in range(4)]
    self.roots[0].add_downlinks(servers)

def example_8config(self):

```

(continues on next page)

(continued from previous page)

```

self.roots = [FireSimSwitchNode()]
servers = [FireSimServerNode() for y in range(8)]
self.roots[0].add_downlinks(servers)

def example_16config(self):
self.roots = [FireSimSwitchNode()]
level2switches = [FireSimSwitchNode() for x in range(2)]
servers = [[FireSimServerNode() for y in range(8)] for x in range(2)]

for root in self.roots:
    root.add_downlinks(level2switches)

for l2switchNo in range(len(level2switches)):
    level2switches[l2switchNo].add_downlinks(servers[l2switchNo])

def example_32config(self):
self.roots = [FireSimSwitchNode()]
level2switches = [FireSimSwitchNode() for x in range(4)]
servers = [[FireSimServerNode() for y in range(8)] for x in range(4)]

for root in self.roots:
    root.add_downlinks(level2switches)

for l2switchNo in range(len(level2switches)):
    level2switches[l2switchNo].add_downlinks(servers[l2switchNo])

def example_64config(self):
self.roots = [FireSimSwitchNode()]
level2switches = [FireSimSwitchNode() for x in range(8)]
servers = [[FireSimServerNode() for y in range(8)] for x in range(8)]

for root in self.roots:
    root.add_downlinks(level2switches)

for l2switchNo in range(len(level2switches)):
    level2switches[l2switchNo].add_downlinks(servers[l2switchNo])

def example_128config(self):
self.roots = [FireSimSwitchNode()]
level1switches = [FireSimSwitchNode() for x in range(2)]
level2switches = [[FireSimSwitchNode() for x in range(8)] for x in range(2)]
servers = [[[FireSimServerNode() for y in range(8)] for x in range(8)] for x_
↪in range(2)]

self.roots[0].add_downlinks(level1switches)

for switchno in range(len(level1switches)):
    level1switches[switchno].add_downlinks(level2switches[switchno])

for switchgroupno in range(len(level2switches)):
    for switchno in range(len(level2switches[switchgroupno])):
        level2switches[switchgroupno][switchno].add_
↪downlinks(servers[switchgroupno][switchno])

def example_256config(self):
self.roots = [FireSimSwitchNode()]
level1switches = [FireSimSwitchNode() for x in range(4)]

```

(continues on next page)

(continued from previous page)

```

level2switches = [[FireSimSwitchNode() for x in range(8)] for x in range(4)]
servers = [[[FireSimServerNode() for y in range(8)] for x in range(8)] for x_
↳in range(4)]

self.roots[0].add_downlinks(level1switches)

for switchno in range(len(level1switches)):
    level1switches[switchno].add_downlinks(level2switches[switchno])

for switchgroupno in range(len(level2switches)):
    for switchno in range(len(level2switches[switchgroupno])):
        level2switches[switchgroupno][switchno].add_
↳downlinks(servers[switchgroupno][switchno])

@staticmethod
def supernode_flatten(arr):
    res = []
    for x in arr:
        res = res + x
    return res

def supernode_example_6config(self):
    self.roots = [FireSimSwitchNode()]
    servers = [FireSimSuperNodeServerNode()] + [FireSimDummyServerNode() for x in_
↳range(5)]
    self.roots[0].add_downlinks(servers)

def supernode_example_4config(self):
    self.roots = [FireSimSwitchNode()]
    servers = [FireSimSuperNodeServerNode()] + [FireSimDummyServerNode() for x in_
↳range(3)]
    self.roots[0].add_downlinks(servers)
def supernode_example_8config(self):
    self.roots = [FireSimSwitchNode()]
    servers = UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),_
↳FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↳in range(2)])
    self.roots[0].add_downlinks(servers)
def supernode_example_16config(self):
    self.roots = [FireSimSwitchNode()]
    servers = UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),_
↳FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↳in range(4)])
    self.roots[0].add_downlinks(servers)
def supernode_example_32config(self):
    self.roots = [FireSimSwitchNode()]
    servers = UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),_
↳FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↳in range(8)])
    self.roots[0].add_downlinks(servers)

def supernode_example_64config(self):
    self.roots = [FireSimSwitchNode()]
    level2switches = [FireSimSwitchNode() for x in range(2)]
    servers = [UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),_
↳FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↳in range(8)]) for x in range(2)]

```

(continues on next page)

(continued from previous page)

```

    for root in self.roots:
        root.add_downlinks(level2switches)
    for l2switchNo in range(len(level2switches)):
        level2switches[l2switchNo].add_downlinks(servers[l2switchNo])

    def supernode_example_128config(self):
        self.roots = [FireSimSwitchNode()]
        level2switches = [FireSimSwitchNode() for x in range(4)]
        servers = [UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),
↪FireSimDummyServerNode(), FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↪in range(8)]) for x in range(4)]
        for root in self.roots:
            root.add_downlinks(level2switches)
        for l2switchNo in range(len(level2switches)):
            level2switches[l2switchNo].add_downlinks(servers[l2switchNo])

    def supernode_example_256config(self):
        self.roots = [FireSimSwitchNode()]
        level2switches = [FireSimSwitchNode() for x in range(8)]
        servers = [UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),
↪FireSimDummyServerNode(), FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↪in range(8)]) for x in range(8)]
        for root in self.roots:
            root.add_downlinks(level2switches)
        for l2switchNo in range(len(level2switches)):
            level2switches[l2switchNo].add_downlinks(servers[l2switchNo])

    def supernode_example_512config(self):
        self.roots = [FireSimSwitchNode()]
        level1switches = [FireSimSwitchNode() for x in range(2)]
        level2switches = [[FireSimSwitchNode() for x in range(8)] for x in range(2)]
        servers = [[UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),
↪FireSimDummyServerNode(), FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↪in range(8)]) for x in range(8)] for x in range(2)]
        self.roots[0].add_downlinks(level1switches)
        for switchno in range(len(level1switches)):
            level1switches[switchno].add_downlinks(level2switches[switchno])
        for switchgroupno in range(len(level2switches)):
            for switchno in range(len(level2switches[switchgroupno])):
                level2switches[switchgroupno][switchno].add_
↪downlinks(servers[switchgroupno][switchno])

    def supernode_example_1024config(self):
        self.roots = [FireSimSwitchNode()]
        level1switches = [FireSimSwitchNode() for x in range(4)]
        level2switches = [[FireSimSwitchNode() for x in range(8)] for x in range(4)]
        servers = [[UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),
↪FireSimDummyServerNode(), FireSimDummyServerNode(), FireSimDummyServerNode()] for y_
↪in range(8)]) for x in range(8)] for x in range(4)]
        self.roots[0].add_downlinks(level1switches)
        for switchno in range(len(level1switches)):
            level1switches[switchno].add_downlinks(level2switches[switchno])
        for switchgroupno in range(len(level2switches)):
            for switchno in range(len(level2switches[switchgroupno])):
                level2switches[switchgroupno][switchno].add_
↪downlinks(servers[switchgroupno][switchno])

```

(continues on next page)

(continued from previous page)

```

def supernode_example_deep64config(self):
    self.roots = [FireSimSwitchNode()]
    level1switches = [FireSimSwitchNode() for x in range(2)]
    level2switches = [[FireSimSwitchNode() for x in range(1)] for x in range(2)]
    servers = [[UserTopologies.supernode_flatten([[FireSimSuperNodeServerNode(),
↳FireSimDummyServerNode(), FireSimDummyServerNode(), FireSimDummyServerNode()] for y
↳in range(8)]) for x in range(1)] for x in range(2)]
    self.roots[0].add_downlinks(level1switches)
    for switchno in range(len(level1switches)):
        level1switches[switchno].add_downlinks(level2switches[switchno])
    for switchgroupno in range(len(level2switches)):
        for switchno in range(len(level2switches[switchgroupno])):
            level2switches[switchgroupno][switchno].add_
↳downlinks(servers[switchgroupno][switchno])

def dual_example_8config(self):
    """ two separate 8-node clusters for experiments, e.g. memcached mutilate. """
    self.roots = [FireSimSwitchNode(), FireSimSwitchNode()]
    servers = [FireSimServerNode() for y in range(8)]
    servers2 = [FireSimServerNode() for y in range(8)]
    self.roots[0].add_downlinks(servers)
    self.roots[1].add_downlinks(servers2)

def triple_example_8config(self):
    """ three separate 8-node clusters for experiments, e.g. memcached mutilate. "
↳""
    self.roots = [FireSimSwitchNode(), FireSimSwitchNode(), FireSimSwitchNode()]
    servers = [FireSimServerNode() for y in range(8)]
    servers2 = [FireSimServerNode() for y in range(8)]
    servers3 = [FireSimServerNode() for y in range(8)]
    self.roots[0].add_downlinks(servers)
    self.roots[1].add_downlinks(servers2)
    self.roots[2].add_downlinks(servers3)

def no_net_config(self):
    self.roots = [FireSimServerNode() for x in range(self.no_net_num_nodes)]

# Spins up all of the precompiled, unnetworked targets
def all_no_net_targets_config(self):
    hwdb_entries = [
        "fireboom-singlecore-no-nic-l2-11c4mb-ddr3",
        "fireboom-singlecore-no-nic-l2-11c4mb-ddr3-ramopts",
        "firesim-quadcore-no-nic-l2-11c4mb-ddr3",
        "firesim-singlecore-no-nic-lbp",
    ]
    assert len(hwdb_entries) == self.no_net_num_nodes
    self.roots = [FireSimServerNode(hwdb_entries[x]) for x in range(self.no_net_
↳num_nodes)]

# #####Used only for tutorial purposes#####
# def example_sha3hetero_2config(self):
#     self.roots= [FireSimSwitchNode()]
#     servers = [FireSimServerNode(server_hardware_config=
#         "fireboom-singlecore-nic-l2-11c4mb-ddr3"),
#         FireSimServerNode(server_hardware_config=
#             "firesim-singlecore-sha3-nic-l2-11c4mb-ddr3")]

```

(continues on next page)

```
# self.roots[0].add_downlinks(servers)
```

5.7 AGFI Metadata/Tagging

When you build an AGFI in FireSim, the AGFI description stored by AWS is populated with metadata that helps the manager decide how to deploy a simulation. The important metadata is listed below, along with how each field is set and used:

- `firesim-buildtriplet`: This always reflects the triplet combination used to BUILD the AGFI.
- `firesim-deploytriplet`: This reflects the triplet combination that is used to DEPLOY the AGFI. By default, this is the same as `firesim-buildtriplet`. In certain cases however, your users may not have access to a particular configuration, but a simpler configuration may be sufficient for building a compatible software driver (e.g. if you have proprietary RTL in your FPGA image that doesn't interface with the outside system). In this case, you can specify a custom `deploytriplet` at build time. If you do not do so, the manager will automatically set this to be the same as `firesim-buildtriplet`.
- `firesim-commit`: This is the commit hash of the version of FireSim used to build this AGFI. If the AGFI was created from a dirty copy of the FireSim repo, “-dirty” will be appended to the commit hash.

Attention: FireSim is moving to a new workload-generation tool *FireMarshal*. These instructions will be deprecated in future releases of FireSim.

This section describes workload definitions in FireSim.

6.1 Defining Custom Workloads

Workloads in FireSim consist of a series of **Jobs** that are assigned to be run on individual simulations. Currently, we require that a Workload defines either:

- A single type of job, that is run on as many simulations as specified by the user. These workloads are usually suffixed with `-uniform`, which indicates that all nodes in the workload run the same job. An example of such a workload is `firesim/deploy/workloads/linux-uniform.json`.
- Several different jobs, in which case there must be exactly as many jobs as there are running simulated nodes. An example of such a workload is `firesim/deploy/workloads/ping-latency.json`.

FireSim supports can take these workload definitions and perform two functions:

- Building workloads using `firesim/deploy/workloads/gen-benchmark-rootfs.py`
- Deploying workloads using the manager

In the following subsections, we will go through the two aforementioned example workload configurations, describing how these two functions use each part of the json file inline.

ERRATA: You will notice in the following json files the field “workloads” this should really be named “jobs” – we will fix this in a future release.

ERRATA: The following instructions assume the default buildroot-based linux distribution (br-disk). In order to customize Fedora, you should build the basic Fedora image (as described in *Running Fedora on FireSim*) and modify the image directly (or use *FireMarshal* to generate the workload). Importantly, Fedora currently does not support the “command” option for workloads.

6.1.1 Uniform Workload JSON

`firesim/deploy/workloads/linux-uniform.json` is an example of a “uniform” style workload, where each simulated node runs the same software configuration.

Let’s take a look at this file:

```
{
  "benchmark_name" : "linux-uniform",
  "common_bootbinary" : "br-base-bin",
  "common_rootfs" : "br-base.img",
  "common_outputs" : ["/etc/os-release"],
  "common_simulation_outputs" : ["uartlog", "memory_stats.csv"]
}
```

There is also a corresponding directory named after this workload/file:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy/workloads/
↳linux-uniform$ ls -la
total 4
drwxrwxr-x  2 centos centos   42 May 17 21:58 .
drwxrwxr-x 13 centos centos 4096 May 18 17:14 ..
lrwxrwxrwx  1 centos centos   41 May 17 21:58 br-base-bin -> ../../../../sw/firesim-
↳software/images/br-base-bin
lrwxrwxrwx  1 centos centos   41 May 17 21:58 br-base.img -> ../../../../sw/firesim-
↳software/images/br-base.img
```

We will elaborate on this later.

Looking at the JSON file, you’ll notice that this is a relatively simple workload definition.

In this “uniform” case, the manager will name simulations after the `benchmark_name` field, appending a number for each simulation using the workload (e.g. `linux-uniform0`, `linux-uniform1`, and so on). It is standard practice to keep `benchmark_name`, the json filename, and the above directory name the same. In this case, we have set all of them to `linux-uniform`.

Next, the `common_bootbinary` field represents the binary that the simulations in this workload are expected to boot from. The manager will copy this binary for each of the nodes in the simulation (each gets its own copy). The `common_bootbinary` path is relative to the workload’s directory, in this case `firesim/deploy/workloads/linux-uniform`. You’ll notice in the above output from `ls -la` that this is actually just a symlink to `br-base-bin` that is built by the *FireMarshal* tool.

Similarly, the `common_rootfs` field represents the disk image that the simulations in this workload are expected to boot from. The manager will copy this root filesystem image for each of the nodes in the simulation (each gets its own copy). The `common_rootfs` path is relative to the workload’s directory, in this case `firesim/deploy/workloads/linux-uniform`. You’ll notice in the above output from `ls -la` that this is actually just a symlink to `br-base.img` that is built by the *FireMarshal* tool.

The `common_outputs` field is a list of outputs that the manager will copy out of the root filesystem image AFTER a simulation completes. In this simple example, when a workload running on a simulated cluster with `firesim runworkload` completes, `/etc/os-release` will be copied out from each rootfs and placed in the job’s output directory within the workload’s output directory (See the *firesim runworkload* section). You can add multiple paths here.

The `common_simulation_outputs` field is a list of outputs that the manager will copy off of the simulation host machine AFTER a simulation completes. In this example, when a workload running on a simulated cluster with `firesim runworkload` completes, the `uartlog` (an automatically generated file that contains the full console output of the simulated system) and `memory_stats.csv` files will be copied out of the simulation’s base directory

on the host instance and placed in the job's output directory within the workload's output directory (see the *firesim runworkload* section). You can add multiple paths here.

ERRATA: "Uniform" style workloads currently do not support being automatically built – you can currently hack around this by building the rootfs as a single-node non-uniform workload, then deleting the `workloads` field of the JSON to make the manager treat it as a uniform workload. This will be fixed in a future release.

6.1.2 Non-uniform Workload JSON (explicit job per simulated node)

Now, we'll look at the `ping-latency` workload, which explicitly defines a job per simulated node.

```
{
  "common_bootbinary" : "bbl-vmlinux",
  "benchmark_name" : "ping-latency",
  "deliver_dir" : "/",
  "common_args" : [],
  "common_files" : ["bin/pinglatency.sh"],
  "common_outputs" : [],
  "common_simulation_outputs" : ["uartlog"],
  "no_post_run_hook": "",
  "workloads" : [
    {
      "name": "pinger",
      "files": [],
      "command": "pinglatency.sh && poweroff -f",
      "simulation_outputs": [],
      "outputs": []
    },
    {
      "name": "pingee",
      "files": [],
      "command": "while true; do sleep 1000; done",
      "simulation_outputs": [],
      "outputs": []
    },
    {
      "name": "idler-1",
      "files": [],
      "command": "while true; do sleep 1000; done",
      "simulation_outputs": [],
      "outputs": []
    },
    {
      "name": "idler-2",
      "files": [],
      "command": "while true; do sleep 1000; done",
      "simulation_outputs": [],
      "outputs": []
    },
    {
      "name": "idler-3",
      "files": [],
      "command": "while true; do sleep 1000; done",
      "simulation_outputs": [],
      "outputs": []
    }
  ]
}
```

(continues on next page)

(continued from previous page)

```

    "name": "idler-4",
    "files": [],
    "command": "while true; do sleep 1000; done",
    "simulation_outputs": [],
    "outputs": []
  },
  {
    "name": "idler-5",
    "files": [],
    "command": "while true; do sleep 1000; done",
    "simulation_outputs": [],
    "outputs": []
  },
  {
    "name": "idler-6",
    "files": [],
    "command": "while true; do sleep 1000; done",
    "simulation_outputs": [],
    "outputs": []
  }
]
}

```

Additionally, let's take a look at the state of the ping-latency directory AFTER the workload is built:

```

centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy/workloads/ping-
↳ latency$ ls -la
total 15203216
drwxrwxr-x  3 centos centos      4096 May 18 07:45 .
drwxrwxr-x 13 centos centos      4096 May 18 17:14 ..
lrwxrwxrwx  1 centos centos       41 May 17 21:58 bbl-vmlinux -> ../linux-uniform/
↳ br-base-bin
-rw-rw-r--  1 centos centos         7 May 17 21:58 .gitignore
-rw-r--r--  1 centos centos 1946009600 May 18 07:45 idler-1.ext2
-rw-r--r--  1 centos centos 1946009600 May 18 07:45 idler-2.ext2
-rw-r--r--  1 centos centos 1946009600 May 18 07:45 idler-3.ext2
-rw-r--r--  1 centos centos 1946009600 May 18 07:45 idler-4.ext2
-rw-r--r--  1 centos centos 1946009600 May 18 07:45 idler-5.ext2
-rw-r--r--  1 centos centos 1946009600 May 18 07:46 idler-6.ext2
drwxrwxr-x  3 centos centos       16 May 17 21:58 overlay
-rw-r--r--  1 centos centos 1946009600 May 18 07:44 pingee.ext2
-rw-r--r--  1 centos centos 1946009600 May 18 07:44 pinger.ext2
-rw-rw-r--  1 centos centos     2236 May 17 21:58 ping-latency-graph.py

```

First, let's identify some of these files:

- `bbl-vmlinux`: This workload just uses the default linux binary generated for the `linux-uniform` workload.
- `.gitignore`: This just ignores the generated rootfses, which we'll learn about below.
- `idler-[1-6].ext2`, `pingee.ext2`, `pinger.ext2`: These are rootfses that are generated from the json script above. We'll learn how to do this shortly.

Additionally, let's look at the `overlay` subdirectory:

```
centos@ip-172-30-2-111.us-west-2.compute.internal:~/firesim-new/deploy/workloads/ping-
↳latency/overlay$ ls -la */*
-rwxrwxr-x 1 centos centos 249 May 17 21:58 bin/pinglatency.sh
```

This is a file that's actually committed to the repo, that runs the benchmark we want to run on one of our simulated systems. We'll see how this is used soon.

Now, let's take a look at how we got here. First, let's review some of the new fields present in this JSON file:

- `common_files`: This is an array of files that will be included in ALL of the job rootfses when they're built. This is relative to a path that we'll pass to the script that generates rootfses.
- `workloads`: This time, you'll notice that we have this array, which is populated by objects that represent individual jobs. Each job has some additional fields:
 - `name`: In this case, jobs are each assigned a name manually. These names **MUST BE UNIQUE** within a particular workload.
 - `files`: Just like `common_files`, but specific to this job.
 - `command`: This is the command that will be run automatically immediately when the simulation running this job boots up. This is usually the command that starts the workload we want.
 - `simulation_outputs`: Just like `common_simulation_outputs`, but specific to this job.
 - `outputs`: Just like `common_outputs`, but specific to this job.

In this example, we specify one node that boots up and runs the `pinglatency.sh` benchmark, then powers off cleanly and 7 nodes that just idle waiting to be pinged.

Given this JSON description, our existing `pinglatency.sh` script in the `overlay` directory, and the base rootfses generated in `firesim-software`, the following command will automatically generate all of the rootfses that you see in the `ping-latency` directory.

```
[ from the workloads/ directory ]
python gen-benchmark-rootfs.py -w ping-latency.json -r -b ../../sw/firesim-software/
↳images/br-base.img -s ping-latency/overlay
```

Notice that we tell this script where the json file lives, where the base rootfs image is, and where we expect to find files that we want to include in the generated disk images. This script will take care of the rest and we'll end up with `idler-[1-6].ext2`, `pingee.ext2`, and `pinger.ext2`!

You'll notice a Makefile in the `workloads/` directory – it contains many similar commands for all of the workloads included with FireSim.

Once you generate the rootfses for this workload, you can run it with the manager by setting `workload=ping-latency.json` in `config_runtime.ini`. The manager will automatically look for the generated rootfses (based on workload and job names that it reads from the json) and distribute work appropriately.

Just like in the uniform case, it will copy back the results that we specify in the json file. We'll end up with a directory in `firesim/deploy/results-workload/` named after the workload name, with a subdirectory named after each job in the workload, which will contain the output files we want.

6.2 SPEC 2017

SPEC2017 is supported using the `firesim-2017` branch of Speckle, which provides the tooling required to cross-compile SPEC for RISC-V. These instructions presuppose you've have a license for, and have installed SPEC on your machine either EC2 or locally. Additionally, your SPEC environment must be setup; `SPEC_DIR` must be set. If

you are building binaries on a different machine, you should be able to trivially copy Speckle's generated overlay directories to EC2.

Some notes:

- Benchmarks use reference inputs by default. `train` or `test` inputs can be used by specifying an argument in `make`: `make spec-int{rate,speed} input={test,train,ref}`
- You may need to increase the size of the RootFS in `buildroot` in `firesim/sw/firesim-software/images`.
- No support for `fp{rate,speed}` benchmarks yet.

Attention: Regarding BOOM. Users wishing to run SPEC on BOOM must change the default architecture from `-march=rv64imafdc` to `-march=rv64imafd` in Speckle's target SPEC configuration (`riscv.cfg`), as BOOM does not support compressed instructions

6.2.1 Intspeed

The `intspeed` workload definition splits the `xz` benchmark into two jobs (these are two independent inputs) to achieve better load balance across the simulations (9T dynamic instructions becomes 4T and 5T.)

To Build Binaries And RootFSes:

```
cd firesim/deploy/workloads/  
make spec17-intspeed
```

Run Resource requirements:

```
f1_16xlarges=0  
m4_16xlarges=0  
f1_2xlarges=11
```

To Run:

```
./run-workload.sh workloads/spec17-intspeed.ini --withlaunch
```

On a single-core rocket-based SoC with a DDR3 + 256 KiB LLC model, with a 160 MHz host clock, the longest benchmarks (`xz`, `mcf`) complete in about 1 day. All other benchmarks finish in under 15 hours.

6.2.2 Intrate

By default, the `intrate` workload definition spins up **four copies** of each benchmark, which may be entirely inappropriate for your target machine. This can be changed by modifying the json.

To Build Binaries and RootFSes:

```
cd firesim/deploy/workloads/  
make spec17-intrate
```

Run Resource Requirements:

```
f1_16xlarges=0  
m4_16xlarges=0  
f1_2xlarges=10
```

To Run:

```
./run-workload.sh workloads/spec17-intrate.ini --withlaunch
```

Simulation times are host and target dependent. For reference, on a four-core rocket-based SoC with a DDR3 + 1 MiB LLC model, with a 160 MHz host clock, the longest benchmarks complete in about 30 hours when running four copies.

6.3 Running Fedora on FireSim

All workload-generation related commands and code are in `firesim/sw/firesim-software`.

FireMarshal comes with a Fedora-based workload that you can use right out of the box in `workloads/fedora-base.json`. We begin by building the workload (filesystem and boot-binary):

```
./marshal build workloads/fedora-base.json
```

The first time you build a workload may take a long time (we need to download and decompress a pre-built fedora image), but subsequent builds of the same base will use cached results. Once the command completes, you should see two new files in `images/`: `fedora-base-bin` and `fedora-base.img`. These are the boot-binary (linux + boot loader) and root filesystem (respectively). We can now launch this workload in `qemu`:

```
./marshal launch workloads/fedora-base.json
```

You should now see linux booting and be presented with a login prompt. Sign in as ‘root’ with password ‘firesim’. From here you can download files, use the package manager (e.g. ‘dnf install’), and generally use the image as if it had booted on real hardware with an internet connection. Any changes you make here will be persistent between reboots. Once you are done exploring, simply shutdown the workload:

```
$ poweroff
```

It is typically not a good idea to modify the *-base workloads directly since many other workloads might inherit those changes. To make sure that we’ve cleaned out any changes, let’s clean and rebuild the workload:

```
./marshal clean workloads/fedora-base.json
./marshal build workloads/fedora-base.json
```

Note that this build took significantly less time than the first; FireMarshal caches intermediate build steps whenever possible. The final step is to run this workload on the real firesim RTL with full timing accuracy. For the basic fedora distribution, we will use the pre-made firesim config at `firesim/deploy/workloads/fedora-uniform.json`. Simply change the `workloadname` option in `firesim/deploy/config_runtime.ini` to “`fedora-uniform.json`” and then follow the standard FireSim procedure for booting a workload (e.g. [Running a Single Node Simulation](#) or [Running a Cluster Simulation](#)).

Attention: For the standard distributions we provide pre-built firesim workloads. In general, FireMarshal can derive a FireSim workload from the FireMarshal configuration using the `install` command. For more information, see the official [FireMarshal documentation](#).

6.4 ISCA 2018 Experiments

This page contains descriptions of the experiments in our [ISCA 2018 paper](#) and instructions for reproducing them on your own simulations.

One important difference between the configuration used in the ISCA 2018 paper and the open-source release of FireSim is that the ISCA paper used a proprietary L2 cache design that is not open-source. Instead, the open-source FireSim uses an LLC model that models the behavior of having an L2 cache as part of the memory model. Even with the LLC model, you should be able to see the same trends in these experiments, but exact numbers may vary.

Each section below describes the resources necessary to run the experiment. Some of these experiments require a large number of instances – you should make sure you understand the resource requirements before you run one of the scripts.

Compatibility: These were last tested with commit `4769e5d86acf6a9508d2b5a63141dc80a6ef20a6` (Oct. 2019) of FireSim. After this commit, the Linux version in FireSim has been bumped past Linux 4.15. To reproduce workloads that rely on OS behavior that has changed, like `memcached-thread-imbalance`, you must use the last tested Oct. 2019 commit.

6.4.1 Prerequisites

These guides assume that you have previously followed the single-node/cluster-scale experiment guides in the FireSim documentation. Note that these are **advanced** experiments, not introductory tutorials.

6.4.2 Building Benchmark Binaries/Rootfses

We include scripts to automatically build all of the benchmark rootfs images that will be used below. To build them, make sure you have already run `./marshal build workloads/br-base.json` in `firesim/sw/firesim-software`, then run:

```
cd firesim/deploy/workloads/  
make allpaper
```

6.4.3 Figure 5: Ping Latency vs. Configured Link Latency

Resource requirements:

```
f1_16xlarges=1  
m4_16xlarges=0  
f1_2xlarges=0
```

To Run:

```
cd firesim/deploy/workloads/  
./run-ping-latency.sh withlaunch
```

6.4.4 Figure 6: Network Bandwidth Saturation

Resource requirements:

```
f1_16xlarges=2  
m4_16xlarges=1  
f1_2xlarges=0
```

To Run:


```
cd firesim/deploy/workloads/  
./run-bw-test.sh withlaunch
```

6.4.5 Figure 7: Memcached QoS / Thread Imbalance

Resource requirements:

```
f1_16xlarges=3  
m4_16xlarges=0  
f1_2xlarges=0
```

To Run:

```
cd firesim/deploy/workloads/  
./run-memcached-thread-imbalance.sh withlaunch
```

6.4.6 Figure 8: Simulation Rate vs. Scale

Resource requirements:

```
f1_16xlarges=32  
m4_16xlarges=5  
f1_2xlarges=0
```

To Run:

```
cd firesim/deploy/workloads/  
./run-simperf-test-scale.sh withlaunch
```

A similar benchmark is also provided for supernode mode, see `run-simperf-test-scale-supernode.sh`.

6.4.7 Figure 9: Simulation Rate vs. Link Latency

Resource requirements:

```
f1_16xlarges=1  
m4_16xlarges=0  
f1_2xlarges=0
```

To Run:

```
cd firesim/deploy/workloads/  
./run-simperf-test-latency.sh withlaunch
```

A similar benchmark for supernode mode will be provided soon. See <https://github.com/firesim/firesim/issues/244>

6.4.8 Running all experiments at once

This script simply executes all of the above scripts in parallel. One caveat is that the `bw-test` script currently cannot run in parallel with the others, since it requires patching the switches. This will be resolved in a future release.

```
cd firesim/deploy/workloads/  
./run-all.sh
```

6.5 GAP Benchmark Suite

You can run the reference implementation of the GAP (Graph Algorithm Performance) Benchmark Suite. We provide scripts that cross-compile the graph kernels for RISC-V.

For more information about the benchmark itself, please refer to the site: <http://gap.cs.berkeley.edu/benchmark.html>

Some notes:

- Only the Kron input graph is currently supported.
- Benchmark uses `graph500` input graph size of 2^{20} vertices by default. `test` input size has 2^{10} vertices and can be used by specifying an argument into `make`: `make gapbs input=test`
- The reference input size with 2^{27} vertices is not currently supported.

By default, the `gapbs` workload definition runs the benchmark multithreaded with number of threads equal to the number of cores. To change the number of threads, you need to edit `firesim/deploy/workloads/runscripts/gapbs-scripts/gapbs.sh`. Additionally, the workload does not verify the output of the benchmark by default. To change this, add a `--verify` parameter to the `json`.

To Build Binaries and RootFSes:

```
cd firesim/deploy/workloads/  
make gapbs
```

Run Resource Requirements:

```
f1_16xlarges=0  
m4_16xlarges=0  
f1_2xlarges=6
```

To Run:

```
./run-workload.sh workloads/gapbs.ini --withlaunch
```

Simulation times are host and target dependent. For reference, on a four-core rocket-based SoC with a DDR3 + 1 MiB LLC model, with a 90 MHz host clock, `test` and `graph500` input sizes finish in a few minutes.

Workload generation in FireSim is handled by a tool called **FireMarshal** in `firesim/sw/firesim-software/`.

Workloads in FireMarshal consist of a series of **Jobs** that are assigned to logical nodes in the target system. If no jobs are specified, then the workload is considered `uniform` and only a single image will be produced for all nodes in the system. Workloads are described by a json file and a corresponding workload directory and can inherit their definitions from existing workloads. Typically, workload configurations are kept in `sw/firesim-software/workloads/` although you can use any directory you like. We provide a few basic workloads to start with including `buildroot` or Fedora-based linux distributions and `bare-metal`.

Once you define a workload, the `marshal` command will produce a corresponding boot-binary and rootfs for each job in the workload. This binary and rootfs can then be launched on `qemu` or `spike` (for functional simulation), or installed to `firesim` for running on real RTL.

For more information, see the official [FireMarshal documentation](#) and the quickstart guide below:

7.1 Quick Start

All workload-generation related commands and code are in `firesim/sw/firesim-software`.

FireMarshal comes with a few basic workloads that you can build right out of the box (in `workloads/`). In this example, we will build and test the `buildroot`-based linux distribution (called `br-base`).

We begin by building the workload. This will build the linux binary, the platform specific drivers (and `initramfs`), and the root filesystem:

```
./marshal build workloads/br-base.json
```

The first time you build a workload may take a long time (`buildroot` must download and cross-compile a large number of packages), but subsequent builds of the same base will use cached results. Once the command completes, you should see two new files in `images/`: `br-base-bin` and `br-base.img`. These are the boot-binary (linux, `initramfs`), and boot loader) and root filesystem (respectively). We can now launch this workload in `qemu`:

```
./marshal launch workloads/br-base.json
```

You should now see linux booting and be presented with a login prompt. Sign in as ‘root’ with password ‘firesim’. From here you can manipulate files, run commands, and generally use the image as if it had booted on real hardware. Any changes you make here will be persistent between reboots. Once you are done exploring, simply shutdown the workload:

```
$ poweroff
```

It is typically not a good idea to modify the *-base workloads directly since many other workloads might inherit those changes. To make sure that we’ve cleaned out any changes, let’s clean and rebuild the workload:

```
./marshal clean workloads/br-base.json  
./marshal build workloads/br-base.json
```

Note that this build took significantly less time than the first; FireMarshal caches intermediate build steps whenever possible. The final step is to run this workload on the real firesim RTL with full timing accuracy. To do that we must first install the workload:

```
./marshal install workloads/br-base.json
```

This command creates a firesim workload file at `firesim/deploy/workloads/br-base.json`. You can now run this workload using the standard FireSim commands (e.g. [Running a Single Node Simulation](#), just change the `workloadname` option to “br-base.json” from “linux-uniform.json”).

Attention: While the FireMarshal `install` command is the recommended way to create firesim configurations, you can still hand-create firesim workloads if needed. For example, the linux-uniform workload described in [Running a Single Node Simulation](#) is a manually created workload that uses the `br-base-bin` and `br-base.img` files directly.

FireSim generates SoC models by transforming RTL emitted by a Chisel generator, such as the Rocket SoC generator. Subject to conditions outlined in *Restrictions on Target RTL*, if it can be generated by Chisel, it can be simulated in FireSim.

8.1 Restrictions on Target RTL

Current limitations in Golden Gate place the following restrictions on the (FIR)RTL that can be transformed and thus used in FireSim:

1. The RTL must not contain multiple clock domains.
2. Black boxes must be “clock-gateable” by replacing its input clock with a gated equivalent.
3. Asynchronous reset must only be implemented using Rocket Chip’s black box async reset. These are replaced with synchronously reset registers using a FIRRTL transformation.

8.2 Provided Target Designs

8.2.1 Target Generator Organization

FireSim provides multiple *projects*, each for a different type of target. Each project has its own chisel generator that invokes Golden Gate, its own driver sources, and a makefrag that plugs into the Make-based build system that resides in `sim/`. These projects are:

1. **firesim** (Default): rocket chip-based targets. These include targets with either BOOM or rocket pipelines, and should be your starting point if you’re building an SoC with the Rocket Chip generator.
2. **midasexamples**: the [Golden Gate example designs](#), a set of simple chisel circuits like GCD, that demonstrate how to use Golden Gate. These are useful test cases for bringing up new Golden Gate features.
3. **fasedtests**: designs to do integration testing of FASED memory-system timing models.

Projects have the following directory structure:

```

sim/
├─Makefile # Top-level makefile for projects where FireSim is the top-level repo
├─Makefrag # Target-agnostic makefrag, with recipes to generate drivers and RTL
├─simulators
├─src/main/scala/{target-project}/
│   └─Makefrag # Defines target-specific make variables and recipes.
├─src/main/cc/{target-project}/
│   └─{driver-csrcs}.cc # The target's simulation driver, and software-model
├─sources
│   └─{driver-headers}.h
├─src/main/makefrag/{target-project}/
│   └─Generator.scala # Contains the main class that generates
├─target RTL and calls Golden Gate
│   └─{other-scala-sources}.scala

```

8.2.2 Specifying A Target Instance

To generate a specific instance of a target, the build system leverages four Make variables:

1. `TARGET_PROJECT`: this points the Makefile (*sim/Makefile*) at the right target-specific Makefrag, which defines the generation and MIDAS-level software-simulation recipes. The makefrag for the default target project is defined at `sim/src/main/makefrag/firesim`.
2. `DESIGN`: the name of the top-level Chisel module to generate (a Scala class name). These are defined in FireChip Chipyard generator.
3. `TARGET_CONFIG`: specifies a `Config` instance that is consumed by the target design's generator. For the default firesim target project, predefined configs are described in in the FireChip Chipyard generator.
4. `PLATFORM_CONFIG`: specifies a `Config` instance that is consumed by Golden Gate and specifies compiler-level and host-land parameters, such as whether to enable assertion synthesis, or multi-ported RAM optimizations. Common platform configs are described in `firesim-lib/sim/src/main/scala/configs/CompilerConfigs.scala`.

`TARGET_CONFIG` and `PLATFORM_CONFIG` are strings that are used to construct a `Config` instance (derives from RocketChip's parameterization system, `Config`, see [freechips.rocketchip.config](#)). These strings are of the form “`{...}_{<Class Name>}<Class Name>`”. Only the final, base class name is compulsory: class names that are prepended with “`_`” are used to create a compound `Config` instance.

```

// Specify by setting TARGET_CONFIG=Base
class Base extends Config((site, here, up) => {...})
class Override1 extends Config((site, here, up) => {...})
class Override2 extends Config((site, here, up) => {...})
// Specify by setting TARGET_CONFIG=Compound
class Compound extends Config(new Override2 ++ new Override1 ++ new Base)
// OR by setting TARGET_CONFIG=Override2_Override1_Base
// Can specify undefined classes this way. ex: TARGET_CONFIG=Override2_Base

```

With this scheme, you don't need to define a `Config` class for every instance you wish to generate. We use this scheme to specify FPGA frequencies (eg. “`BaseF1Config_F90MHz`”) in manager build recipes, but it's also very useful for doing sweeping over a parameterization space.

Note that the precedence of Configs decreases from left to right in a string. Appending a config to an existing one will only have an effect if it sets a field not already set in higher precedence Configs. For example, “`BaseF1Config_F90MHz`” is equivalent to “`BaseF1Config_F90MHz_F80MHz`” as `DesiredHostFrequency`

resolves to 90 MHz, but “F90MHz_BaseF1Config” is distinct from “F80MHz_F90MHz_BaseF1Config” in that DesiredHostFrequency resolves to 90 and 80 MHz respectively.

How a particular Config resolves its Fields can be unintuitive for complex compound Configs. One precise way to check a config is doing what you expect is to open the scala REPL, instantiate an instance of the desired Config, and inspect its fields.

```
$ make sbt # Launch into SBT's shell with extra FireSim arguments

sbt:firechip> console # Launch the REPL

scala> val inst = (new firesim.firesim.FireSimRocketChipConfig).toInstance # Make an_
↳instance

inst: freechips.rocketchip.config.Config = FireSimRocketChipConfig

scala> import freechips.rocketchip.subsystem._ # Get some important Fields

import freechips.rocketchip.subsystem.RocketTilesKey

scala> inst(RocketTilesKey).size # Query number of cores

res2: Int = 1

scala> inst(RocketTilesKey).head.dcache.get.nWays # Query L1 D$ associativity

res3: Int = 4
```

8.3 Rocket Chip Generator-based SoCs (firesim project)

Using the Make variables listed above, we give examples of generating different targets using the default Rocket Chip-based target project.

8.3.1 Rocket-based SoCs

Three design classes use Rocket scalar in-order pipelines.

Single core, Rocket pipeline (default)

```
make DESIGN=FireSim TARGET_CONFIG=FireSimRocketChipConfig
```

Single-core, Rocket pipeline, no network interface

```
make DESIGN=FireSimNoNIC TARGET_CONFIG=FireSimRocketChipConfig
```

Quad-core, Rocket pipeline

```
make DESIGN=FireSim TARGET_CONFIG=FireSimRocketChipQuadCoreConfig
```

8.3.2 BOOM-based SoCs

The BOOM (Berkeley Out-of-Order Machine) superscalar out-of-order pipelines can also be used with the same design classes that the Rocket pipelines use. Only the TARGET_CONFIG needs to be changed, as shown below:

Single-core BOOM

```
make DESIGN=FireSim TARGET_CONFIG=FireSimBoomConfig
```

Single-core BOOM, no network interface

```
make DESIGN=FireSimNoNIC TARGET_CONFIG=FireSimBoomConfig
```

8.3.3 Generating A Different FASED Memory-Timing Model Instance

Golden Gate’s memory-timing model generator, FASED, can elaborate a space of different DRAM model instances: we give some typical ones here. These targets use the Makefile-defined defaults of `DESIGN=FireSim` `PLATFORM_CONFIG=BaseF1Config`.

Quad-rank DDR3 first-ready, first-come first-served memory access scheduler

```
:: make TARGET_CONFIG=DDR3FRFCFS_FireSimRocketChipConfig
```

As above, but with a 4 MiB (maximum simulatable capacity) last-level-cache model

```
make TARGET_CONFIG=DDR3FRFCFSLLC4MB_FireSimRocketChipConfig
```

FASED *timing-model* configurations are passed to the FASED Bridges in your Target’s FIRRTL, and so must be prepended to `TARGET_CONFIG`.

8.4 Midas Examples (midasexamples project)

This project can generate a handful of toy target-designs (set with the make variable `DESIGN`). Each of these designs has their own chisel source file and serves to demonstrate the features of Golden Gate.

Some notable examples are:

1. `GCD`: the “Hello World!” of hardware.
2. `WireInterconnect`: demonstrates how combinational paths can be modeled with Golden Gate.
3. `PrintfModule`: demonstrates synthesizable printf
4. `AssertModule`: demonstrates synthesizable assertions

To generate a target, set the make variable `TARGET_PROJECT=midasexamples`. so that the right project `makefrag` is sourced.

8.4.1 Examples

To generate the `GCD` midasexample:

```
make DESIGN=GCD TARGET_PROJECT=midasexamples
```

8.5 FASED Tests (fasedtests project)

This project generates target designs capable of driving considerably more bandwidth to an AXI4-memory slave than current FireSim targets. These are used to do integration and stress testing of FASED instances.

8.5.1 Examples

Generate a synthesizable AXI4Fuzzer (based off of Rocket Chip's TL fuzzer), driving a DDR3 FR-FCFS-based FASED instance.

```
make TARGET_PROJECT=fasedtests DESIGN=AXI4Fuzzer TARGET_CONFIG=FRFCFSConfig
```

As above, now configured to drive 10 million transactions through the instance.

```
make TARGET_PROJECT=fasedtests DESIGN=AXI4Fuzzer TARGET_CONFIG=NT10e7_FRFCFSConfig
```


This section describes methods of debugging the target design and the simulation in FireSim.

9.1 Debugging & Testing with RTL Simulation

Simulation of a single FireSim node using software RTL simulators like Verilator, Synopsys VCS, or XSIM, is the most productive way to catch bugs before generating an AGFI.

FireSim provides flows to do RTL simulation at three different levels of the design/abstraction hierarchy. Ordered from least to most detailed, they are:

- **Target-Level:** This simulates just the RTL of the target-design (Rocket Chip). There are no host-level features being simulated. Supported simulators: VCS, Verilator.
- **MIDAS-Level:** This simulates the target-design after it's been transformed by MIDAS. The target- and host-clock are decoupled. FPGA-hosted simulation models are present. Abstract models for host-FPGA provided services, like DRAM, memory-mapped IO, and PCIS are used here. Supported simulators: VCS, Verilator.
- **FPGA-Level:** This is a complete simulation of the design that will be passed to the FPGA tools, including clock-domain crossings, width adapters, PLLS, FPGA-periphery blocks like DRAM and PCI-E controllers. This leverages the simulation flow provided by AWS. Supported simulators: VCS, Vivado XSIM.

Generally, MIDAS-level simulations are only slightly slower than target-level ones. Moving to FPGA-Level is very expensive. This is illustrated in the chart below.

Level	Waves	VCS	Verilator	Verilator -O1	Verilator -O2	XSIM
Target	Off	4.8 kHz	3.9 kHz	6.6 kHz	N/A	N/A
Target	On	0.8 kHz	3.0 kHz	5.1 kHz	N/A	N/A
MIDAS	Off	3.8 kHz	2.4 kHz	4.5 kHz	5.3 kHz	N/A
MIDAS	On	2.9 kHz	1.5 kHz	2.7 kHz	3.4 kHz	N/A
FPGA	On	2.3 Hz	N/A	N/A	N/A	0.56 Hz

Note that using more aggressive optimization levels when compiling the Verilated-design dramatically lengths compile time:

Level	Waves	VCS	Verilator	Verilator -O1	Verilator -O2
MIDAS	Off	35s	48s	3m32s	4m35s
MIDAS	On	35s	49s	5m27s	6m33s

Notes: Default configurations of a single-core, Rocket-based instance running rv64ui-v-add. Frequencies are given in target-Hz. Presently, the default compiler flags passed to Verilator and VCS differ from level to level. Hence, these numbers are only intended to ball park simulation speeds, not provide a scientific comparison between simulators. VCS numbers collected on Millenium, Verilator numbers collected on a c4.4xlarge. (ML verilator version: 4.002, TL verilator version: 3.904)

9.1.1 Target-Level Simulation

This is described in the documentation for [Chipyard](#).

9.1.2 MIDAS-Level Simulation

MIDAS-level simulations are run out of the `firesim/sim` directory. Currently, FireSim lacks support for MIDAS-level simulation of the NIC since `DMA_PCIS` is not yet supported. So here we'll be setting `DESIGN=FireSimNoNIC`. To compile a simulator, type:

```
[in firesim/sim]
make <verilator|vcs>
```

To compile a simulator with full-visibility waveforms, type:

```
make <verilator|vcs>-debug
```

As part of target-generation, Rocket Chip emits a make fragment with recipes for running suites of assembly tests. MIDAS puts this in `firesim/sim/generated-src/fl/<DESIGN>-<TARGET_CONFIG>-<PLATFORM_CONFIG>/firesim.d`. Make sure your `$RISCV` environment variable is set by sourcing `firesim/sourceme-fl-manager.sh` or `firesim/env.sh`, and type:

```
make run-<asm|bmark>-tests EMUL=<vcs|verilator>
```

To run only a single test, the make target is the full path to the output. Specifically:

```
make EMUL=<vcs|verilator> $PWD/output/fl/<DESIGN>-<TARGET_CONFIG>-<PLATFORM_CONFIG>/
↳<RISCV-TEST-NAME>.<vpd|out>
```

A `.vpd` target will use (and, if required, build) a simulator with waveform dumping enabled, whereas a `.out` target will use the faster waveform-less simulator.

Examples

Run all RISCv-tools assembly and benchmark tests on a verilated simulator.

```
[in firesim/sim]
make DESIGN=FireSimNoNIC
make DESIGN=FireSimNoNIC -j run-asm-tests
make DESIGN=FireSimNoNIC -j run-bmark-tests
```

Run all RISC-V tools assembly and benchmark tests on a verilated simulator with waveform dumping.

```
make DESIGN=FireSimNoNIC verilator-debug
make DESIGN=FireSimNoNIC -j run-asm-tests-debug
make DESIGN=FireSimNoNIC -j run-bmark-tests-debug
```

Run rv64ui-p-simple (a single assembly test) on a verilated simulator.

```
make DESIGN=FireSimNoNIC
make DESIGN=FireSimNoNIC $(pwd)/output/f1/FireSimNoNIC-FireSimRocketChipConfig-
↳BaseF1Config/rv64ui-p-simple.out
```

Run rv64ui-p-simple (a single assembly test) on a VCS simulator with waveform dumping.

```
make DESIGN=FireSimNoNIC vcs-debug
make DESIGN=FireSimNoNIC EMUL=vcs $(pwd)/output/f1/FireSimNoNIC-
↳FireSimRocketChipConfig-BaseF1Config/rv64ui-p-simple.vpd
```

9.1.3 FPGA-Level Simulation

There is currently no support for DMA_PCIS, so we'll restrict ourselves to instances without a NIC by setting `DESIGN=FireSimNoNIC`. As with MIDAS-level simulations, FPGA-level simulations run out of `firesim/sim`.

Since FPGA-level simulation is up to 1000x slower than MIDAS-level simulation, FPGA-level simulation should only be used in two cases:

1. MIDAS-level simulation of the simulation is working, but running the simulator on the FPGA is not.
2. You've made changes to the AWS Shell/IP/cl_firesim.sv in `aws-fpga` and want to test them.

FPGA-level simulation consists of two components:

1. A FireSim-f1 driver that talks to a simulated DUT instead of the FPGA
2. The DUT, a simulator compiled with either XSIM or VCS, that receives commands from the aforementioned FireSim-f1 driver

Usage

To run a simulation you need to make both the DUT and driver targets by typing:

```
make xsim
make xsim-dut <VCS=1> & # Launch the DUT
make run-xsim SIM_BINARY=<PATH/TO/BINARY/FOR/TARGET/TO/RUN> # Launch the driver
```

When following this process, you should wait until `make xsim-dut` prints `opening driver to xsim` before running `make run-xsim` (getting these prints from `make xsim-dut` will take a while). Additionally, you will want to use `DESIGN=FireSimNoNIC`, since the XSIM scripts included with `aws-fpga` do not support DMA PCIS.

Once both processes are running, you should see:

```
opening driver to xsim
opening xsim to driver
```

This indicates that the DUT and driver are successfully communicating. Eventually, the DUT will print a commit trace Rocket Chip. There will be a long pause (minutes, possibly an hour, depending on the size of the binary) after the first 100 instructions, as the program is being loaded into FPGA DRAM.

XSIM is used by default, and will work on EC2 instances with the FPGA developer AMI. If you have a license, setting `VCS=1` will use VCS to compile the DUT (4x faster than XSIM). Berkeley users running on the Millennium machines should be able to source `firesim/scripts/setup-vcsmx-env.sh` to setup their environment for VCS-based FPGA-level simulation.

The waveforms are dumped in the FPGA build directories(`firesim/platforms/f1/aws-fpga/hdk/cl/developer_designs/cl_<DESIGN>-<TARGET_CONFIG>-<PLATFORM_CONFIG>`).

For XSIM:

```
<BUILD_DIR>/verif/sim/vivado/test_firesim_c/tb.wdb
```

And for VCS:

```
<BUILD_DIR>/verif/sim/vcs/test_firesim_c/test_null.vpd
```

When finished, be sure to kill any lingering processes if you interrupted simulation prematurely.

9.1.4 Scala Tests

To make it easier to do RTL-simulation-based regression testing, the scala tests wrap calls to Makefiles, and run a limited set of tests on a set of selected designs, including all of the MIDAS examples and FireSimNoNIC.

The selected tests, target configurations, as well as the type of RTL simulator to compile can be modified by changing the scala tests that reside at `firesim/sim/src/test/scala/<target-project>/`.

To run all tests for a given project, with the sbt console open, do the familiar:

```
test
```

To run only tests on Rocket-Chip based targets, in the `firechip` SBT project run:

```
testOnly firesim.firesim.*
```

To run only the MIDAS examples, in the `firesim` SBT project:

```
testOnly firesim.midasexamples.*
```

9.2 Debugging Using FPGA Integrated Logic Analyzers (ILA)

Sometimes it takes too long to simulate FireSim on RTL simulators, and in some occasions we would also like to debug the simulation infrastructure itself. For these purposes, we can use the Xilinx Integrated Logic Analyzer resources on the FPGA.

ILAs allows real time sampling of pre-selected signals during FPGA runtime, and provided an interface for setting trigger and viewing samples waveforms from the FPGA. For more information about ILAs, please refer to the Xilinx guide on the topic.

MIDAS, in its `targetutils` package, provides annotations for labeling signals directly in the Chisel source. These will be consumed by a downstream FIRRTL pass which wires out the annotated signals, and binds them to an appropriately sized ILA instance.

9.2.1 Annotating Signals

In order to annotate a signal, we must import the `midas.targetutils.FpgaDebug` annotator. `FpgaDebug`'s `apply` method accepts a vararg of `chisel3.Data`. Invoke it as follows:

```
import midas.targetutils.FpgaDebug

class SomeModuleIO(implicit p: Parameters) extends SomeIO()(p) {
  val out1 = Output(Bool())
  val in1 = Input(Bool())
  FpgaDebug(out1, in1)
}
```

You can annotate signals throughout FireSim, including in MIDAS and Rocket-Chip Chisel sources, with the only exception being the Chisel3 sources themselves (eg. in `Chisel3.util.Queue`).

Note: In case the module with the annotated signal is instantiated multiple times, all instantiations of the annotated signal will be wired to the ILA.

9.2.2 Setting a ILA Depth

The ILA depth parameter specifies the duration in cycles to capture annotated signals around a trigger. Increasing this parameter may ease debugging, but will also increase FPGA resource utilization. The default depth is 1024 cycles. The desired depth can be configured much like the desired `HostFrequency` by appending a mixin to the `PLATFORM_CONFIG`. See [Provided Target Designs](#) for details on `PLATFORM_CONFIG`.

Below is an example `PLATFORM_CONFIG` that can be used in the `build_recipes` config file.

```
PLATFORM_CONFIG=BaseF1Config_ILADepth8192
```

9.2.3 Using the ILA at Runtime

Prerequisite: Make sure that ports 8443, 3121 and 10201 are enabled in the firesim AWS security group.

In order to use the ILA, we must enable the GUI interface on our manager instance. In the past, AWS had a custom `setup_gui.sh` script. However, this was recently deprecated due to compatibility issues with various packages. Therefore, AWS currently recommends using [NICE DVC](#) as a GUI client. You should [download a DVC client](#), and then run the following commands on your FireSim manager instance:

```
sudo yum -y groupinstall "GNOME Desktop"
sudo yum -y install glx-utils
sudo rpm --import https://s3-eu-west-1.amazonaws.com/nice-dcv-publish/NICE-GPG-KEY
wget https://dluj6qtbmh3dt5.cloudfront.net/2019.0/Servers/nice-dcv-2019.0-7318-e17.tgz
tar xvf nice-dcv-2019.0-7318-e17.tgz
cd nice-dcv-2019.0-7318-e17
sudo yum -y install nice-dcv-server-2019.0.7318-1.e17.x86_64.rpm
sudo yum -y install nice-xdcv-2019.0.224-1.e17.x86_64.rpm
sudo systemctl enable dcserver
sudo systemctl start dcserver
sudo passwd centos
sudo systemctl stop firewalld
dcv create-session --type virtual --user centos centos
```

These commands will setup Linux desktop pre-requisites, install the NICE DVC server, ask you to setup the password to the `centos` user, disable `firewalld`, and finally create a DVC session. You can now connect to this session through the DVC client.

After access the GUI interface, open a terminal, and open `vivado`. Follow the instructions in the [AWS-FPGA guide for connecting xilinx hardware manager on vivado \(running on a remote machine\)](#) to the debug target .

where `<hostname or IP address>` is the internal IP of the simulation instance (not the manager instance. i.e. The IP starting with 192.168.X.X). The probes file can be found in the manager instance under the path `firesim/deploy/results-build/<build_identifier>/cl_firesim/build/checkpoints/<probes_file.ltx>`

Select the ILA with the description of `WRAPPER_INST/CL/CL_FIRESIM_DEBUG_WIRING_TRANSFORM`, and you may now use the ILA just as if it was on a local FPGA.

9.3 Debugging Using TracerV

FireSim can provide a cycle-by-cycle trace of the CPU's architectural state over the course of execution. This can be useful for profiling or debugging. The tracing functionality is provided by the TracerV widget.

9.3.1 Building a Design with TracerV

In all FireChip designs TracerV is generated by default. Other targets can enable it by attaching a TracerV Bridge to the RISC-V trace port of one-or-more cores.

9.3.2 Enabling Tracing at Runtime

To improve simulation performance, FireSim does not collect data from the TracerV Bridge by default. To enable collection, modify the `tracing` section to your `config_runtime.ini`.

```
[tracing]
enable=yes
```

Now when you run a workload, a trace output file will be placed in the `sim_slot_<slot #>` directory on the F1 instance under the name `TRACEFILE`. Tracing the entirety of a long-running job like a Linux-based workload can generate a pretty large image, and you may only care about the state within a certain timeframe. Therefore, FireSim allows you to specify a start cycle and end cycle for collecting data. By default, it starts at cycle 0 and ends at the last cycle of the simulation. To change this, modify the following under the "tracing" section of your `config_runtime.ini`.

```
startcycle=XXXX
endcycle=YYYY
```

9.3.3 Interpreting the Trace Result

9.4 Assertion Synthesis

Golden Gate can synthesize assertions present in FIRRTL (implemented as `stop` statements) that would otherwise be lost in the FPGA synthesis flow. Rocket and BOOM include hundreds of such assertions which, when synthesized, can provide great insight into why the target may be failing.

9.4.1 Enabling Assertion Synthesis

To enable assertion synthesis prepend `WithSynthAsserts Config` to your `PLATFORM_CONFIG`. During compilation, Golden Gate will print the number of assertions it's synthesized. In the target's `generated-src/` directory, you'll find a `*.asserts` file with the definitions of all synthesized assertions. If assertion synthesis has been enabled, the `synthesized_assertions_t` bridge driver will be automatically instantiated.

9.4.2 Runtime Behavior

If an assertion is caught during simulation, the driver will print the assertion cause, the path to module instance in which it fired, a source locator, and the cycle on which the assertion fired. Simulation will then terminate.

An example of an assertion caught in a dual-core instance of BOOM is given below:

```
id: 1190, module: IssueSlot_4, path: FireSimNoNIC.tile_1.core.issue_units_0.slots_3]
Assertion failed
  at issue_slot.scala:214 assert (!slot_p1_poisoned)
  at cycle: 2142042185
```

9.4.3 Related Publications

Assertion synthesis was first presented in our FPL2018 paper, [DESSERT](#).

9.5 Printf Synthesis

Golden Gate can synthesize printf's present in FIRRTL (implemented as `printf` statements) that would otherwise be lost in the FPGA synthesis flow. Rocket and BOOM have printf's of their commit logs and other useful transaction streams.

```
C0:      409 [1] pc=[008000004c] W[r10=0000000000000000][1] R[r 0=0000000000000000]
↳R[r20=0000000000000003] inst=[f1402573] csrr    a0, mhartid
C0:      410 [0] pc=[008000004c] W[r 0=0000000000000000][0] R[r 0=0000000000000000]
↳R[r20=0000000000000003] inst=[f1402573] csrr    a0, mhartid
C0:      411 [0] pc=[008000004c] W[r 0=0000000000000000][0] R[r 0=0000000000000000]
↳R[r20=0000000000000003] inst=[f1402573] csrr    a0, mhartid
C0:      412 [1] pc=[0080000050] W[r 0=0000000000000000][0] R[r10=0000000000000000]
↳R[r 0=0000000000000000] inst=[00051063] bnez    a0, pc + 0
C0:      413 [1] pc=[0080000054] W[r 5=0000000080000054][1] R[r 0=0000000000000000]
↳R[r 0=0000000000000000] inst=[00000297] auipc   t0, 0x0
C0:      414 [1] pc=[0080000058] W[r 5=0000000080000064][1] R[r 5=0000000080000054]
↳R[r16=0000000000000003] inst=[01028293] addi    t0, t0, 16
C0:      415 [1] pc=[008000005c] W[r 0=000000000010000][1] R[r 5=0000000080000064]
↳R[r 5=0000000080000064] inst=[30529073] csrw    mtvec, t0
```

Synthesizing these printf's lets you capture the same logs on a running FireSim instance.

9.5.1 Enabling Printf Synthesis

To synthesize a printf, in your Chisel source you need to annotate the specific printf's you'd like to capture. Presently, due to a limitation in Chisel and FIRRTL's annotation system, you need to annotate the arguments to the printf, not the printf itself, like so:

```
printf(midas.targetutils.SynthesizePrintf("x%d p%d 0x%x\n", rf_waddr, rf_waddr, rf_
↪wdata))
```

Be judicious, as synthesizing many, frequently active printf's will slow down your simulator.

Once your printf's have been annotated, to enable printf synthesis prepend the `WithPrintfSynthesis` configuration mixin to your `PLATFORM_CONFIG` in `config_build_recipes.ini`. For example, if your previous `PLATFORM_CONFIG` was `PLATFORM_CONFIG=BaseF1Config_F120MHz`, then change it to `PLATFORM_CONFIG=WithPrintfSynthesis_BaseF1Config_F120MHz`. Notice that you must prepend the mixin (rather than appending). During compilation, Golden Gate will print the number of printf's it's synthesized. In the target's generated header (`<DESIGN>-const.h`), you'll find metadata for each of the printf's Golden Gate synthesized. This is passed as argument to the constructor of the `synthesized_prints_t` bridge driver, which will be automatically instantiated in FireSim driver.

9.5.2 Runtime Arguments

- +print-file** Specifies the file into which the synthesized printf log should be written.
- +print-start** Specifies the target-cycle at which the printf trace should be captured in the simulator. Since capturing high-bandwidth printf traces will slow down simulation, this allows the user to reach the region-of-interest at full simulation speed.
- +print-end** Specifies the target cycle at which to stop pulling the synthesized print trace from the simulator.
- +print-binary** By default, a captured printf trace will be written to file formatted as it would be emitted by a software RTL simulator. Setting this dumps the raw binary coming off the FPGA instead, improving simulation rate.
- +print-no-cycle-prefix** (Formatted output only) This removes the cycle prefix from each printf to save bandwidth in cases where the printf already includes a cycle field. In binary-output mode, since the target cycle is implicit in the token stream, this flag has no effect.

9.5.3 Related Publications

Printf synthesis was first presented in our FPL2018 paper, [DESSERT](#).

Supernode - Multiple Simulated SoCs Per FPGA

Supernode allows users to run multiple simulated SoCs per-FPGA in order to improve FPGA resource utilization and reduce cost. For example, in the case of using FireSim to simulate a datacenter scale system, supernode mode allows realistic rack topology simulation (32 simulated nodes) using a single `f1.16xlarge` instance (8 FPGAs).

Below, we outline the build and runtime configuration changes needed to utilize supernode designs. Supernode is currently only enabled for RocketChip designs with NICs. More details about supernode can be found in the [FireSim ISCA 2018 Paper](#).

10.1 Introduction

By default, supernode packs 4 identical designs into a single FPGA, and utilizes all 4 DDR channels available on each FPGA on AWS F1 instances. It currently does so by generating a wrapper top level target which encapsulates the four simulated target nodes. The packed nodes are treated as 4 separate nodes, are assigned their own individual MAC addresses, and can perform any action a single node could: run different programs, interact with each other over the network, utilize different block device images, etc. In the networked case, 4 separate network links are presented to the switch-side.

10.2 Building Supernode Designs

Here, we outline some of the changes between supernode and regular simulations that are required to build supernode designs.

The Supernode target configuration wrapper can be found in Chipyard in `chipyard/generators/firechip/src/main/scala/TargetConfigs.scala`. An example wrapper configuration is:

```
class SupernodeFireSimRocketChipConfig extends Config(new WithNumNodes(4)
++ new FireSimRocketChipConfig)
```

In this example, `SupernodeFireSimRocketChipConfig` is the wrapper, while `FireSimRocketChipConfig` is the target node configuration. To simulate a different target configuration,

we will generate a new supernode wrapper, with the new target configuration. For example, to simulate 4 quad-core nodes on one FPGA, you can use:

```
class SupernodeFireSimRocketChipQuadCoreConfig extends Config(new
  WithNumNodes(4) ++ new FireSimRocketChipQuadCoreConfig)
```

Next, when defining the build recipe, we must remember to use the supernode configuration: The `DESIGN` parameter should always be set to `FireSim`, while the `TARGET_CONFIG` parameter should be set to the wrapper configuration that was defined in `chipyard/generators/firechip/src/main/scala/TargetConfigs.scala`. The `PLATFORM_CONFIG` can be selected the same as in regular FireSim configurations. For example:

```
DESIGN=FireSim
TARGET_CONFIG=SupernodeFireSimRocketChipQuadCoreConfig
PLATFORM_CONFIG=FireSimDDR3FRFCFSLLC4MBCconfig90MHz
instancetype=c5.4xlarge
deploytriplet=None
```

We currently provide a single pre-built AGFI for supernode of 4 quad-core RocketChips with DDR3 memory models. You can build your own AGFI, using the supplied samples in `config_build_recipes.ini`. Importantly, in order to meet FPGA timing constraints, Supernode target may require lower host clock frequencies. host clock frequencies can be configured as parts of the `PLATFORM_CONFIG` in `config_build_recipes.ini`.

10.3 Running Supernode Simulations

Running FireSim in supernode mode follows the same process as in “regular” mode. Currently, the only difference is that the main simulation screen remains with the name `fsim0`, while the three other simulation screens can be accessed by attaching screen to `uartpty1`, `uartpty2`, `uartpty3` respectively. All simulation screens will generate uart logs (`uartlog1`, `uartlog2`, `uartlog3`). Notice that you must use `sudo` in order to attach to the `uartpty` or view the uart logs. The additional uart logs will not be copied back to the manager instance by default (as in a “regular” FireSim simulation). It is necessary to specify the copying of the additional uartlogs (`uartlog1`, `uartlog2`, `uartlog3`) in the workload definition.

Supernode topologies utilize a `FireSimSuperNodeServerNode` class in order to represent one of the 4 simulated target nodes which also represents a single FPGA mapping, while using a `FireSimDummyServerNode` class which represent the other three simulated target nodes which do not represent an FPGA mapping. In supernode mode, topologies should always add nodes in pairs of 4, as one `FireSimSuperNodeServerNode` and three `FireSimDummyServerNode`s.

Various example Supernode topologies are provided, ranging from 4 simulated target nodes to 1024 simulated target nodes.

Below are a couple of useful examples as templates for writing custom Supernode topologies.

A sample Supernode topology of 4 simulated target nodes which can fit on a single `f1.2xlarge` is:

```
def supernode_example_4config(self):
    self.roots = [FireSimSwitchNode()]
    servers = [FireSimSuperNodeServerNode()] + [FireSimDummyServerNode() for x in_
↪range(3)]
    self.roots[0].add_downlinks(servers)
```

A sample Supernode topology of 32 simulated target nodes which can fit on a single `f1.16xlarge` is:

```
def supernode_example_32config(self):
    self.roots = [FireSimSwitchNode()]
```

(continues on next page)

(continued from previous page)

```
servers = UserTopologies.supernode_flatten([FireSimSuperNodeServerNode(),  
↳FireSimDummyServerNode(), FireSimDummyServerNode(), FireSimDummyServerNode()] for y  
↳in range(8)])  
self.roots[0].add_downlinks(servers)
```

Supernode `config_runtime.ini` requires selecting a supernode agfi in conjunction with a defined supernode topology.

10.4 Work in Progress!

We are currently working on restructuring supernode to support a wider-variety of use cases (including non-networked cases, and increased packing of nodes). More documentation will follow. Not all FireSim features are currently available on Supernode. As a rule-of-thumb, target-related features have a higher likelihood of being supported “out-of-the-box”, while features which involve external interfaces (such as TracerV) has a lesser likelihood of being supported “out-of-the-box”

11.1 Add the `fsimcluster` column to your AWS management console

Once you've deployed a simulation once with the manager, the AWS management console will allow you to add a custom column that will allow you to see at-a-glance which FireSim run farm an instance belongs to.

To do so, click the gear in the top right of the AWS management console. From there, you should see a checkbox for `fsimcluster`. Enable it to see the column.

11.2 FPGA Dev AMI Remote Desktop Setup

To Remote Desktop into your manager instance, you must do the following:

```
curl https://s3.amazonaws.com/aws-fpga-developer-ami/1.5.0/Scripts/setup_gui.sh -o /  
->home/centos/src/scripts/setup_gui.sh  
sudo sed -i 's/enabled=0/enabled=1/g' /etc/yum.repos.d/CentOS-CR.repo  
/home/centos/src/scripts/setup_gui.sh  
# keep manager paramiko compatibility  
sudo pip2 uninstall gssapi
```

See

<https://forums.aws.amazon.com/message.jspa?messageID=848073#848073>

and

<https://forums.aws.amazon.com/ann.jspa?annID=5710>

11.3 Experimental Support for SSHing into simulated nodes and accessing the internet from within simulations

This is assuming that you are simulating a 1-node networked cluster. These instructions will let you both ssh into the simulated node and access the outside internet from within the simulated node:

1. Set your config files to simulate a 1-node networked cluster (example_1config)
2. Run `firesim launchrunfarm && firesim infrasetup` and wait for them to complete
3. `cd` to `firesim/target-design/switch/`
4. Go into the newest directory that is prefixed with `switch0-`
5. Edit the `switchconfig.h` file so that it looks like this:

```
// THIS FILE IS MACHINE GENERATED. SEE deploy/buildtools/switchmodelconfig.py

#ifdef NUMCLIENTSCONFIG
#define NUMPORTS 2
#endif
#ifdef PORTSETUPCONFIG
ports[0] = new ShmemPort(0);
ports[1] = new SSHPort(1);
#endif

#ifdef MACPORTSCONFIG
uint16_t mac2port[3] {1, 2, 0};
#endif
```

6. Run `make` then `cp switch switch0`
7. Run `scp switch0 YOUR_RUN_FARM_INSTANCE_IP:switch_slot_0/switch0`
8. On the RUN FARM INSTANCE, run:

```
sudo ip tuntap add mode tap dev tap0 user $USER
sudo ip link set tap0 up
sudo ip addr add 172.16.0.1/16 dev tap0
sudo ifconfig tap0 hw ether 8e:6b:35:04:00:00
sudo sysctl -w net.ipv6.conf.tap0.disable_ipv6=1
```

9. Run `firesim runworkload`. Confirm that the node has booted to the login prompt in the `fsim0` screen.
10. To ssh into the simulated machine, you will need to first ssh onto the Run Farm instance, then ssh into the IP address of the simulated node (172.16.0.2), username `root`, password `firesim`. You should also prefix with `TERM=linux` to get backspace to work correctly: So:

```
ssh YOUR_RUN_FARM_INSTANCE_IP
# from within the run farm instance:
TERM=linux ssh root@172.16.0.2
```

11. To also be able to access the internet from within the simulation, run the following on the RUN FARM INSTANCE:

```
sudo sysctl -w net.ipv4.ip_forward=1
export EXT_IF_TO_USE=$(ifconfig -a | sed 's/[ \t].*//;/^\(lo:\|\)\$/d' | sed 's/[ \t].
↪*//;/^\(tap0:\|\)\$/d' | sed 's://g')
sudo iptables -A FORWARD -i $EXT_IF_TO_USE -o tap0 -m state --state RELATED,
↪ESTABLISHED -j ACCEPT
```

(continues on next page)

(continued from previous page)

```
sudo iptables -A FORWARD -i tap0 -o $EXT_IF_TO_USE -j ACCEPT
sudo iptables -t nat -A POSTROUTING -o $EXT_IF_TO_USE -j MASQUERADE
```

12. Then run the following in the simulation:

```
route add default gw 172.16.0.1 eth0
echo "nameserver 8.8.8.8" >> /etc/resolv.conf
echo "nameserver 8.8.4.4" >> /etc/resolv.conf
```

At this point, you will be able to access the outside internet, e.g. `ping google.com` or `wget google.com`.

11.4 Navigating the FireSim Codebase

This is a large codebase with tons of dependencies, so navigating it can be difficult. By default, a `tags` file is generated when you run `./build-setup.sh` which aids in jumping around the codebase. This file is generated by Exuberant Ctags and many editors support using this file to jump around the codebase. You can also regenerate the `tags` file if you make code changes by running `./gen-tags.sh` in your FireSim repo.

For example, to use these tags to jump around the codebase in `vim`, add the following to your `.vimrc`:

```
set tags=tags; /
```

Then, you can move the cursor over something you want to jump to and hit `ctrl-]` to jump to the definition and `ctrl-t` to jump back out. E.g. in top-level configurations in FireSim, you can jump all the way down through the Rocket Chip codebase and even down to Chisel.

12.1 I just bumped the FireSim repository to a newer commit and simulations aren't running. What is going on?

Anytime there is an AGFI bump, FireSim simulations will break/hang due to outdated AFGI. To get the new default AGFI's you must run the manager initialization again by doing the following:

```
cd firesim
source source-me-f1-manager.sh
firesim managerinit
```

12.2 Is there a good way to keep track of what AGFI corresponds to what FireSim commit?

When building an AGFI during `firesim buildafgi`, FireSim keeps track of what FireSim repository commit was used to build the AGFI. To view a list of AGFI's that you have built and what you have access to, you can run the following command:

```
cd firesim
source source-me-f1-manager.sh
aws ec2 describe-fpga-images --fpga-image-ids # List all AGFI images
```

You can also view a specific AGFI image by giving the AGFI ID (found in `deploy/config_hwdb.ini`) through the following command:

```
cd firesim
source source-me-f1-manager.sh
aws ec2 describe-fpga-images --filter Name=fpga-image-global-id,Values=agfi-<Your ID_
↵Here> # List particular AGFI image
```

After querying an AGFI, you can find the commit hash of the FireSim repository used to build the AGFI within the “Description” field.

For more information, you can reference the AWS documentation at <https://docs.aws.amazon.com/cli/latest/reference/ec2/describe-fpga-images.html>.

Underpinning FireSim is Golden Gate (MIDAS II), a FIRRTL-based compiler and C++ library, which is used to transform Chisel-generated RTL into a deterministic FPGA-accelerated simulator.

13.1 Golden Gate vs FPGA Prototyping

Key to understanding the design of Golden Gate, is understanding that Golden Gate-generated simulators are not FPGA prototypes. Unlike in a prototype, Golden Gate-generated simulators decouple the target-design clock from the FPGA-host clock (we say it is *host-decoupled*): one cycle in the target machine is simulated over a one-or-more FPGA clock cycles. In contrast, a conventional FPGA-prototype “emulates” the SoC by implementing the target directly in FPGA logic, with each FPGA-clock edge executing a clock edge of the SoC.

13.2 Why Use Golden Gate & FireSim

The host decoupling by Golden Gate-generated simulators enables:

1. **Deterministic simulation** Golden Gate creates a closed simulation environment such that bugs in the target can be reproduced despite timing-differences (eg. DRAM refresh, PCI-E transport latency) in the underlying host. The simulators for the same target can be generated for different host-FPGAs but will maintain the same target behavior.
2. **FPGA-host optimizations** Structures in ASIC RTL that map poorly to FPGA logic can be replaced with models that preserve the target RTL’s behavior, but take more host cycles to save resources. eg. A 5R, 3W-ported register file with a dual-ported BRAM over 4 cycles.
3. **Distributed simulation & software co-simulation** Since models are decoupled from host time, it becomes much easier to host components of the simulator on multiple FPGAs, and on a host-CPU, while still preserving simulation determinism. This feature serves as the basis for building cycle-accurate scale-out systems with FireSim.
4. **FPGA-hosted, timing-faithful models of I/O devices** Most simple FPGA-prototypes use FPGA-attached DRAM to model the target’s DRAM memory system. If the available memory system does not match that

of the target, the target's simulated performance will be artificially fast or slow. Host-decoupling permits writing detailed timing models that provide host-independent, deterministic timing of the target's memory system, while still use FPGA-host resources like DRAM as a functional store.

13.3 Why Not Golden Gate

Ultimately, Golden Gate-generated simulators introduce overheads not present in an FPGA-prototype that *may* increase FPGA resource use, decrease fmax, and decrease overall simulation throughput¹. Those looking to develop soft-cores or develop a complete FPGA-based platform with their own boards and I/O devices would be best served by implementing their design directly on an FPGA. For those looking to building a system around Rocket-Chip, we'd suggest looking at [SiFive's Freedom platform](#) to start.

13.4 How is Host-Decoupling Implemented?

Host-decoupling in Golden Gate-generated simulators is implemented by decomposing the target machine into a dataflow graph of latency-insensitive models. As a user of FireSim, understanding this dataflow abstraction is essential for debugging your system and for developing your own software models and bridges. We describe it in the next section.

¹ These overheads varying depending on the features implemented and optimizations applied. Certain optimizations, currently in development, may increase fmax or decrease resource utilization over the equivalent prototype.

Target Abstraction & Host Decoupling

Golden Gate-generated simulators are deterministic, cycle-exact representations of the source RTL fed to the compiler. To achieve this, Golden Gate consumes input RTL (as FIRRTL) and transforms it into a latency-insensitive bounded dataflow network (LI-BDN) representation of the same RTL.

14.1 The Target as a Dataflow Graph

Dataflow graphs in Golden Gate consist of models, tokens, and channels:

1. Models – the nodes of the graph, these capture the behavior of the target machine by consuming and producing tokens.
2. Tokens – the messages of dataflow graph, these represent a hardware value as they would appear on a wire after they have converged for a given cycle.
3. Channels – the edges of the graph, these connect the output port of one model to the input of another.

In this system, time advances locally in each model. A model advances once cycle in simulated time when it consumes one token from each of its input ports and enqueues one token into each of its output ports. Models are *latency-insensitive*: they can tolerate variable input token latency as well as backpressure on output channels. Give a sequence of input tokens for each input port, a correctly implemented model will produce the same sequence of tokens on each of its outputs, regardless of when those input tokens arrive.

We give an example below of a dataflow graph representation of a 32-bit adder, simulating two cycles of execution.

14.2 Model Implementations

In Golden Gate, there are two dimensions of model implementation:

1) CPU- or FPGA-hosted: simply, where the model is going to execute. CPU-hosted models, being software, are more flexible and easy to debug but slow. Conversely, FPGA-hosted models are fast, but more difficult to write and debug.

2) Cycle-Exact or Abstract: cycle-exact models faithfully implement a chunk of the SoC's RTL~(this formalized later), where as abstract models are handwritten and trade fidelity for reduced complexity, better simulation performance, improved resource utilization, etc. . .

Hybrid, CPU-FPGA-hosted models are common. Here, a common pattern is write an RTL timing-model and a software functional model.

14.3 Expressing the Target Graph

The target graph is captured in the FIRRTL for your target. The bulk of the RTL for your system will be transformed by Golden Gate into one or more cycle-exact, FPGA-hosted models. You introduce abstract, FPGA-hosted models and CPU-hosted models into the graph by using Target-to-Host Bridges. During compilation, Golden Gate extracts the target-side of the bridge, and instantiates your custom RTL, called an BridgeModule, which together with a CPU-hosted Bridge Driver, gives you the means to model arbitrary target-behavior. We expand on this in the Bridge section.

14.4 Latency-Insensitive Bounded Dataflow Networks

In order for the resulting simulator to be a faithful representation of the target RTL, models must adhere to three properties. We refer the reader to [the LI-BDN paper](#) for the formal definitions of these properties. English language equivalents follow.

Partial Implementation: The model output token behavior matches the cycle-by-cycle output of the reference RTL, given the same input provided to both the reference RTL and the model (as a arbitrarily delayed token stream). Cycle exact models must implement PI, whereas abstract models do not.

The remaining two properties ensure the graph does not deadlock, and must be implemented by both cycle-exact and abstract models.

Self-Cleaning: A model that has enqueued N tokens into each of it's output ports *must* eventually dequeue N tokens from each of it's input ports.

No Extranenous Dependencies: If a given output channel of an LI-BDN simulation model has received a number of tokens no greater than any other channel, and if the model receives all input tokens required to compute the next output token for that channel, the model must eventually enqueue that output token, regardless of future external activity. Here, a model enqueueing an output token is synonymous with the corresponding output channel "receiving" the token.

Target-to-Host Bridges

A custom model in a FireSim Simulation, either CPU-hosted or FPGA-hosted, is deployed by using a *Target-to-Host Bridge*, or Bridge for short. Bridges provide the means to inject hardware and software models that produce and consume token streams.

Bridges enable:

1. **Deterministic, host-agnostic I/O models.** This is the most common use case. Here you instantiate bridges at the I/O boundary of your chip, to provide a simulation models of the environment your design is executing in. For an FPGA-hosted model, see FASED memory timing models. For co-simulated models see the UARTBridge, BlockDeviceBridge, and SerialBridge.
2. **Verification against a software golden model.** Attach an bridge (anywhere in your target RTL) to an interface you'd like to monitor, (e.g., a processor trace port). In the host, you can pipe the token stream coming off this interface to a software model running on a CPU (e.g, a functional ISA simulator). See TracerV.
3. **Distributed simulation.** The original FireSim application. You can stitch together networks of simulated machines by instantiating bridges at your SoC boundary. Then write software models and bridge drivers that move tokens between each FPGA. See the SimpleNICBridge.
4. **Resource optimizations.** Resource-intensive components of the target can be replaced with models that use fewer FPGA resources or run entirely in software.

The use of Bridges in a FireSim simulation has many analogs to doing mixed-language (Verilog-C++) simulation of the same system in software. Where possible, we'll draw analogies.

15.1 Terminology

Bridges have a *target side*, consisting of a specially annotated Module, and *host side*, which consists of an FPGA-hosted *bridge module* (deriving from `BridgeModule`) and an optional CPU-hosted *bridge driver* (deriving from `bridge_driver_t`).

In a mixed-language software simulation, a verilog procedural interface (VPI) is analogous to the target side of a bridge, with the C++ backing that interface being the host side.

15.2 Target Side

In your target side, you will mix-in `midas.widgets.Bridge` into a Chisel `BaseModule` (this can be a black or white-box Chisel module) and implement its abstract members. This trait indicates that the associated module will be replaced with a connection to the host-side of the bridge that sources and sinks token streams. During compilation, the target-side module will be extracted by Golden Gate and its interface will be driven by your bridge's host-side implementation.

This trait has two type parameters and two abstract members you'll need define for your `Bridge`. Since you must mix `Bridge` into a Chisel `BaseModule`, the IO you define for that module constitutes the target-side interface of your bridge.

15.2.1 Type Parameters:

1. **Host Interface Type** `HPType <: TokenizedRecord`: The Chisel type of your `Bridge`'s host-land interface. This describes how the target interface has been divided into separate token channels. One example, `HostPortIO[T]`, divides a Chisel `Bundle` into a single bi-directional token stream and is sufficient for defining bridges that do not model combinational paths between token streams. We suggest starting with `HostPortIO[T]` when defining a `Bridge` for modeling IO devices, as it is the simplest to reasonable about and can run at $FMR = 1$. For other port types, see `Bridge Host Interaces`.
2. **BridgeModule Type** `WidgetType <: BridgeModule`: The type of the host-land `BridgeModule` you want Golden Gate to connect in-place of your target-side module. Golden Gate will use its class name to invoke its constructor.

15.2.2 Abstract Members:

1. **Host Interface Mock** `bridgeIO: HPType`: Here you'll instantiate a mock instance of your host-side interface. **This does not add IO to your target-side module.** Instead used to emit annotations that tell Golden Gate how the target-land IO of the target-side module is being divided into channels.
2. **Bridge Module Constructor Arg** `constructorArg: Option[AnyRef]`: A optional Scala case class you'd like to pass to your host-land `BridgeModule`'s constructor. This will be serialized into an annotation and consumed later by Golden Gate. If provided, your case class should capture all target-land configuration information you'll need in your `Module`'s generator.

Finally at the bottom of your `Bridge`'s class definition **you'll need to call `generateAnnotations()`**. This is necessary to have Golden Gate properly detect your bridge.

You can freely instantiate your `Bridge` anywhere in your Target RTL: at the I/O boundary of your chip or deep in its module hierarchy. Since all of the Golden Gate-specific metadata is captured in FIRRTL annotations, you can generate your target design and simulate it a target-level RTL simulation or even pass it off to ASIC CAD tools – Golden Gate's annotations will simply be unused.

15.3 What Happens Next?

If you pass your design to Golden Gate, it will find your target-side module, remove it, and wire its dangling target-interface to the top-level of the design. During host-decoupling transforms, Golden Gate aggregates fields of your bridge's target interface based on channel annotations emitted by the target-side of your bridge, and wraps them up into decoupled interfaces that match your host interface definition. Finally, once Golden Gate is done performing compiler transformations, it generates the bridge modules (by looking up their constructors and passing them their serialized constructor argument) and connects them to the tokenized interfaces presented by the now host-decoupled simulator.

15.4 Host Side

The host side of a bridge has two components:

1. A FPGA-hosted bridge module (`BridgeModule`).
2. An optional, CPU-hosted, bridge driver (`bridge_driver_t`).

In general, bridges have both: in FASED memory timing models, the driver configures timing parameters at the start of simulation, and periodically reads instrumentation during execution. In the Block Device model, the driver periodically polls queues in the module checking for new functional requests to be served. In the NIC model, the driver moves tokens in bulk between the software switch model and the bridge module, which simply queues up tokens as they arrive.

Communication between a bridge module and driver is implemented with two types of transport:

1. **MMIO:** In the module, this is implemented over a 32-bit AXI4-lite bus. Reads and writes to this bus are made by drivers using `simif_t::read()` and `simif_t::write()`. Bridge modules register memory mapped registers using methods defined in `midas.widgets.Widget`, addresses for these registers are passed to the drivers in a generated C++ header.
2. **DMA:** In the module this is implemented with a wide (e.g., 512-bit) AXI4 bus, that is mastered by the CPU. Bridge drivers initiate bulk transactions by passing buffers to `simif_t::push()` and `simif_t::pull()` (DMA from the FPGA). DMA is typically used to stream tokens into and out of out of large FIFOs in the `BridgeModule`.

15.5 Compile-Time (Parameterization) vs Runtime Configuration

As when compiling a software RTL simulator, the simulated design is configured over two phases:

1. **Compile Time**, by parameterizing the target RTL and `BridgeModule` generators, and by enabling Golden Gate optimization and debug transformations. This changes the simulator's RTL and thus requires a FPGA-recompilation. This is equivalent to, but considerably slower than, invoking VCS to compile a new simulator.
2. **Runtime**, by specifying plus args (e.g., `+latency=1`) that are passed to the `BridgeDrivers`. This is equivalent to passing plus args to a software RTL simulator, and in many cases the plus args passed to an RTL simulator and a FireSim simulator can be the same.

15.6 Target-Side vs Host-Side Parameterization

Unlike in a software RTL simulation, FireSim simulations have an additional phase of RTL elaboration, during which bridge modules are generated (they are themselves Chisel generators).

The parameterization of your bridge module can be captured in two places.

1. **Target side.** here parameterization information is provided both as free parameters to the target's generator, and extracted from the context in which the bridge is instantiated. The latter might include things like widths of specific interfaces or bounds on the behavior the target might expose to the bridge (e.g., a maximum number of inflight requests). All of this information must be captured in a `_single_ serializable` constructor argument, generally a case class (see `Bridge.constructorArg`).
2. **Host side.** This is parameterization information captured in Golden Gate's `Parameters` object. This should be used to provide host-land implementation hints (that ideally don't change the simulated behavior of the system), or to provide arguments that cannot be serialized to the annotation file.

In general, if you can capture target-behavior-changing parameterization information from the target-side you should. This makes it easier to prevent divergence between a software RTL simulation and FireSim simulation of the same FIRRTL. It's also easier to configure multiple instances of the same type of bridge from the target side.

CHAPTER 16

Indices and tables

- `genindex`
- `modindex`
- `search`