
Mono Developer Documentation

Documentation

Release alpha

Monolit ApS

Jun 23, 2017

Contents

1	What to find here?	3
2	Content	5

Skip all the talking and just start off with: [Getting started installing the framework](#), and you are already half way.

CHAPTER 1

What to find here?

Here on our developer site, we collect all learning resources about mono. You will find initial getting started guides, followed by tutorials on specific topics, in-depth articles and last (but not least) the API reference docs.

We prioritize to get as much text published fast, instead of keeping our cards close. We hope you like our decision. Anyway - should you encounter anything you would like to correct - see: [Contributing](#)

Getting Started

These guides will help you get started on creating your first mono app. We begin with guides that help you setup the toolchain and environment.

Lets start: Installing Mono Framework

In this guide we go through the steps of installing the Mono toolchain on your computer.

Download

First we begin with downloading the installer package, that will install the framework on your computer:

Download the installer package that fits your OS. Run the installer and follow the steps to install Mono's developing tools on your system.

The installer contains all you need to install apps on mono, and to develop your own apps. The installer package contains:

- **Mono Framework code:** The software library
- **GCC for embedded ARM:** Compiler
- **Binutils** (Windows only): The `make` tool
- **monoprog:** Tool that uploads apps to Mono via USB
- **monomake:** Tool that creates new mono application projects for you

Check installation

When the installer package has finished, you should check that have the toolchain installed. Open a terminal:

Mac & Linux

Open the *Terminal* application, and type this into it:

```
$ monomake
```

If you have installed the toolchain successfully in your path, the monomake tool should respond this:

```
ERR: No command argument given! You must provide a command
Usage:
monomake COMMAND [options]
Commands:
  project [name]  Create a new project folder. Default name is: new_mono_project
  version         Display the current version of monomake
  path           Display the path to the Mono Environment installation dir
```

Congratulations, you have the tool chain running! Now, you are ready to crate your first *Hello World* project in the next tutorial.

Any problems?

If you do not get the excepted response, but instead something like:

```
-bash: monomake: command not found
```

It means monomake is not in your PATH. Check if you can see a mono reference in your PATH, by typing:

```
$ echo $PATH
```

Look for references to something like `/usr/local/openmono/bin`. If you cannot find this, please restart the *Terminal* application to reload bash profile.

Windows

Open the Run command window (press Windows-key + R), type `cmd` and press Enter. The *Command Prompt* window should open. Check that the toolchain is correctly installed by typing:

```
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. All rights reserved.

C:\Users\stoffer> monomake
```

Like on Mac and Linux, monomake should respond with:

```
ERR: No command argument given! You must provide a command
Usage:
monomake COMMAND [options]
Commands:
  project [name]  Create a new project folder. Default name is: new_mono_project
  version         Display the current version of monomake
  path           Display the path to the Mono Environment installation dir
```

If you get this: Congratulations! You have the toolchain installed, and you can go ahead with creating your first *Hello World* app, in the next tutorial.

Any problems?

On the other hand, if you get:

```
'monomake' is not recognized as an internal or external command,  
operable program or batch file.
```

It means `monomake` is not in the environment variable `PATH`. Check that you really did install the tool chain, and that your system environment variable `PATH` does indeed contain a path like this:

```
C:\Program Files\OpenMono\bin
```

You can see your `PATH` environment variable by typing:

```
C:\Users\stoffer> echo %PATH%
```

The *Hello World* project

Now, let us create the obligatory *Hello World* project, that does not do anything else than verify your installation works.

Prerequisites

By now I expect you have installed the Mono tool chain, as described in the previous tutorial. Also, it is best if you are familiar with object oriented programming. If you are not, then you might find yourself thinking “what the heck is a class and inheritance!” But read on anyways, but I will recommend to read our Object oriented guide to C++.

Create a new project

Mono comes with a tool called `monomake`, that does one thing - and one thing only: creating new mono projects. Let's try it!

Open a terminal

- Mac/Linux: Open the Terminal application
- Window: Press Windows-key + R, and type `cmd` then hit Enter

Create project

In the terminal, navigate to the directory where you would like to create the project. Then:

```
$ monomake project hello_world
```

Hit Enter and `monomake` will create a new folder called `hello_world` with 3 files inside:

- `app_controller.h`
- `app_controller.cpp`
- `Makefile`

These 3 files are required for all mono applications. I will not go into too many details here, but just tell you that `app_controller.h` defines the class `AppController`, that is the application entry point. It replaces the `main()` function.

Now, `cd` into the project folder `hello_world`:

```
$ cd hello_world
```

Compile

The project already contains code that compiles, so the only thing you need to do is:

```
$ make
```

Now the tool chain compiles the application:

```
Compiling C++: app_controller.cpp
Compiling C++: System default mono_default_main
Linking hello_world.elf
```

Voila, your mono application compiled and the executable is `hello_world.elf`. This is the file that can be uploaded to Mono.

If you already have mono connected via USB, you can upload your new application to it by:

```
$ make install
```

The `install` command will search to any connected Mono's, reboot it and upload the application. If everything went smoothly you should see the text *Hi, I'm Mono* on the display.

The code

Okay, we got the code running on Mono - but what really happens in the code? In this section we will look at the template code in `AppController`.

First, let just describe what the application does. It creates a text on the screen that says: *"Hi, I'm Mono"*. That's it. More specific, it creates a *TextLabel* that gets the text content, and renders on the screen. I have includes a picture of the application below:



Header file

As said, all Mono applications needs an *AppController*, because it is the entry point for all mono applications. Let's take a look at the code in `app_controller.h`:

```
#include <mono.h>           // 1

using namespace mono;       // 2
using namespace mono::ui;

class AppController : public mono::IApplication { // 3

    UILabelView helloLabel; // 4

public:

    AppController();         // 5

    void monoWakeFromReset(); // 6

    void monoWillGotoSleep(); // 7

    void monoWakeFromSleep(); // 8

};
```

I have added numbers to the interesting code lines in comments. Let's go through each of the lines, and see what it does:

1. We include the framework. This header file, is an umbrella that include all the classes in Mono framework. Every mono application need this include.
2. All mono framework classes exists inside a namespace called `mono`. We include namespace in the context, to make the code less verbose. This allows us to write `String()`, instead of `mono::String()`. (And yes, mono has its own string class!)

3. Here we define the `AppController` class itself. It inherits from the abstract interface called `IApplication`. This interface defines the 3 methods the `AppController` must have. We shall examine them shortly.
4. Here we define the `TextLabel` object that will display our text on the screen. It is defined as a member of the `AppController` class.
5. We overwrite the `default constructor` for our `AppController` class, to allow us to do custom initialization. You will see later why.
6. This is a required overwrite from the `IApplication` interface. It is a method that is called when mono is reset.
7. Also a requirement from `IApplication`. It defines a method that is called just before mono is put into sleep mode.
8. As required by `IApplication`, this method is called when mono wake up from sleep mode.

All `AppController`'s are required to implement 6,7 and 8, but you may just leave them blank.

Implementation

Now, the contents of: `app_controller.cpp` file:

```
#include "app_controller.h"

using namespace mono::geo;

AppController::AppController() :
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!")           // 1
{
    helloLabel.setAlignment(TextLabelView::ALIGN_CENTER); // 2
    helloLabel.setTextColor(display::TurquoiseColor);      // 3
}

void AppController::monoWakeFromReset()
{
    helloLabel.show();                                     // 4
}

void AppController::monoWillGotoSleep()
{
}

void AppController::monoWakeFromSleep()
{
    helloLabel.scheduleRepaint();                          // 5
}
```

Again, I have numbered the most interesting code lines:

1. This the default constructor overwrite. We overwrite the constructor to construct the `TextLabel` object with specific parameters. (See `TextLabelView` reference) We set the labels position and size on the screen (using the `Rect` class), and its text content.

2. In (1) we defined the text labels width to be the entire screen (176 pixels). We want to center the text on the screen, therefore we tell the label to center align its text content.
3. To make application look fancy, we set the text color to be an artzy turquoise color.
4. The method `monoWakeFromReset` is automatically called upon reset. Inside here we tell the text label to be visible. All UI widgets are hidden by default. You must call `show()` to render them.
5. `monoWakeFromSleep` is called when Mono wakes from sleep mode. Here we tell the label to repaint (render) itself on the screen. Sleep mode might have cleared the display memory, so we need to render the label again. `scheduleRepaint` will render the text, when the display signals its time to update.

That is all the code you need to draw on the screen. Notice that we left the method `monoWillGotoSleep` empty. We do not need any clean up code, before mono goes to sleep.

Sleep mode

But how and when will Mono go into sleep mode? Easy: By default the side-button on Mono will trigger sleep and wake. You do not have to do anything! Sleep mode will turn off all peripherals and halt the CPU execution. Only a button press will wake it. Sleep mode is only way you can turn off Mono!

Further reading

- *Your first App* : Build a Tic Tac Toe game (Part 1)
- *Archectural Overview* : Learn more about sleep/wake and `IApplication`
- *Display System Architecture* : An in-depth look on details of the display system.

Tic-tac-toe for Mono

In this tutorial I will teach you how to program Mono's display and touch device by creating a tiny game.

Anatomy of a Mono application

Mono apps can be written inside the Arduino IDE, but if you really want to be a pro, you can write Mono apps directly in C++. For that you will need to implement an `AppController` with at least three functions. So I will start there, with my `app_controller.h` header file:

```
#include <mono.h>

class AppController
:
    public mono::IApplication
{
public:
    AppController ();
    void monoWakeFromReset ();
    void monoWillGotoSleep ();
    void monoWakeFromSleep ();
};
```

My matching `app_controller.cpp` implementation file will start out as this:

```
#include "app_controller.h"

AppController::AppController ()
{
}

void AppController::monoWakeFromReset ()
{
}

void AppController::monoWakeFromSleep ()
{
}

void AppController::monoWillGotoSleep ()
{
}
```

Now I have a fully functional Mono application! It does not do much, but hey, there it is.

Screen and Touch

Tic Tac Toe is played on a 3-by-3 board, so let me sketch out the layout something like this:

```

Tic Tac Toe
+---+ +---+ +---+
|   | |   | |   |
+---+ +---+ +---+
+---+ +---+ +---+
|   | |   | |   |
+---+ +---+ +---+
+---+ +---+ +---+
|   | |   | |   |
+---+ +---+ +---+
```

I will make the `AppController` hold the board as an array of arrays holding the tokens X and O, and also a token `_` for an empty field:

```
class AppController
{
    ...
    ...
    enum Token { _, X, O };
    Token board[3][3];
};
```

For simplicity, I do not want Mono to make any moves by itself (yet); I just want two players to take turns by touching the board. So I need to show the board on the screen, and I want each field of the board to respond to touch.

This kind of input and output can in Mono be controlled by the `ResponderView`. It is a class that offers a lot of functionality out of the box, and in my case I only need to override two methods, `repaint` for generating the output and `TouchBegin` for receiving input:

```
class TouchField
:
    public mono::ui::ResponderView
{
```



```

    void TouchBegin (mono::TouchEvent &);
    void repaint ();
};

class AppController
{
    ...
    ...
    TouchField fields[3][3];
};

```

Above I have given AppController nine touch fields, one for each coordinate on the board. To make a TouchField able to paint itself, it needs to know how to get hold of the token it has to draw:

```

class TouchField
{
    ...
    ...
public:
    AppController * app;
    uint8_t boardX, boardY;
};

```

With the above information, I can make a TouchField draw a circle or a cross on the screen using the geometric classes `Point`, `Rect`, and the underlying functionality it inherits from `ResponderView`. The `ResponderView` is a subclass of `View`, and all Views have a `DisplayPainter` named painter that takes care of actually putting pixel on the screen:

```

using mono::geo::Point;
using mono::geo::Rect;

void TouchField::repaint ()
{
    // Clear background.
    painter.drawFillRect(viewRect,true);
    // Show box around touch area.
    painter.drawRect(viewRect);
    // Draw the game piece.
    switch (app->board[boardY][boardX])
    {
        case AppController::X:
        {
            painter.drawLine(Position(),Point(viewRect.X2(),viewRect.Y2()));
            painter.drawLine(Point(viewRect.X2(),viewRect.Y()),Point(viewRect.X(),
↪viewRect.Y2()));
            break;
        }
        case AppController::O:
        {
            uint16_t radius = viewRect.Size().Width() / 2;
            painter.drawCircle(viewRect.X()+radius,viewRect.Y()+radius,radius);
            break;
        }
        default:
            // Draw nothing.
            break;
    }
}

```

Above, I use the View's `viewRect` to figure out where to draw. The `viewRect` defines the View's position and size on the screen, and its methods `X()`, `Y()`, `X2()`, and `Y2()` give me the screen coordinates of the View. The method `Position()` is just a shortcut to get `X()` and `Y()` as a `Point`.

With respect to the board, I index multidimensional arrays by **row-major order** to please you old-school C coders out there. So it is `board[y][x]`, thank you very much.

Well, now that each field can draw itself, we need the `AppController` to setup the board and actually initialise each field when a game is started:

```
using mono::ui::View;

void AppController::startNewGame ()
{
    // Clear the board.
    for (uint8_t x = 0; x < 3; ++x)
        for (uint8_t y = 0; y < 3; ++y)
            board[y][x] = _;
    // Setup touch fields.
    const uint8_t width = View::DisplayWidth();
    const uint8_t height = View::DisplayHeight();
    const uint8_t fieldSize = 50;
    const uint8_t fieldSeparation = 8;
    const uint8_t screenMargin = (width-(3*fieldSize+2*fieldSeparation))/2;
    uint8_t yOffset = height-width-(fieldSeparation-screenMargin);
    for (uint8_t y = 0; y < 3; ++y)
    {
        yOffset += fieldSeparation;
        uint8_t xOffset = screenMargin;
        for (uint8_t x = 0; x < 3; ++x)
        {
            // Give each touch field enough info to paint itself.
            TouchField & field = fields[y][x];
            field.app = this;
            field.boardX = x;
            field.boardY = y;
            // Tell the view & touch system where the field is on the screen.
            field.setRect(Rect(xOffset,yOffset,fieldSize,fieldSize));
            // Next x position.
            xOffset += fieldSize + fieldSeparation;
        }
        // Next y position.
        yOffset += fieldSize;
    }
    continueGame();
}
```

Above I space out the fields evenly on the bottom part of the screen, using the `DisplayWidth()` and `DisplayHeight()` to get the full size of the screen, and while telling each field where it should draw itself, I also tell the field which board coordinate it represents.

Before we talk about the game control and implement the function `continueGame`, let us hook up each field so that it responds to touch events:

```
using mono::TouchEvent;

void TouchField::TouchBegin (TouchEvent & event)
```

```
{
    app->humanMoved(boardX,boardY);
}
```

Above the touch event is implicitly translated to a board coordinate (because each field knows its own board coordinate) and passed to the `AppController` that holds the board and controls the game play.

Game status display

To inform the players what is going on, I want the top of the display to show a status message. And I also want to keep track of which player is next:

```
class AppController
{
    ...
    mono::ui::TextLabelView topLabel;
    Token nextToMove;
};

using mono::ui::TextLabelView;

AppController::AppController ()
:
    topLabel(Rect(0,10,View::DisplayWidth(),20),"Tic Tac Toe")
{
    topLabel.setAlignment(TextLabelView::ALIGN_CENTER);
}
```

A `TextLabelView` is a `View` that holds a piece of text and displays this text in inside its `viewRect`. I can now change the label at the top of the screen depending on the state of the game after each move by using `setText()`, followed by a call to `show()` to force the `TextLabelView` to repaint:

```
void AppController::continueGame ()
{
    updateView();
    whosMove();
    if (hasWinner())
    {
        if (winner() == X) topLabel.setText("X wins!");
        else topLabel.setText("O wins!");
    }
    else if (nextToMove == _) topLabel.setText("Tie!");
    else if (nextToMove == X) topLabel.setText("X to move");
    else topLabel.setText("O to move");
    topLabel.show();
}
```

The `updateView()` function simply forces all the fields to repaint:

```
void AppController::updateView ()
{
    for (uint8_t y = 0; y < 3; ++y)
        for (uint8_t x = 0; x < 3; ++x)
            fields[y][x].show();
}
```

Game control

I now need to implement functionality that decides which player should move next and whether there is a winner. First, I can figure out who's turn it is by counting the number of game pieces for both players, and placing the result in `nextToMove`. If `nextToMove` gets the value `_`, then it means that the board is full:

```
void AppController::whosMove ()
{
    uint8_t xPieces = 0;
    uint8_t oPieces = 0;
    for (uint8_t y = 0; y < 3; ++y)
        for (uint8_t x = 0; x < 3; ++x)
            if (board[y][x] == X) ++xPieces;
            else if (board[y][x] == O) ++oPieces;
    if (xPieces + oPieces >= 9) nextToMove = _;
    else if (xPieces <= oPieces) nextToMove = X;
    else nextToMove = O;
}
```

Finding out whether there is a winner is just plain grunt work, checking the board for three-in-a-row:

```
bool AppController::hasThreeInRow (Token token)
{
    // Check columns.
    for (uint8_t x = 0; x < 3; ++x)
        if (board[0][x] == token &&
            board[1][x] == token &&
            board[2][x] == token
        ) return true;
    // Check rows.
    for (uint8_t y = 0; y < 3; ++y)
        if (board[y][0] == token &&
            board[y][1] == token &&
            board[y][2] == token
        ) return true;
    // Check diagonal.
    if (board[0][0] == token &&
        board[1][1] == token &&
        board[2][2] == token
    ) return true;
    // Check other diagonal.
    if (board[0][2] == token &&
        board[1][1] == token &&
        board[2][0] == token
    ) return true;
    return false;
}

AppController::Token AppController::winner ()
{
    if (hasThreeInRow(X)) return X;
    if (hasThreeInRow(O)) return O;
    return _;
}

bool AppController::hasWinner ()
{
    return winner() != _;
}
```

```
}

```

Lastly, I need to figure out what to do when a player touches a field. If the game has ended, one way or the other, then I want to start a new game, no matter which field is touched; If the player touches a field that is already occupied, then I ignore the touch; Otherwise, I place the proper piece on the board:

```
void AppController::humanMoved (uint8_t x, uint8_t y)
{
    if (nextToMove == _ || hasWinner()) return startNewGame();
    else if (board[y][x] != _) return;
    else board[y][x] = nextToMove;
    continueGame();
}
```

Fallen asleep?

To wrap things up, I want Mono to start a new game whenever it comes out of a reset or sleep:

```
void AppController::monoWakeFromReset ()
{
    startNewGame();
}

void AppController::monoWakeFromSleep ()
{
    startNewGame();
}
```

Well there you have it: An astonishing, revolutionary, new game has been born! Now your job is to type it all in.

Tic-tac-toe for Mono, part II

In the *first part*, you saw how to get Mono to draw on the screen and how to react to touch input.

In this second part, I will show you how to use timers to turn Mono into an intelligent opponent!

Growing smart

To get Mono to play Tic Tac Toe, I will need to give it a strategy. A very simple strategy could be the following:

1. Place a token on an empty field if it makes Mono win.
2. Place a token on an empty field if it blocks the human opponent from winning.
3. Place a token arbitrarily on an empty field.

Well, it is not exactly Skynet, but it will at least make Mono appear to have some brains. In code it translates to the following.

```
void AppController::autoMove ()
{
    timer.Stop();
    // Play to win, if possible.
    for (uint8_t x = 0; x < 3; ++x)
        for (uint8_t y = 0; y < 3; ++y)
```

```
        if (board[y][x] == _)
        {
            board[y][x] = O;
            if (hasWinner()) return continueGame();
            else board[y][x] = _;
        }
        // Play to not loose.
        for (uint8_t x = 0; x < 3; ++x)
            for (uint8_t y = 0; y < 3; ++y)
                if (board[y][x] == _)
                {
                    board[y][x] = X;
                    if (hasWinner())
                    {
                        board[y][x] = O;
                        return continueGame();
                    }
                    else board[y][x] = _;
                }
        // Play where free.
        for (uint8_t x = 0; x < 3; ++x)
            for (uint8_t y = 0; y < 3; ++y)
                if (board[y][x] == _)
                {
                    board[y][x] = O;
                    return continueGame();
                }
    }
}
```

The timer is what controls when Mono should make its move; it is a Mono framework `Timer` that can be told to trigger repeatedly at given number of milliseconds. I will make the application fire the timer with 1.5 second intervals:

```
class AppController
{
    ...
private:
    mono::Timer timer;
    void autoMove ();
    void prepareNewGame ();
};

AppController::AppController ()
:
    timer(1500)
{
    ...
}
```

I will control the application by telling `timer` to call various functions when it triggers, and then stop and start the timer where appropriate. Conceptually, I can simply tell `timer` to call a function `autoMove` by

```
timer.setCallback(autoMove);
```

but because `autoMove` is a C++ class member-function, I need to help out the poor old C++ compiler by giving it information about which object has the `autoMove` function, so the incantation will actually be

```
timer.setCallback<AppController>(this, &AppController::autoMove);
```

With that cleared up, I can place the bulk of the control in the `continueGame` function:

```
void AppController::continueGame ()
{
    updateView();
    whosMove();
    if (hasWinner())
    {
        if (winner() == X) topLabel.setText("You win!");
        else topLabel.setText("Mono wins!");
        timer.setCallback<AppController>(this, &AppController::prepareNewGame);
        timer.Start();
    }
    else if (nextToMove == _)
    {
        topLabel.setText("Tie!");
        timer.setCallback<AppController>(this, &AppController::prepareNewGame);
        timer.Start();
    }
    else if (nextToMove == X)
    {
        topLabel.setText("Your move");
        topLabel.show();
    }
    else
    {
        topLabel.setText("Thinking...");
        timer.setCallback<AppController>(this, &AppController::autoMove);
        timer.Start();
    }
}
```

All that is missing now is a `prepareNewGame` function that prompts for a new game:

```
void AppController::prepareNewGame ()
{
    timer.Stop();
    topLabel.setText("Play again?");
}
```

And that is it! Now you can let your friends try to beat Mono, and when they fail, you can tell them that *you* created this master mind.

Tic-tac-toe for Mono, part III

In the *first part*, you saw how to get Mono to draw on the screen and how to react to touch input.

In the *second part*, you saw how to use timers to turn Mono into an intelligent opponent.

In this third part, I will show you how to extend battery life and how to calibrate the touch system.

Getting a Good Night's Sleep

It is important to automatically put Mono to sleep if you want to conserve your battery. The battery lasts less than a day if the screen is permanently turned on. On the other hand, if Mono only wakes up every second to make a measurement of some sort, then the battery will last a year or thereabouts. What I will do in this app, is something in between these two extremes.

In it's simplest form, an auto-sleeper looks like this:

```
class ApplicationController
{
    ...
private:
    mono::Timer sleeper;
    ...
};

AppController::AppController ()
:
    sleeper(30*1000,true),
    ...
{
    sleeper.setCallback(mono::IApplicationContext::EnterSleepMode);
    ...
}

void ApplicationController::continueGame ()
{
    sleeper.Start();
    ...
}
```

The sleeper is a single-shot [Timer](#), which means that it will only fire once. And by calling `Start` on sleeper every time the game proceeds in `continueGame`, I ensure that timer is restarted whenever something happens in the game, so that `EnterSleepMode` is only called after 30 seconds of inactivity.

It is Better to Fade Out than to Black Out

Abruptly putting Mono to sleep without warning, as done above, is not very considerate to the indecisive user. And there is room for everyone here in Mono world.

So how about slowly fading down the screen to warn about an imminent termination of the exiting game?

Here I only start the `sleeper` timer after the display has been dimmed:

```
class ApplicationController
{
    ...
private:
    mono::Timer dimmer;
    void dim ();
    ...
};

using mono::display::IDisplayController;
```



```
AppController::AppController ()
:
    dimmer(30*1000,true),
    ...
{
    dimmer.setCallback<AppController>(this, &AppController::dim);
    ...
}

void AppController::dim ()
{
    dimmer.Stop();
    IDisplayController * display = IApplicationContext::Instance->DisplayController;
    for (int i = display->Brightness(); i >= 50; --i)
    {
        display->setBrightness(i);
        wait_ms(2);
    }
    sleeper.Start();
}
```

The dimmer timer is started whenever there is progress in the game, and when dimmer times out, the dim method turns down the brightness from the max value of 255 down to 50, one step at a time.

Oh, I almost forgot, I need to turn up the brightness again when the the dimmer resets:

```
void AppController::continueGame ()
{
    IApplicationContext::Instance->DisplayController->setBrightness(255);
    sleeper.Stop();
    dimmer.Start();
    ...
}
```

So there you have it, saving the environment and your battery at the same time!

Mono for Arduino Hackers

You can use the familiar Arduino IDE to build Mono applications. This guide will take you through the steps.

Prerequisites

First I expect you are familiar with Arduino, its coding IDE and the API's like `pinMode()` etc. I also assume that you have the IDE installed, and it is version 1.6.7 or above. You do not have to follow any other of the getting started guides. Arduino IDE development for Mono is completely independent. If this is the first Mono guide you read, it is all good.

Overview

You can code Mono using 2 approaches: Native Mono or the Arduino IDE. The difference is the tools you use, and the way you structure your code. In the Arduino approach you get the familiar `setup()` and `loop()` functions, and you use the Arduino IDE editor to code, compile and upload applications to Mono.

Under the hood we still use the native Mono API's and build system, we just encapsulate it in the Arduino IDE.


Installation

The Arduino IDE has a plugin system, where you can add support for third-party boards. We use such a plugin, that adds Mono as a target board. To install the plugin we use the *Board Manager*, that can install new target boards.

Note: You need Arduino IDE version 1.6 or above to utilize the Board Manager feature. You can download Arduino IDE here: [arduino.cc](https://www.arduino.cc)

Add Mono as a board source

To make the Board Manager aware of Mono's existence, you must add a source URL to the manager. You do this by opening the preferences window in Arduino IDE. Below is a screenshot of the window:

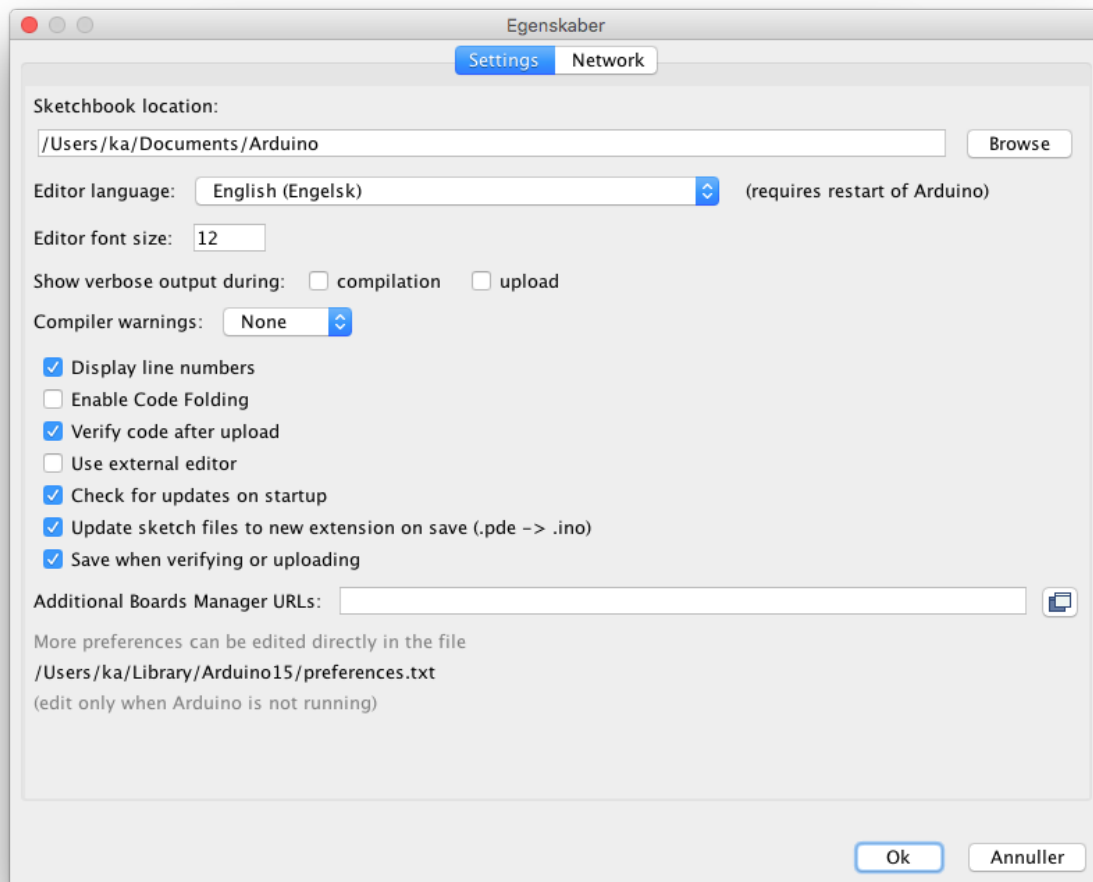


In the text field called *Additional Boards Manager URLs* type in the URL for Mono board package:

```
https://github.com/getopenmono/arduino_comp/releases/download/current/package_
→openmono_index.json
```


And press *OK*.

Install the board package

Now, open the *Board Manager* by selecting the menu: *Tools -> Boards -> Board Manager*:

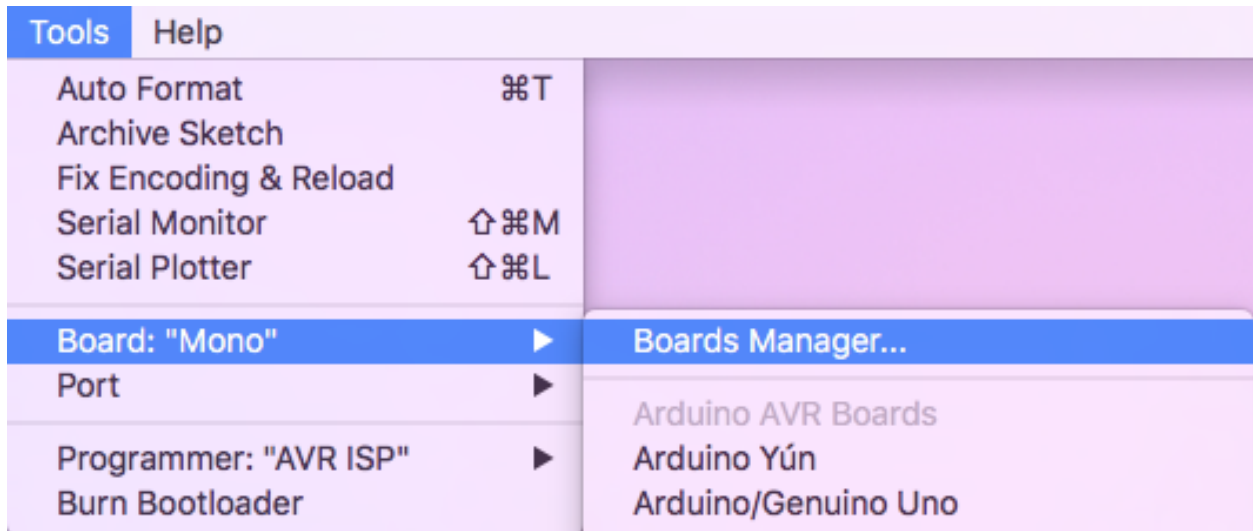

The *Board Manager* appears, and query the source URLs for new board types. It will discover a new board type *OpenMono*. Select the type *Contributed*, in top left corner:

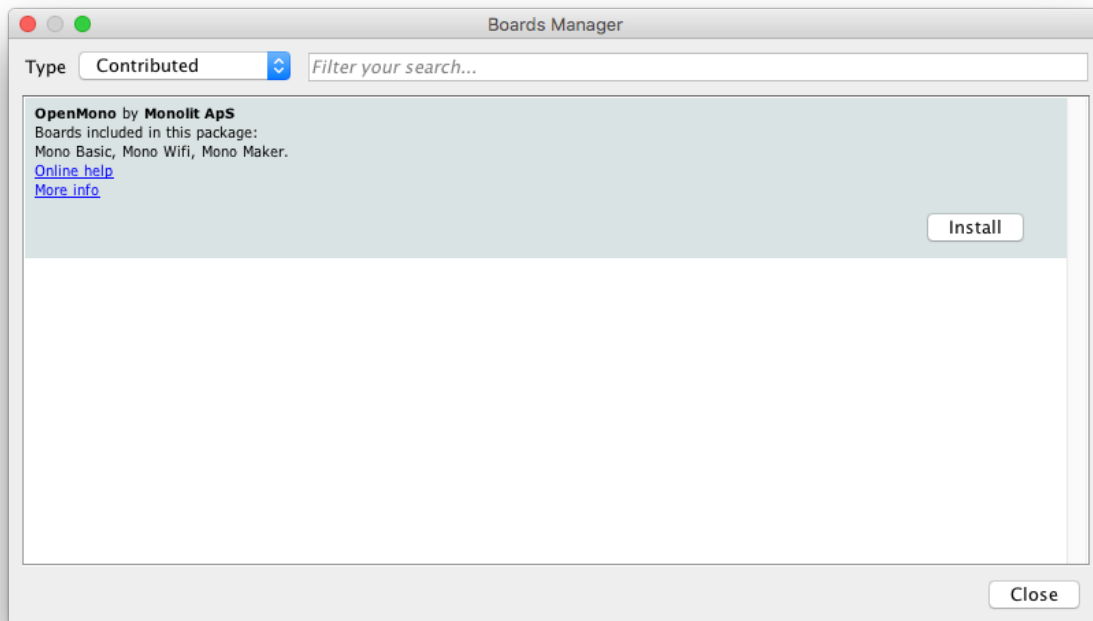

Now click on the *Install* button to download and install all the needed tools to build mono applications. This might take a few minutes.

When the installation is done, you can close the *Board Manager* and return the main window. Now select Mono from the list of available target boards:



Install the USB Serial Port Driver

If you run Windows, there is an additional step. (Mac users, you can skip this section.) Windows need to detect the Mono hardware as an USB CDC device and create an ol' fashion COM port. So download the USB device definition driver by right clicking the link and choosing *Save file as*:

Download Windows Serial Port Driver

Run the installer, and you are ready to use Mono.

Limitations

The standard Arduino boards are much simpler than Mono. For example: They can be turned off and they have bare pin headers. Arduino API are made to make digital and analog communication simple. You have functions like `digitalWrite` and `analogRead`. While you have these functions available, you do not have any pin headers sticking out of Mono chassis! You need the *Arduino Shield Adaptor* or to build your own hardware to really take advantage of the Arduino API.

Mono's API is much more high-level, meaning that you have functions like *Render text on the screen*, and the software library (Mono Framework) will handle all the communication for you. Luckily you can still do this from inside the Arduino IDE.

Our additions to the default Arduino sketch

There are some key differences between Arduino and Mono, most important the power supply. You can always turn off an Arduino by pulling its power supply, but that is not true for mono. Here power is controlled by software.

By default we have added some code to the Arduino sketch template, so it will power on/off when pressing the User button. Also, we added the text *Arduino* to the display, such that you know your Mono is turned on.

Hello World

Let us build a Hello World application, similar to the one in the *The obligatory Hello World project* guide. We start out with the default Arduino project template:

```
void setup() {  
    // put your setup code here, to run once:  
  
}  
  
void loop() {  
    // put your main code here, to run repeatedly:  
  
}
```

We will use the class `TextLabelView` to display text on the screen. A `TextLabel` has a size and a position on the screen, which is defined by the class `Rect` that represents a rectangle.

Context issue

You might think we just create the `TextLabel` in the `setup()` function like this:

```
void setup() {  
    // put your setup code here, to run once:  
  
    mono::ui::TextLabelView helloLbl;  
  
}
```

But this approach will deallocate the `TextLabel` as soon as the `setup()` function returns. This means it cannot be rendered to the screen, because it has to be present in memory when screen repaints occur.

The correct approach here is to create a class (say *MyClass*), and let the *TextLabel* be a member of that class. We then create an object of the class in the global context. (Outside the `setup()` and `loop()` functions.) But all this will be out of scope with this tutorial, so we will do it the ugly way. Just know that having many global context objects is a bad thing programmatically.

Adding the TextLabel

The complete code added to the project global context and in the `setup()` function:

```
#include <mono.h>          // 1
#include <app_controller.h> // 2

mono::ui::TextLabelView textLbl(mono::geo::Rect(0,73,176,20),"Hi, I'm Mono"); // 3

void setup() {
    // put your setup code here, to run once:

    //Remove the existing _Arduino_ text label
    ApplicationController::ArduinoAppController->ard.hide(); //3

    textLbl.setTextColor(mono::display::WhiteColor); // 4
    textLbl.show(); // 5
}
```

I have numbered the interesting source code lines, let go through them one by one:

1. We include the Mono Framework, to have access to Mono's API.
2. Include references to the default `AppController` object
3. Here we define the global *TextLabel* object called `textLbl`. Because it is global it will stick around and not be deallocated.
 - In *TextLabelView*'s constructor we create a rectangle object (*Rect*), and give the position (0, 73) and dimension (176, 20).
 - In the constructor's second parameters we set the text content on the *TextLabel*. This is the text that will be displayed on the screen.
4. Get the default *AppController* object, and tell its `ard` *TextLabel* to be hidden.
5. Because the screen on the Arduino template app is black, we need to tell the label to use a *White* text color.
6. We tell the *TextLabel* to render itself on the screen. All UI widgets are hidden by default. You must call `show()` to render them.

Now you can press the compile button () and see the code compile. If you have Mono connected you can upload the application by pressing the button.


Notice that we did not need to put any code inside the `loop()` function.

Enhancing the look and feel

To make our Hello World exactly like the *The obligatory Hello World project* guide, we need to add some refinements to it. We need to center the text on the screen and to color it a fancy red color. But that's easy, just two calls added to the `setup()` function:

```
textLbl.setAlignment(mono::ui::TextLabelView::ALIGN_CENTER);  
  
textLbl.setTextColor(mono::display::AlizarinColor);
```

Now, if you build and run the application the text will be a fancy color and centered on the screen:

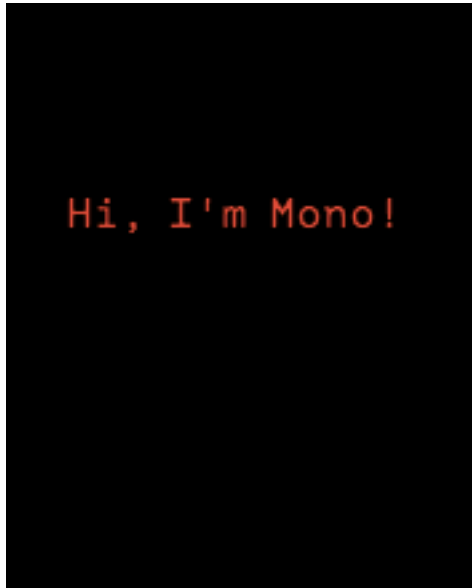

A quick note on namespaces

If find yourself wondering about what this is: `mono::ui::`, then read on. Everybody else - you can skip this section.

C++ uses namespaces to encapsulate class names, minimizing the risk of conflicting names. If you for example define a class called `Stream`, you like likely get a compiler error. This is because Arduino already have a class called `Stream` - the name is already taken.

To avoid this situation we defined all Mono classes inside a *namespace*, meaning that we exists inside a enclosed context:

```
namespace mono {  
    class String;  
    class Stream;  
    class Whatever;  
}
```

You access classes inside a namespace by prepending the namespace to the class name like this: `mono::String`. Namespaces can be nested like this:

```
namespace mono {  
    namespace display {  
        class Color;  
    }  
  
    namespace ui {  
        class TextLabelView;  
    }  
}
```

Importing into global context

You can import a namespace into the global context, to avoid prepending all mono classes with `mono::`, by the `using` keyword:

```
using namespace mono;
```

Now, instead of accessing classe by `mono::String`, you just write `String`, the `mono::` has become implcit. You can import multiple namespaces into the global context by:

```
using namespace mono;
using namespace mono::ui;
using namespace mono::display;
```

Now you can implicit access classes from 3 different namespaces!

Note: The classes are not imported or loaded into the global context (like in Python), C++ does not work that way. It is just a short hand convenience feature, to make the code less verbose.

Further reading

Now you know how to build mono applications from the Arduino IDE. You might what dive into the native API and build system, or reading one of the in-depth articles:

- *Install the native framework* : Install the native mono build system
- *Architectural Overview* : About application lifecycles and structure.

Happy hacking.

Common Misconceptions & Worst Practice

To clear out, what we imagine will be common mistakes, let's go through some senarios that you should avoid - at least!

Who should read this?

Mono API and application structure might be new to you, if you previously programmed only for Arduino or similar embedded devices. We are aware of our framework might be quite unfamiliar to bare metal developers, who expect to have full access and control, from `main()` to `return 0`.

Mono Framework is advanced and its good performance depends on you, following the best practice guide lines. Read this, and you can avoid the most basic mistakes that degrade Mono's functionality.

No `while(1)`'s

First, never ever create your own run loop! Never do this:

```
void AppController::monoWakeFromReset ()
{
    // do one time setups ...

    // now lets do repetitive tasks, that I want to control myself
```



```

while(1)
{
    //check status of button

    // check something else

    // maybe update the screen

    // increment some counter
}
// we will never return here
}

```

Try to do this, and you will find Mono completely unresponsive. The USB port will not work, the programmer (monoprog) will not work, along with a whole bunch of other stuff.

Like other applications in modern platforms, Mono applications uses an internal run loop. If you create your own, the internal run loop will not progress. All features that depend on the run loop will not work. Timers will not run, display system will not work, and worst monoprog cannot reset mono, to upload a new app.

If you want to do repetitive tasks, that should run always (like `while(1)`), you should instead utilize the run loop. You can inject jobs into the run loop by implementing an interface called *IRunLoopTask*. This will allow you to define a method that gets called on each run loop iteration. That's how you do it. We shall not go into more details here, but just refer to the tutorial Using the Run Loop

No busy waits

Many API's (including Mono's), allows you to do busy waits like this:

```

// do something
wait_ms(500); // wait here for 0.5 secs

// do something else

```

It is really convenient to make code like this, but it is bad for performance! For half a second you just halt the CPU - it does nothing. The application run loop is halted, so all background tasks must wait as well. The CPU runs at 66 Mhz, imagine all code it could have executed in that half second!

Instead of halting the CPU like this, you should use callbacks to allow the CPU to do other stuff, while you wait:

```

// do someting
mono::Timer::callOnce<MyClass>(500, this, &MyClass::doSomethingElse); // do_
↪something else in 0.5 secs

```

By using the *Timer* class, and encapsulating the “do something else” functionality in a method - you free the CPU to do useful stuff while you wait. To learn more about callbacks see the tutorial: Callbacks in C++.

Extensive use of new or malloc

The C++ new operator uses the *stdlib* function `malloc` to allocate memory on the heap. And it is very easy and convenient to use the heap:

```

// object allocation on the heap - because Qt and Obj-C Cocoa uses this scheme!
mono::geo::Rect *bounds = new mono::geo::Rect(0,0,100,20);
mono::ui::TextLabelView *txtLbl = new mono::ui::TextLabelview(*bounds, "I'm on the_
↪heap!");

```

```
//pass the pointer around
return txtLbl;
```

What happened to the bounds pointer, that had a reference to a *Rect* object? Nothing happened, the object is still on the heap and we just lost the reference to it. Our application is leaking memory. And that is one issue with using the heap. We do not have a *Garbage Collector*, so you must be careful to always free your objects on the heap.

And it gets worse, the heap on Mono PSoC5 MCU is not big - it is just 16 Kb. You might run out of heap quicker than you expect. At that point `malloc` will start providing you with `NULL` pointers.

Use heap for Asynchronous tasks

There are some cases where you must use the heap, for example this will not work:

```
void getTemp()
{
    // say we got this variable from the temperature sensor
    int celcius = 22;

    char tempStr[100]; // make a local buffer variable to hold our text

    // format a string of max 100 chars, that shows the temperature
    snprintf(tempStr, 100, "the temperature is: %i C", celcius);

    renderOnDisplayAsync(tempStr);
}
```

Here we have an integer and want to present its value nicely wrapped in a string. It is a pretty common thing to do in applications. The issue here is that display rendering is asynchronous. The call to `renderOnDisplayAsync` will just put our request in a queue, and then return. This means our buffer is removed (deallocated) as soon as the `getTemp()` returns, because it is on the stack.

Then, when its time to render the display there is no longer a `tempStr` around. We could make the string buffer object global, but that will take up memory - especially when we do not need the string.

In this case you should the heap! And luckily we made a *String* class that does this for you. It store its content on the heap, and keeps track of references to the content. As soon as you discard the last reference to the content, it is automatically freed - no leaks!

The code from above becomes:

```
int celcius = 22; // from the temp. sensor

// lets use mono's string class to keep track of our text
mono:String tempStr = mono::String::Format("the temperature is: %i C", celcius);

renderOnDisplayAsync(tempStr);
```

That's it. Always use Mono's *String* class when handling text strings. It is lightweight, uses data de-duplication and do not leak.

(The method `renderOnDisplayAsync` is not a Mono Framework method, it is just for demonstration.)

Avoid using the Global Context

If you write code that defines variables in the global context, you might encounter strange behaviours. Avoid code like this:

```
// I really need this timer in reach of all my code
mono::Timer importantTimer;

// some object I need available from everywhere
SomeClass myGlobalObject;

class AppController : public mono::IApplication
{
    // ...
};
```

If you use Mono classes inside `SomeClass` or reference `myGlobalTimer` from it, when you will likely run into problems! The reason is Mono's initialization scheme. A Mono application's start procedure is quite advanced, because many things must be setup and ready. Some hardware components depend on other components, and so on.

When you define global variables (that are classes) they are put into C++'s *global initializer lists*. This means they are defined *before* `monoWakeFromReset()` is executed. You can not expect peripherals to work before `monoWakeFromReset` has been called. When it is called, the system and all its features is ready. If you interact with Mono classes in code you execute before, it is not guaranteed to work properly.

If you would like to know more about the startup procedures of mono applications and how application code actually loads on the CPU, see the [Boot and Startup procedures in-depth article](#).

Direct H/W Interrupts

If you are an experienced embedded developer, you know interrupts and what the requirements to their ISR's are. If you are thinking more like: "What is ISR's?" Or, "ISR's they relate to IRQ's right?" - then read on because you might make mistakes when using interrupts.

First, let's see some code that only noobs would write:

```
// H/W calls this function on pin state change, for example
void interruptServiceRoutine()
{
    flag = true;
    counter += 1;

    //debounce?
    wait_ms(200);
}
```

With the `wait_ms()` call, this interrupt handler (or ISR) will always take 200 ms to complete. Which is bad. A rule of thumb is that ISR's should be fast. You should avoid doing any real work inside them, least of all do busy waits.

Mono Framework is build on top of mbed, that provides classes for H/W Timer interrupts and input triggered interrupts. But because you should never do real work inside interrupt handlers, you normally just set a flag and then check that flag every run loop iteration.

We have includes classes that does all this for you. We call them *Queued Interrupts*, and we have an in-depth article about the topic: [Queued callbacks and interrupts](#). There are the [QueuedInterrupt](#) class, that trigger a queued (run loop based) interrupt handler when an input pin changes state. And the [Timer](#) class, that provides a queued version of hardware timer interrupts.

Caution: We strongly encourage you to use the queued versions of timers and interrupts, since you avoid all the issues related to real H/W interrupts like: reentrancy, race-conditions, volatile variable, dead-locks and more.

Monokiosk

Using Monokiosk


If you want to install an existing app from Monokiosk, on to your Mono device - this guide is for you!

In this guide we will show you how to download and install a pre-built application on Mono. Monokiosk is the *app store* where you can browse and download mono applications, built by makers from around the world.

Note: We plan to add more applications to the kiosk ourselves, and hope that our community will submit their own creations to the site.

Visit monokiosk.com

First order of business, direct your favorite browser to monokiosk.com, and you will see this page like this:

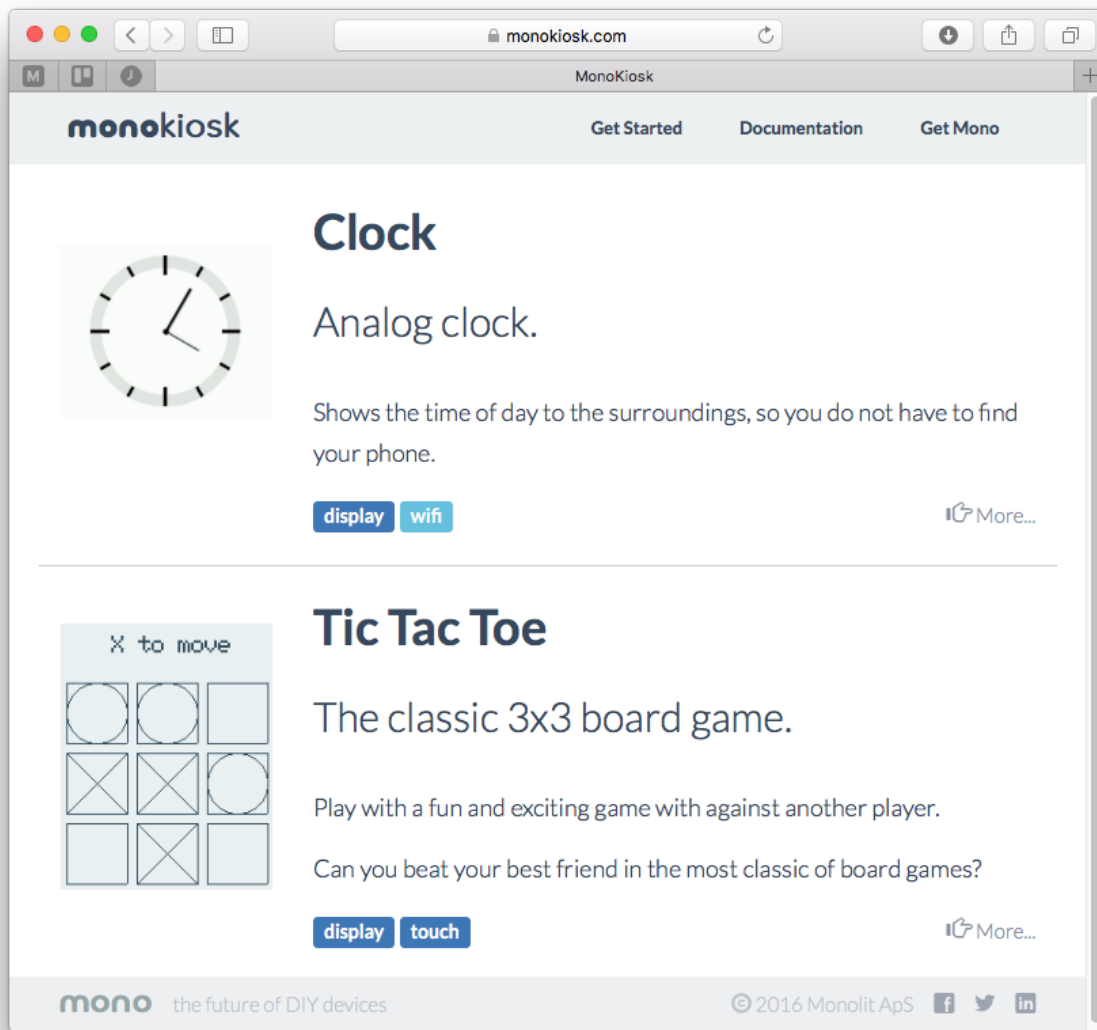

Currently there are a simple *Clock* app and a *Tic Tac Toe* app. But before you frantically click on one of these crazy mind blowing apps, you first need to install our *MonoMake* tool to install the application onto Mono.

MonoMake is an application that *programs* the application on Mono. Such a *programmer* transfers application files to mono, using the USB port. You need this tool to get the application from your computer to your Mono device. When you install applications from Monokiosk, the overall procedure is:

1. Connect Mono to your computer using an USB cable
2. Make sure Mono is *on*
3. Click the *Install* button in MonoKiosk, for the app you wish to install.

However, **first** you must download *MonoMake* itself, so click on the button that suits your system:

Choose the option that fits you or your OS. The downloads are installers that will install *monoprog* on your system.


Note: This software you have installed is the complete toolset for developing OpenMono applications. However, you

don't need to use that. Here, we are just using the tool *MonoMake*.

Install Tic Tac Toe

After you have download and installed the OpenMono SDK on your system, let's continue.

Go to the frontpage and click on the *Tic Tac Toe* app. You will now see this page, where you will see the *install button* at the bottom right:

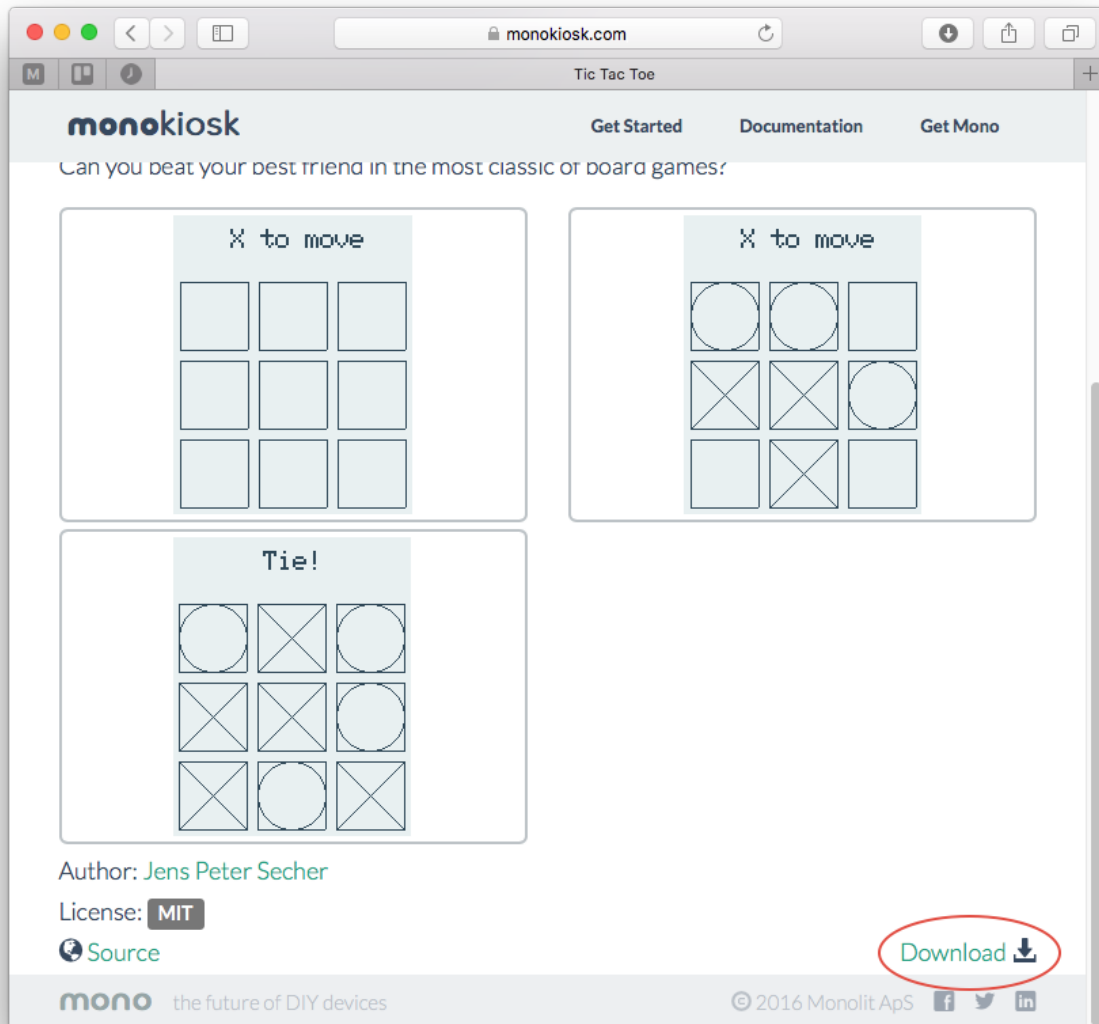


When you click the link, the *install* button, the *MonoMake* application will launch. *MonoMake* will automatically download the chosen application binary and install it on to Mono.

Now the application's binary code is loaded to Mono's internal flash memory. If everything goes well Mono will wake up and display the *Tic Tac Toe* app. Next, you can find a friend to play Tic Tac Toe with, you can install the other app or you could consider creating your own!

Manual installs

If, for some reason *MonoMake* does not launch when you click the *install* button - there are other options. Scroll down and click the *Download* button instead. This downloads the application binary file (*.elf*) to your computer. When the file is downloaded, launch *MonoMake* yourself.

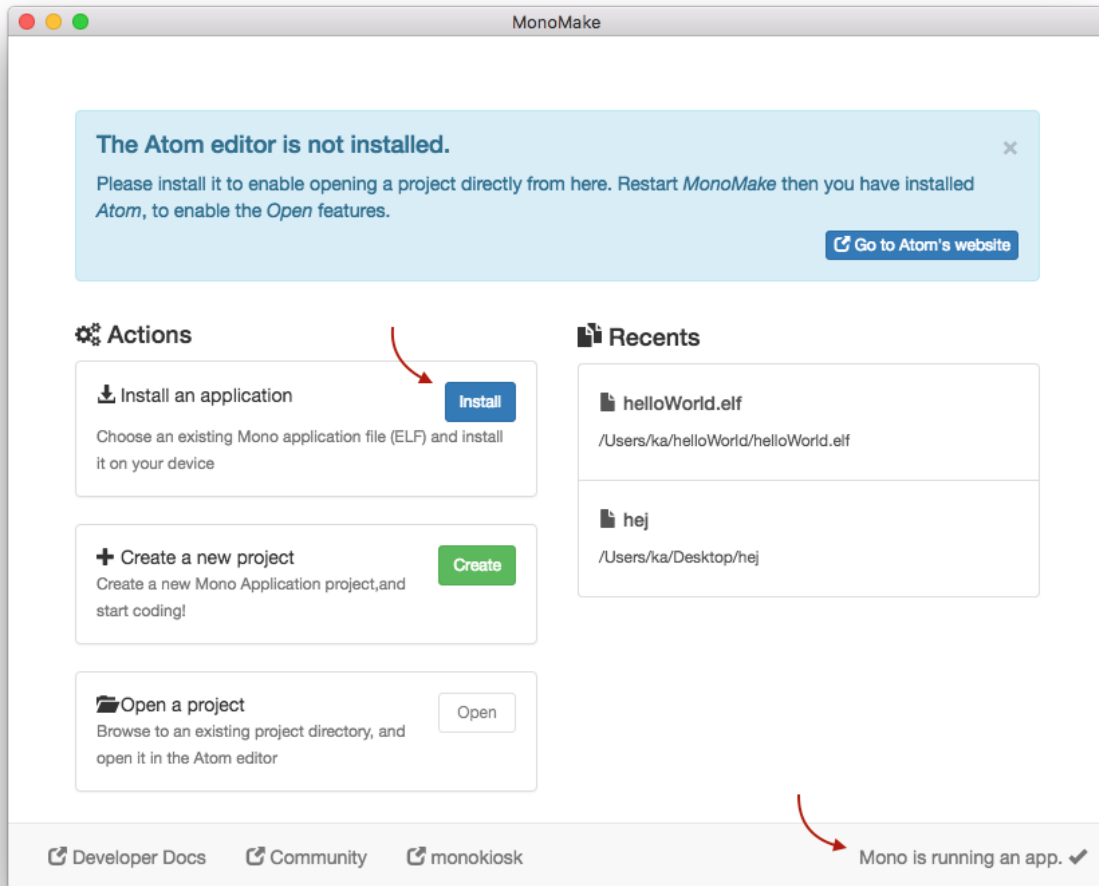

Make sure that *Monomake* can see your connected (and *running*) Mono device. This is indicated at the lower right corner. Now, click the blue *Install* button left of the center. A standard *Open file* dialog box will open. Navigate to the just downloaded application *.elf* file, and open it.

MonoMake installs the application onto Mono.

Tutorials

Essentials

Resetting Mono

Like most Wifi routers and alike, Mono has a reset switch hidden inside a cavity.

If you have gotten stuck and need to force reboot Mono, this guide will help you in resetting Mono. If you have made a coding mistake that might have caused Mono to freeze - then we shall later look at how force Mono into bootloader mode.

Hardware Reset

If you just need to trigger a hardware reset, follow these steps:



1. Find a small tool like a small pen, steel wire or paper clip
2. Insert the tool into the *reset cavity*, as displayed in the picture above. *Be aware not to insert it into the buzzer opening.*
3. Push down gently to toggle the reset switch, and lift up the tool.

Mono will reset. It will load the bootloader that waits for 1 sec, before loading the application programmed in memory.

Force load Bootloader

If you need to install an app from Monokiosk or likewise, it might be nice to force Mono to stay in bootloader - and not load the programmed application. You can do this by pressing the User button, when releasing the reset switch. Then Mono will stay in Bootloader and not load any application. You will be able to upload a new app to it with monoprogram.

To force Mono to stay in bootloader:

1. Press and hold the User button
2. Gently press and release the reset switch
3. Release the User button

The *stay in bootloader* mode is only triggered by the pressed User button, then awaking from reset. There are no timeouts. To exit from bootloader, you must do an ordinary hardware reset.

Caution: Do not leave Mono in bootloader mode, since this will drain the battery. If you are in doubt, just do an extra normal reset.

Monoprog can detect the Bootloader

If you have connected Mono to your computer, you can use the Monoprog-tool to detect if Mono is in bootloader. Open a console / terminal and type:

```
$ monoprog -d
```

Monoprog will tell you if it could detect Mono. If it can, it is in bootloader!

Software Resets

You can programmatically trigger a reset from code! What happens is the CPU will reset itself if you explicitly tell it to do so. (That is, writing to a specific register.) In Mono Framework there are 3 functions you can use to trigger a reset:

- *Ordinary Reset*, where bootloader runs for 1 sec.
- *Reset To Application*, where bootloader is skipped.
- *Reset To Bootloader*, where Mono stays in bootloader.

The 3 functions are static (or class methods) on `IApplcationContext`, and can be used like this:

```
// Ordinary Reset
mono::IApplcationContext::SoftwareReset();

// Reset to Application
mono::IApplcationContext::SoftwareResetToApplication();

// Reset to Bootloader
mono::IApplcationContext::SoftwareResetToBootloader();
```

Note that these functions will never return, since they cause the CPU to reset. So any code beneath the reset functions, will get be reached, just take up memory!

Using Mono's Serial port

Let us examine how to use Mono's built in USB Serial port, and how to monitor it from your computer

By default when you plug in Mono's USB cable to a computer, Mono will appear as a USB CDC device. If you run Windows you have to install a driver, please goto [this section](#) to see how.

Get a Serial Terminal

First you need a serial terminal on your computer. Back in the old Windows XP days there was *Hyper Terminal*, but I guess it got retired at some point. So both Mac/Linux and Windows folks need to go fetch a serial terminal application from the internet.

Windows Serial apps:

Mac / Linux Serial apps

- [CoolTerm](#)
- [Minicom](#) (What we are using!)
- [ZTerm](#) (Mac only)
- [SerialTools](#) (Mac only)

We are very happy with *minicom*, since it has a feature that makes it really great with Mono. More about that later! Unfortunately *minicom* does not run on Windows, so we are considering making our own serial terminal client for Windows - that is similar to *minicom*.

If you use Linux / Mac, you should properly install *minicom* now. But you do not have to, you can also use any of the other choices.

Installing *minicom*

To install *minicom* on a Debian based Linux you should just use *aptitude* or *apt-get*:

```
$ sudo aptitude install minicom
```

On Mac you need the package manager called [Homebrew](#). If you don't have it, go get it from their homepage. When you are ready type:

```
$ brew install minicom
```

Sending data from Mono

Transferring text or binary data from Mono is really easy. In fact we have standard I/O from the standard C library available! To write some text to the serial port just do:

```
printf("Hello Serial port!!\t\n");
```

Notice that we ended the line with `\t\n` and not only `\n`. That is because the serial terminal standard is quite old, therefore many serial terminals expects both a *carriage return* and a *line feed* character.

To capture output from Mono in a terminal, we need to continuously output text. Therefore we need to call the print function periodically.

In *app_controller.h*:

```
class AppController : mono::IApplication
{
public:

    //Add a timer object to our appController
    mono::Timer timer;
```

```
// just a counter variable - for fun
int counter;

// class constructor
AppController();

// add this method to print to the serial port
void outputSomething();

// ...
```

Then in *app_controller.cpp*:

```
AppController::AppController()
{
    // in the constructor we setup the timer to fire periodically (every half second)
    timer.setInterval(500);

    // we tell it which function to call when it fires
    timer.setCallback<AppController>(this, &AppController::outputSomething);

    // set the counter to zero
    counter = 0;

    //start the timer
    timer.Start();
}

void AppController::outputSomething()
{
    printf("I can count to: %i",counter++);
}
```

Compile and upload the app to Mono.

Note: We are following best practice here. We could also have created a loop and a `wait_ms()` and `printf()` statement inside. But that would have broken serial port I/O!


Connecting to Mono

When Mono is plugged in to the USB port, you should see a serial device on your computer. In Windows a *COM* port should be present in *Device manager*. On Linux / Mac there should exist a I/O device in the folder `/dev`. On Mac it would be named something like `/dev/cu.usbmodem1246`. On Linux the name could be `/dev/ttyACM0`.

If you use *minicom* you connect to the serial port with the `-D` flag, like this:

```
$ minicom -D /dev/cu.usbmodem1246
```

With PuTTY on Windows you should check the *COM* port number in *Device Manager* and type the this number in the *Serial line* text box:

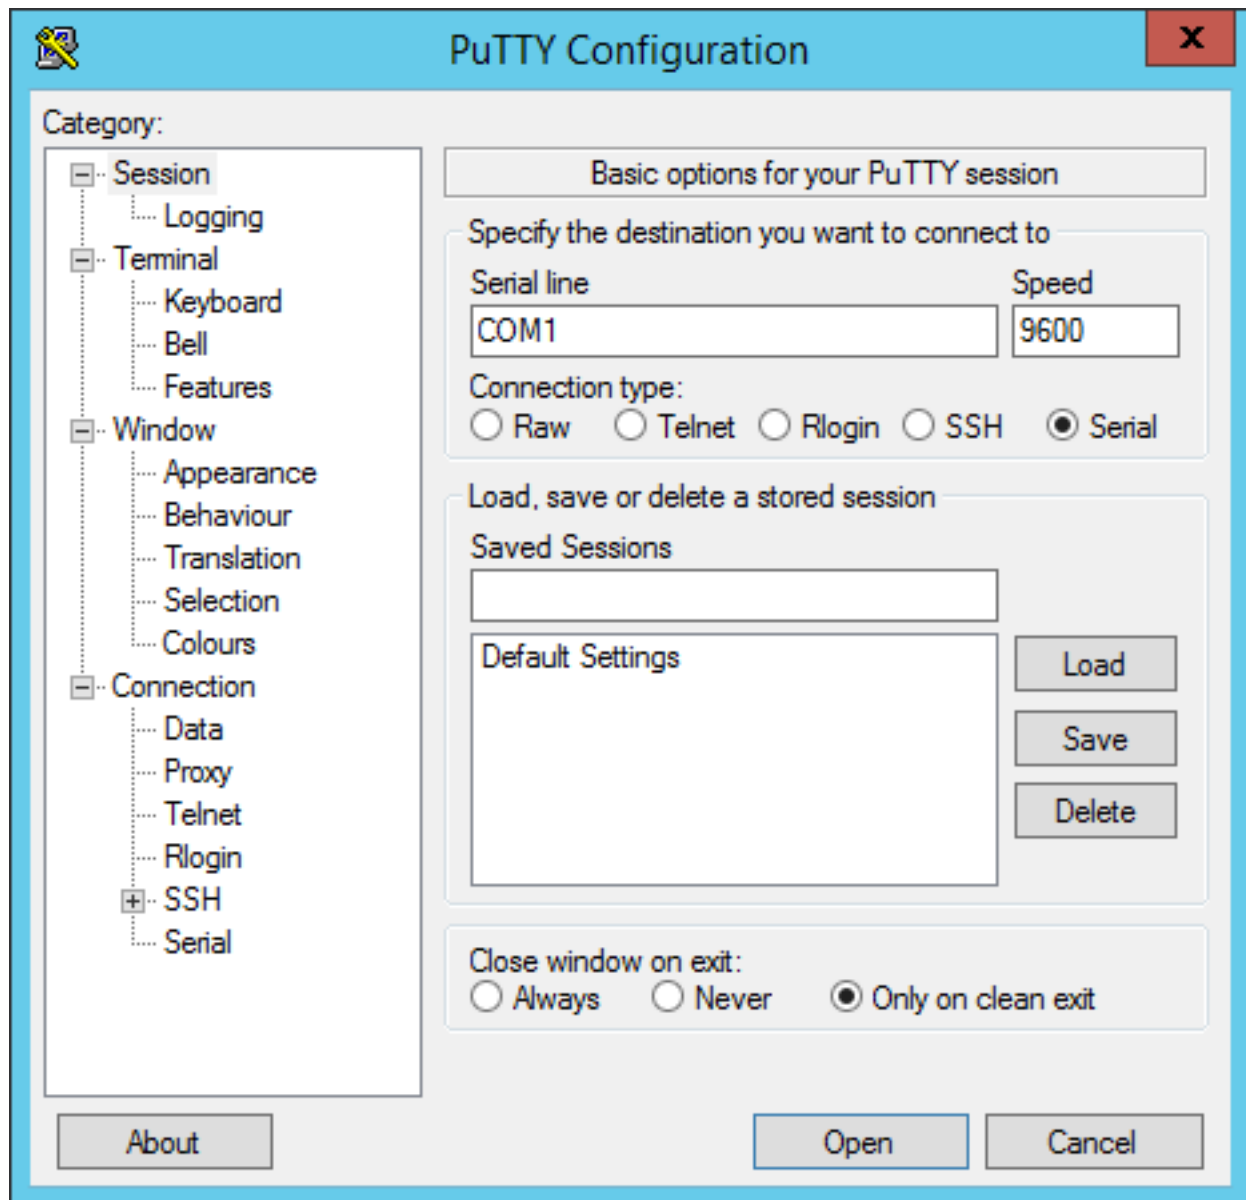

Now you should be connected to the Mono serial output:

```
I can count to: 3
I can count to: 4
I can count to: 5
I can count to: 6
```

Because Mono does not wait for you to open the serial port, you might lose some output. That is why you properly will not see *I can count to 0* and *I can count to 1*. At some point we might change this behaviour and add a larger output buffer on Mono.

Note: You can also read from the serial port using the standard `getc stdio` function. Avoid using `scanf` since this will block until the formatted input has been read from the serial port.

Reconnects and Resets

You will soon discover that every time Mono resets, when uploading new apps or likewise, the serial port disappears. If you are not using *minicom*, you will have to manually connect to the port again. That is why we prefer to use *minicom*, because it automatically connects again when the port re-appears.

If you are not using *minicom* you will get pretty tired of reconnecting over and over again. At some point you might even consider helping us out with a .NET based serial tool to resolve the issue :-)

Why does the serial port disappear?

Unlike Arduino, Mono does not have a dedicated serial port to USB chip. We use the CPU's built-in USB component to create the serial port. This means that when the CPU is reset, the USB port is reset. That efficiently ends the serial connection. There is no way around this issue, expect using a dedicated USB chip.

Reset over the USB

Like Arduino we also use the Serial connection to trigger resets. Before a new application can be uploaded to Mono, we have to put it into bootloader. This is done by a reset, just like Arduino does. We use the serial port's DTR line to trigger a reset. Mono continuously monitors the DTR line, ready to trigger a software reset on itself.

If you do not follow the coding best practice convention and do something ugly, like this:

```
while(1)
{
    // I just wanna stay here for the rest of time ...
}
```

You have effectively cut off the possibility of resetting using the DTR, to trigger a software reset.

Serial Port Windows Driver

Windows do not support mapping USB CDC devices to Serial ports (COM devices) out of the box. It needs an `.inf` file to tell it to do so. You can download an installer for this [INF file here](#), but it should have been installed automatically. The driver is included in both the [Monokiosk based installer](#) and the [SDK toolchain](#).

Sleep Mode

In this tutorial we will quickly demonstrate how to put Mono into sleep mode.

Mono has no physical on/off switch, so you cannot cut the power from the system. This means you *must always* provide a way for Mono to goto to sleep. Sleep mode is the closest we come to being powered off. Mono's power consumption in sleep mode is around 50 μ A (micro amperes), which is really close to no consumption at all.

Default behaviour

Because it is crucial to be able to turn off Mono (goto sleep mode), we provide this functionality by default. When you create a new project with:

```
$ monomake project MyNewProject
```

The SDK predefines the behaviour of the *User button*, to toggle sleep mode. This is important because controlling on/off functionality, is not what is first on your mind when developing new mono apps. So you don't have to consider it too much, unless to wish to use the *User button* for something else.

Sleep and USB

In our *v1.1* release of our SDK, we enabled sleep mode while connected to the USB. This means that triggering sleep will power-down Mono's USB port. Therefore our computer will loose connection to Mono if it goes to sleep.

When you wake up Mono, it will be enumerated once again.

Sleep and external power

Mono has the ability to provide power for components mounted either on the *Mono Shield Adaptor* or attached through the *3.5mm jack connector*. By default Mono provides 3.3V on this external power rail (called VAUX). To safe battery life, the VAUX power is turned off in sleep mode. This is the default behaviour, but you can change it if you need to.

In the *3.5mm jack connector* the power on J_TIP in sleep mode depends on the USB state. If USB is connected the voltage on J_TIP is 1.7V, because of leakage currents from VBUS. With no USB attached, the J_TIP voltage is 0.0V in sleep mode.

Warning: We have introduced this behaviour in *Release 1.4*. Before this version the VAUX line was not limited to 3.3V! Especially in sleep mode, the voltage rises to the battery's current voltage level. In *Release 1.4* we fixed this issue, by turning off auxillary power in sleep mode.

You can consult the [schematics](#) to see how the power system is configured.

Triggering sleep mode

Say we have an application that utilizes the *User button* to do something else, than toggling sleep mode. Now we need another way of going to sleep, so lets create a button on the touch screen to toggle sleep. First in our *app_controller.h* we add the *ButtonView* object to the class:

```
class AppController : public mono::IApplication {  
  
    // we add our button view here  
    mono::ui::ButtonView sleepBtn;  
  
    // ... rest of appcontroller.h ...  
}
```

In the implementation file (*app_controller.cpp*) we initialize the button, setting its position and dimensions on the screen. We also define the text label on the button:

```
AppController::AppController() :  
  
    //first we call the button constructor with a Rect object and a string  
    sleepBtn(Rect(10,175,150,40), "Enter Sleep"),  
  
    // here comes the project template code...  
    // Call the TextLabel's constructor, with a Rect and a static text  
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!")  
{
```

Now, we need to tie a function to the button's click handler. That means when the button is clicked, it automatically triggers a function to be called. We can call the standard static function for going to sleep, that is defined in the global `IAApplicationContext` object. The function is:

```
mono::IAApplicationContext::EnterSleepMode();
```

Normally, we could just add this function directly to the button's callback handler, but in this particular case it is not possible! The callback handler always expects a member function, not a static class function like `EnterSleepMode`. So we need to define a member function on our `AppController` and wrap the call inside that.

Inside `app_controller.h` add:

```
public:

    // The default constructor
    AppController();

    // we add our sleep method here:
    void gotoSleep();

    // Called automatically by Mono on device reset
    void monoWakeFromReset();
```

Then in the implementation file (`app_controller.cpp`), we define the body of the function to:

```
void AppController::gotoSleep()
{
    mono::IAApplicationContext::EnterSleepMode();
}
```

Lastly, we tell the `sleepBtn` object to call our function, when it gets clicked - we do this from `AppController`'s constructor:

```
// set another text color
helloLabel.setTextColor(display::TurquoiseColor);

// tell the button to call our gotoSleep function
sleepBtn.setClickCallback<AppController>(this, &AppController::gotoSleep);

// tell the button to show itself on the screen
sleepBtn.show();
```

Okay, go compile and install the app on Mono - and you should see this on the screen:



Try to press the button and you will see Mono goto sleep and turning off the display. In this example you wake Mono again just by pressing the *User button*.

Danger: Be aware that if you overwrite the *User Button* functionality, you are responsible for ensuring that Mono has a wake up source. A wake source is always a physical input pin interrupt. In most cases you should use the User button.

In another tutorial we shall see how you overwrite the *User button* functionality.

Complete sample code

For reference, here is the complete sample code of the tutorial:

app_controller.h:

```
#ifndef app_controller_h
#define app_controller_h

// Include the Mono Framework
#include <mono.h>

// Import the mono and mono::ui namespaces into the context
// to avoid writing long type names, like mono::ui::TextLabel
using namespace mono;
using namespace mono::ui;

// The App main controller object.
// This template app will show a "hello" text in the screen
class ApplicationController : public mono::IApplication {

    // we add our button view here
    mono::ui::ButtonView sleepBtn;

    // This is the text label object that will displayed
    TextLabelView helloLabel;
```



```

public:

    // The default constructor
    AppController();

    // we add our sleep method here:
    void gotoSleep();

    // Called automatically by Mono on device reset
    void monoWakeFromReset();

    // Called automatically by Mono just before it enters sleep mode
    void monoWillGotoSleep();

    // Called automatically by Mono right after after it wakes from sleep
    void monoWakeFromSleep();

};

#endif /* app_controller_h */

```

app_controller.cpp:

```

#include "app_controller.h"

using namespace mono::geo;

// Contructor
// initializes the label object with position and text content
// You should init data here, since I/O is not setup yet.
AppController::AppController() :

    //first we call the button constructor with a Rect object and a string
    sleepBtn(Rect(10,175,150,40), "Enter Sleep"),

    // Call the TextLabel's constructor, with a Rect and a static text
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!")
{

    // the label is the full width of screen, set it to be center aligned
    helloLabel.setAlignment(TextLabelView::ALIGN_CENTER);

    // set another text color
    helloLabel.setTextColor(display::TurquoiseColor);

    // tell the button to call our gotoSleep function
    sleepBtn.setClickCallback<AppController>(<this>, &AppController::gotoSleep);

    // tell the button to show itself on the screen
    sleepBtn.show();
}

void AppController::gotoSleep()
{
    mono::IApplicationContext::EnterSleepMode();
}

```

```
void AppController::monoWakeFromReset()
{
    // At this point after reset we can safely expect all peripherals and
    // I/O to be setup & ready.

    // tell the label to show itself on the screen
    helloLabel.show();
}

void AppController::monoWillGotoSleep()
{
    // Do any clean up here, before system goes to sleep and power
    // off peripherals.
}

void AppController::monoWakeFromSleep()
{
    // Due to a software bug in the wake-up routines, we need to reset here!
    // If not, Mono will go into an infinite loop!
    mono::IApplicationContext::SoftwareResetToApplication();
    // We never reach this point in the code, CPU has reset!

    // (Normally) after sleep, the screen memory has been cleared - tell the label to
    // draw itself again
    helloLabel.scheduleRepaint();
}
```

Coding

Using Wifi

Let us walk through the steps required to connect Mono to a Wifi access point, and download the content of a web page

Note: The network abstraction layer in *Mono Framework* is not implemented at this point. We will use the hardware layers directly, so this tutorial will be simpler in the future.

The Goal

We shall create a small mono application that connects to a Wifi access point and downloads a website. To achieve this, we need to accomplish the following steps:

1. Initialize the SPI communication to the Wifi module
2. Initialize the Wifi module
3. Connect to an access point, using either hardcoded credentials or read the credentials from SD card.
4. Using DHCP to get an IP address from the access point
5. Create a HTTP Get request to a URL and display the response

Setting up the project

First order of business is to create a new mono application project. I assume you already have installed the *developer tool chain*.

Open a terminal (or command prompt) and fire up this command:

```
$ monomake project wifi_tutorial
```

monomake will now create an application project template for us. Open the two source files (*app_controller.h* and *app_controller.cpp*) in your favorite code editor. In the header file (*.h*) we need to add 2 includes, to import the wireless module definitions:

```
#include <mono.h>
#include <wireless/module_communication.h>
#include <wireless/redpine_module.h>

using namespace mono;
using namespace mono::ui;
```

Also, in the header file we need to add member variables for the module to the *AppController* class definition. Two for the SPI communication and one the HTTP client class.

Note: The class *HttpClient* is a quick'n'dirty implementation, and is likely to be phased out to future releases of Mono Framework.

Therefore we extend the class members with:

```
class AppController : public mono::IApplication {

    // This is the text label object that will displayed
    TextLabelView helloLabel;

    // The hardware SPI port
    mbed::SPI spi;
    // The spi based communication interface for the module
    redpine::ModuleSPICommunication spiComm;

    // The http client object variable
    network::HttpClient client;

    // a console view to display html data
    mono::ui::ConsoleView<176, 110> console;

public:

    AppController();

    // ...
}
```

Now, we have imported the objects we are going to need, the next step is to initialize them properly.

Initializing the Communication channel

The wifi module is connected to Mono's MCU by a dedicated SPI. In the initial release of Mono Framework there is no abstraction layer for the Wifi module, so we have to initialize this SPI explicitly.

First we need to add the raw *mbed* SPI object to the *AppController*'s constructor list. Therefore we add two new lines next to the existing initialization of *helloLabel* object:

```
// You should init data here, since I/O is not setup yet.
AppController::AppController() :
    helloLabel(Rect(0,150,176,20), "Hi, I'm Mono!"),
    spi(RP_SPI_MOSI, RP_SPI_MISO, RP_SPI_CLK),
    spiComm(spi, NC, RP_nRESET, RP_INTERRUPT)
{
    // ...
}
```

So what is happening here? We are setting up two objects: the basic SPI port and a SPI based communication channel to the module (*spiComm*). The module uses a few additional hardware signals, like the reset and interrupt signals. Now we have initialized the communication to the module, so we are ready to send commands to it!

The first thing we wanna do is tell the module to boot up and begin listening for commands. But we can not do that from the constructor, because the module might not be powered yet. We need to initialize it from the *monoWakeFromReset()* method:

```
void AppController::monoWakeFromReset()
{
    //initialize the wifi module
    redpine::Module::initialize(&spiComm);

    //show the console view
    console.show();
}
```

Now the module will boot, so next we will tell it to connect to an access point.

Connecting to an Access Point

Let us begin with a hardcoded SSID and passphrase. (Still from inside the *monoWakeFromReset()* method.) Add this code line:

```
redpine::Module::setupWifiOnly("MY_SSID", "MY_PASSPHRASE");

// print something in the console
console.WriteLine("Connecting...");
```

Now the module will try to connect to the given access point, and expect to get a DHCP configured IP address. The *setupWifiOnly* function has a third parameter that defines the security setting. The default value is WPA/WPA2 Personal. Other supported options are: *No security*, *WEP* and *Enterprise WPA/WPA2*.

Caution: Almost all calls to the Wifi module are *asynchronous*. This means they add commands to a queue. The function call returns immediately and the commands will be processed by the applications run loop. So when the method returns, the network is not connected and ready yet.

Because the connecting process is running in the background, we would like to be notified when the network is actually ready. Therefore, we need to setup a callback method. To do that we add a new method to our *AppController* class. We add the method definition in the header file:

```
class AppController : mono::IApplication
{
    // ...

public:

    void networkReadyHandler();

    // ...
```

Next, we add the method body in the implementation file:

```
void AppController::networkReadyHandler()
{
    helloLabel.setText("Network Ready");
}
```

Notice that we use the existing `helloLabel` to display the network state on the screen.

Now, we need to tell the module to call our method, when the network is connected. We append this line to `monoWakeFromReset()`:

```
redpine::Module::setNetworkReadyCallback<AppController>(this, &
↪AppController::networkReadyHandler);
```

This sets up the callback function, such that the module will call the `networkReadyHandler()` method, on our *AppController* instance.

Tip: Callback functions are an important part of using the network on Mono. If you wish to familiarize yourself with the concept, please see the in-depth article: *Queued callbacks and interrupts*

If you feel for it, tryout the code we have written so far. If you monitor the serial port, you should see the Wifi module emitting debug information. Hopefully you should see the *Network Ready* text in screen after ~20 secs. If not, consult the serial terminal for any clue to what went wrong.

Download a website

Now that we have connected to an access point with DHCP, I take the freedom to assume that Mono now has internet access! So lets go ahead and download: this webpage!

To download a website means doing a HTTP GET request from a HTTP client, and here our `HttpClient` class member from earlier, comes into action.

Like the process of connecting to an access point was asynchronous, (happening in the background), the process of downloading websites is asynchronous. That means we are going to need another callback function, so lets define another method on *AppController.h*:

```
// ...

public:
```

```
void networkReadyHandler();

void httpHandleData(const network::HttpClient::HttpresponseData &data);

// ...
```

Notice the ampersand (&) symbol that define the data parameter as a reference. In the implementation file we add the function body:

```
void ApplicationController::httpHandleData(const network::HttpClient::HttpresponseData &
↪data)
{
    helloLabel.setText("loading");
    console.WriteLine(data.bodyChunk);

    if (data.Finished)
    {
        helloLabel.setText("Downloaded");
    }
}
```

HttpClient will return the HTML content in multiple calls, and you use the Finished member to see when all data has arrived. Here we just set the label content to the HTML chunk, so it is not so pretty to look at. When the response has been downloaded, we set the text label to display *Downloaded*.

Now, we are ready to setup the http client and fetch the webpage. We can use HttpClient only after the network is ready. So in the implementation file, add this to networkReadyHandler():

```
void ApplicationController::networkReadyHandler()
{
    helloLabel.setText("Network Ready");

    //fetch a webpage
    client = mono::network::HttpClient("http://developer.openmono.com/en/latest/
↪");

    //now the client will be fetching the web page
    // let setup the data callback
    client.setDataReadyCallback<AppController>(this, &
↪AppController::httpHandleData);
}
```

Using file I/O

In this tutorial we will see how to read and write files on an SD card.

Mono has a Micro SD Card slot and currently supports communicating with an SD card using an [SPI](#) interface. We have included both SD card I/O and FAT32 file system I/O in our framework. As soon as you have setup the SD card I/O you can use the familiar `stdio.h` file I/O.

Get an SD Card

First order of business is for you to obtain a MicroSD Card and format in good ol' FAT32. Then insert the card into Mono's slot and fire up a new project:

```
$ monomake project fileIO --bare
Creating new bare mono project: fileIO...
* fileIO/app_controller.h
* fileIO/app_controller.cpp
Writing Makefile: fileIO/Makefile...
Atom Project Settings: Writing Auto complete includes...
```

Note: Notice that we use the switch `--bare` when we created the project. This option strips all comments from the template code. This way you have a less verbose starting point.

Now `cd` into the `fileIO` directory and open the code files in your favourite code editor.

Initializing the SD Card

At this time we have yet to create a real abstraction layer for the file system initialization. Until we do, you need to initialize the SD card communication yourself. Therefore open `app_controller.h` and add these lines:

```
#include <mono.h>
// import the SD and FS definitions
#include <SDFileSystem.h>
#include <stdio.h>

class AppController : public mono::IApplication {
public:

    SDFileSystem fs; // create an instance of the FS I/O

    AppController();
```

Here we include the definitions for the both the SD card I/O and the file I/O. Next, we need to construct the `fs` object in `AppController`'s constructor. Go to `app_controller.cpp`:

```
AppController::AppController() :
    fs(SD_SPI_MOSI, SD_SPI_MISO, SD_SPI_CLK, SD_SPI_CS, "sd")
{
}
```

Here we initialize the file system and provide the library with the SPI lines for communicating with the SD Card. The last parameter `"sd"` is the mount point. This means the SD Card is mounted at `/sd`.

Writing to a file

Let us write a file in the SD card. We use the standard C library functions `fopen` and `fwrite`, that you might know - if you ever coded in C.

So, to write some data to a file we insert the following code in the `monoWakeFromReset` method:

```
void AppController::monoWakeFromReset ()
{
    FILE *file = fopen("/sd/new_file.txt", "w");

    if (file == 0) {
        printf("Could not open write file!\r\n");
    }
}
```

```
        return;
    }
    else {
        const char *str = "Hello file system!\nRemember coding in C?";
        int written = fwrite(str, 1, strlen(str), file);
        printf("Wrote %d bytes\n", written);
        fclose(file);
    }
}
```

Here we open/create a file on the SD card called `new_file.txt`. The `fopen` function returns a file descriptor (`FILE*`) that is 0 if an error occurs.

If `file` is not 0 we write some text to it and finally close (`fclose`) the file to flush the written data to the disk. You should always close files when you are done writing to them. If you don't, you risk losing your written data.

Reading from a file

So we just written to a file, now let us read what we just wrote. Append the following to the `monoWakeFromReset` method:

```
FILE *rFile = fopen("/sd/new_file.txt", "r");
if (rFile == 0) {
    printf("Could not open read file\n");
    return;
}

char buffer[100];
memset(buffer, 0, 100);
int read = fread(buffer, 1, 100, rFile);
printf("Read %d bytes from file\n", read);
printf("%s\n", buffer);
fclose(rFile);
```

Here we first open the file we previously written. Then, we create a byte buffer to hold the data we read from the file. Because the initial content of `buffer` is nondeterministic, we zero its contents with the `memset` call.

Note: We do this because `printf` needs a *string terminator*. A string terminator is a 0 character. Upon accounting a 0 `printf` will know that the end of the string has been reached.

The `fread` function reads the data from the file. It reads the first 100 bytes or until `EOF` is reached. Then we just print the contents of `buffer`, which is the content of the file.

Standard C Library

As mentioned earlier, you have access to the file I/O of `stdlib`. This means you can use the familiar `stdlib` file I/O API's.

These include:

- `fprintf`
- `fscanf`
- `fseek`

- `ftell`
- `fflush`
- `fgetc`
- `fputc`
- etc.

When you for example read or write from the serial port (using `printf`), you in fact just use the `stdout` and `stdin` global pointers. (`stderr` just maps to `stdout`.)

See the API for the stdlib file I/O here: www.cplusplus.com/reference/cstdio

SD Card and sleep

Currently the SD card file system library do not support sleep mode. When you wake from sleep the SD card have been reset, since its power source has been off while in sleep.

This means you cannot do any file I/O after waking from sleep. Until we fix this you need to reset Mono to re-enable file I/O.

Custom Views

In this tutorial we shall create our own custom view, that utilizes the drawing commands to display content on the screen.

Our software framework contains a selection of common *View* classes. These include `TextLabels`, `Buttons` and things like progress and state indicators. But you also have the ability to create your own views, to display custom content. Before we begin it is useful to know a little bit about views. Also, you should see the [Display System Architecture](#) article.

About Views

We have stolen the concept of a *View* from almost all other existing GUI frameworks. A *view* is a rectangular frame where you can draw primitives inside. All views define a *width* and *height*, along with a *x,y* position. These properties position all views on Mono's display - with respect to the display coordinates.

As you can see on the figure, the display coordinates have a *origo* at the top left corner of the screen. The positive *Y* direction is downward. In contrast to modern GUI frameworks Mono *views* cannot be nested and does not define their own internal coordinate system. All coordinates given to the drawing command are in display coordinates. It is your hassle to correct for the view's *x,y* offsets.

Views can be Invisible and Dirty

All views has a visibility state. This state is used by the display system to know if it can render views to the screen. Only visible views are painted. By convention all views must be created in the *invisible* state. Further, views can also be *dirty*. This means that the view has changes that need to be rendered on the screen. Only dirty views are rendered. You can mark a view as dirty by calling the method: `scheduleRepaint()`.

Painting views

When you create your own views, you must subclass the `View` class and you are required to overwrite 1 method: `repaint()`. This is the method that paints the view on the screen. The method is automatically called by the display system - you should never call it manually!

All views share a common `DisplayPainter` object that can draw primitives. You should draw primitives only from inside the `repaint()` method. If you draw primitives from outside the method, you might see artifacts on the screen.

The Goal

In this tutorial I will show you how to create a custom view that displays two crossing lines and a circle. To accomplish this we use the `DisplayPainter` routines `drawLine()` and `drawCircle()`, along with other routines to make our view robust. This means it does not make any assumptions about the screen state.

We want the cross and circle to fill the views entire *view rectangle*, so we use the view dimensions as parameters for the drawing functions.

Creating the project

First go ahead and create a new project:

```
$ monomake project customView --bare
```

Note: We use the `--bare` option to create an empty project without any example code.

It is good practice to create our custom view in separate files. Create two new files:

- `custom_view.h`
- `custom_view.cpp`

In the header file we define our new custom view class:

```
class CustomView : public mono::ui::View {
public:

    CustomView(const mono::geo::Rect &rect);

    void repaint();
};
```

We overwrite only the constructor and the repaint function. The default constructor for *views* takes a `Rect` that defines the views position and dimensions.

In the implementation file (`custom_view.cpp`) we add the implementation of the two methods:

```
// Constructor
CustomView::CustomView(const mono::geo::Rect &rect) : mono::ui::View(rect)
{
}

// and the repaint function
```

```

void CustomView::repaint()
{
    // enable anti-aliased line painting (slower but prettier)
    this->painter.useAntialiasedDrawing();

    // setup the view background color to pitch black
    painter.setBackgroundColor(mono::display::BlackColor);

    //draw the black background: a filled rect
    painter.drawFillRect(this->ViewRect(), true);

    // set the foreground color to a deep blue color
    painter.setForegroundColor(mono::display::MidnightBlueColor);

    // draw an outline rect around the view rectangle
    painter.drawRect(this->ViewRect());

    //set a new foreground color to red
    painter.setForegroundColor(mono::display::RedColor);

    //draw the first line in the cross
    painter.drawLine(this->ViewRect().UpperLeft(), this->ViewRect().LowerRight());

    //draw the second line in the cross
    painter.drawLine(this->ViewRect().LowerLeft(), this->ViewRect().UpperRight());

    //now we will draw the circle, with a radius that is the either width
    // or height - which ever is smallest.
    int radius;
    if (this->ViewRect().Width() < this->ViewRect().Height())
        radius = this->ViewRect().Width()/2;
    else
        radius = this->ViewRect().Height()/2;

    // create a circle object with center inside the views rectangle
    mono::geo::Circle c(this->ViewRect().Center(), radius - 1);

    //set the foreground color
    painter.setForegroundColor(mono::display::WhiteColor);

    //draw the circle
    painter.drawCircle(c);

    // disable anti-aliasing to make drawing fast for any other view
    painter.useAntialiasedDrawing(false);
}

```

Now, this code snippet is a mouthful. Let me break it down to pieces:

The constructor

Our constructor simply forwards the provided `Rect` object to the parent (`View`) constructor. The parent constructor will take care of initializing the our views properties. In our implementation we simply call the parent constructor and leave the methods body empty.

The repainting

This is here we actually paint the view. As mentioned earlier all views share a global `DisplayPainter` object. This object holds a set of properties like paint brush colors and anti-aliasing settings. Therefore, to be sure about what colors you are painting, you should always set the colors in your `repaint()` method.

We start by enabling anti-aliased drawing of lines. This slows down the painting process a bit, but the lines looks much smoother. Next, we set the *painters* background brush color to black. With the black color set, we draw a filled rectangle clearing the entire area of the view. This is important because there might be some old graphics present on the screen.

To highlight the views boundary rectangle we draw an outlined rectangle with the dimension of the views own rectangle. You can say we give the view a border.

Next, we begin to draw the crossing lines - one at the time. The `drawLine` routine take the begin and end points of the line. We use a set of convenience methods on the `Rect` class to get the positions of the *view rectangle*'s corners.

The `Circle` class defines circles by a center and a radius. We can get the *view rectangles* center using another convenient method on the `Rect` object. But we need to do a little bit of calculations to get the radius. We use the smallest of the width and height, to keep the circle within the view boundaries. (And subtract 1 to not overwrite the border.)

Lastly, we disable the anti-aliased drawing. To leave the `DisplayPainter` as we found it.

The Result

Now, we must add our *CustomView* to our application. This means we must use it from the *AppController*. Therefore, include the header file in *app_controller.h*, and add our *CustomView* as a member variable:

```
#include "custom_view.h"

class AppController : public mono::IApplication {
public:

    CustomView cv;

    AppController();
    //...
```

Finally, we need to initialize our view correctly in *AppController*'s constructor and set the views visibility state by calling the `show()` method.


In *app_controller.cpp* add:

```
AppController::AppController() :
    cv(mono::geo::Rect(20, 30, 136, 70))
{
}

void AppController::monoWakeFromReset()
{
    cv.show();
}
```

Notice that we set the views position and dimensions in the constructor, by defining a `Rect` `((20, 30, 136, 70))`.

Do a `make install` and our custom should look like this on your Mono:

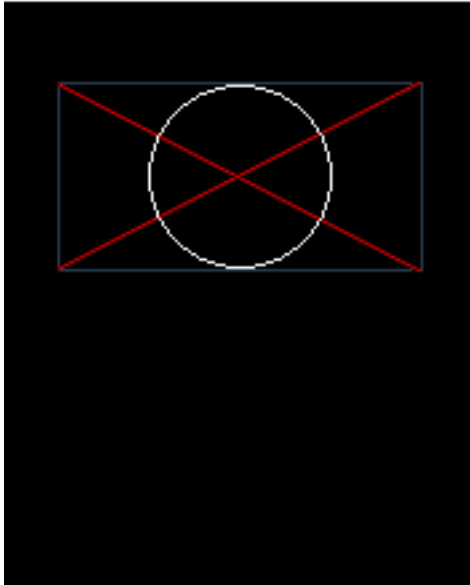

Because we use the views own dimensions to draw the primitives, the view will paint correctly for all dimensions and positions.

Humidity app

Humidity hardware setup


The purpose of this tutorial is to build a humidity app.



Sensor

To get humidity readings into my Mono, I will need a humidity sensor. For this app I will use the relatively low cost sensors [DHT11](#) and [DHT22](#). Their underlying hardware communication protocol is the same, but the interpretation of

the readings differ slightly (DHT22 has better resolution).

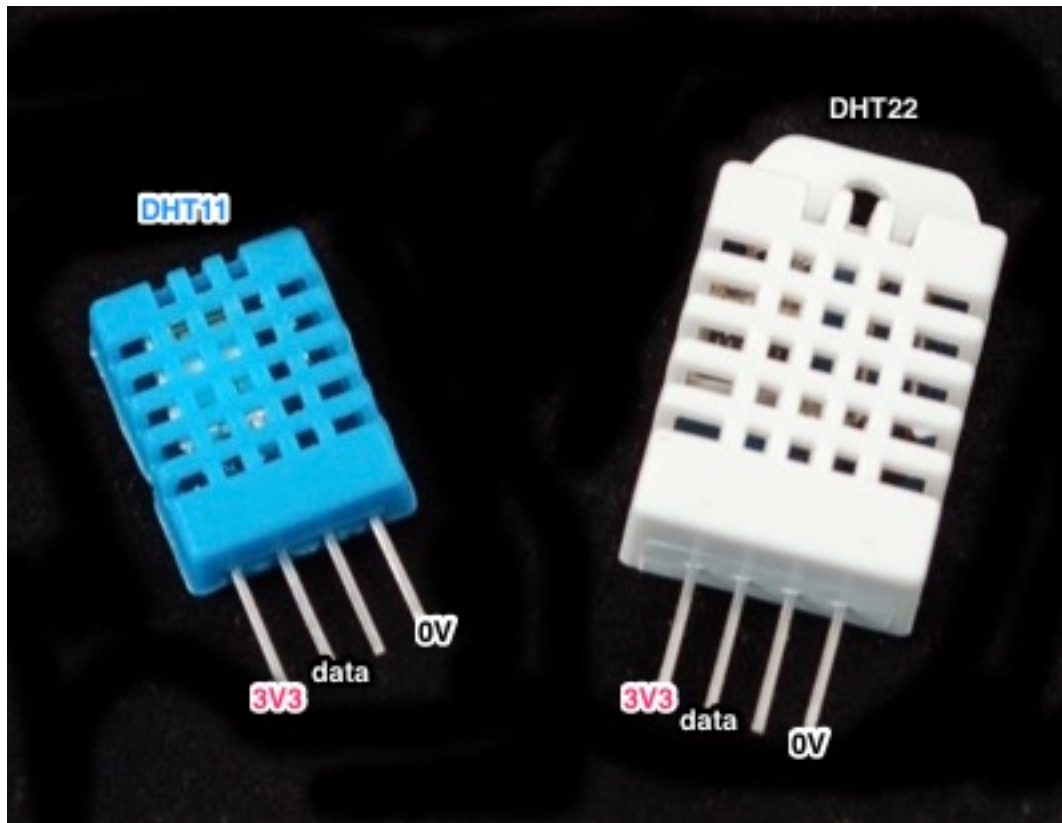

Connecting the sensor to Mono

The sensor uses a single wire to transmit data, and it must get power through two additional wires (3.3V and 0V).

So I need three wires in total from Mono to the sensor. Mono's mini-jack accommodates a total of four wires, so I will use a mini-jack connector and solder a set of wires to it. For this particular application, I could use a regular three-wire mini-jack, but the mini-jack connector I have has four connections, so I will solder all four wires and reserve the fourth wire for future experiments.



Here I have put a red wire on the tip, a white wire on ring 1 (the one next to the tip), a black wire on the sleeve. The green wire is connected to ring 2, but it is not used in the app.

With that taken care of, I can connect the sensor to my Mono and start pulling out data from the sensor.

Data communication

To sanity check the connection, I will make the simplest possible app that can request a reading from the sensor, and then view the result on an oscilloscope. **You do not need to do this**, of course, but I will need to do that to show you what the sensor communication looks like.

An application to get the sensor talking must put 3.3V on the tip (red wire), and then alternate the data line (white wire) between 3.3V and 0V to tell the sensor that it needs a reading. The sleeve (black wire) is by default set to 0V, so nothing needs to be setup there.

More specifically, the data line must be configured to be an output pin with [pullup](#). To request a reading from the sensor, the data line needs to be pulled down to 0V for 18ms, and then set back to 1. After that, the sensor will start talking.

The following program makes such a request every 3 seconds.

```
#include <mono.h>
#include <mbed.h>


class AppController
:
    public mono::IApplication
{
    mono::Timer measure;
    mbed::Ticker ticker;
    mono::io::DigitalOut out;
public:
    AppController()
    :
        measure(3*1000),
        out(J_RING1,1,PullUp),
    {
        measure.setCallback<AppController>(this,&AppController::requestSensorReading);
    }
    void monoWakeFromReset ()
    {
        put3V3onTip();
        measure.Start();
    }
    void monoWillGotoSleep ()
    {
        turnOffTip();
    }
    void monoWakeFromSleep () {}
    void put3V3onTip ()
    {
        DigitalOut(VAUX_EN,1);
        DigitalOut(VAUX_SEL,1);
        DigitalOut(JPO_nEN,0);
    }
    void turnOffTip ()
    {
        DigitalOut(JPO_nEN,1);
    }
    void requestSensorReading ()
    {
        out = 0;
    }
}
```



```
    ticker.attach_us(this, &AppController::IRQ_letGoOfWire, 18*1000);  
}  
void IRQ_letGoOfWire ()  
{  
    out = 1;  
}  
};
```

Side note: I use the `IRQ_` prefix on functions that are invoked by interrupts to remind myself that such functions should not do any heavy lifting.

When I connect Mono to the sensor, and hook up an oscilloscope to the data and ground wires, then I get the following picture of the communication when I run the app.

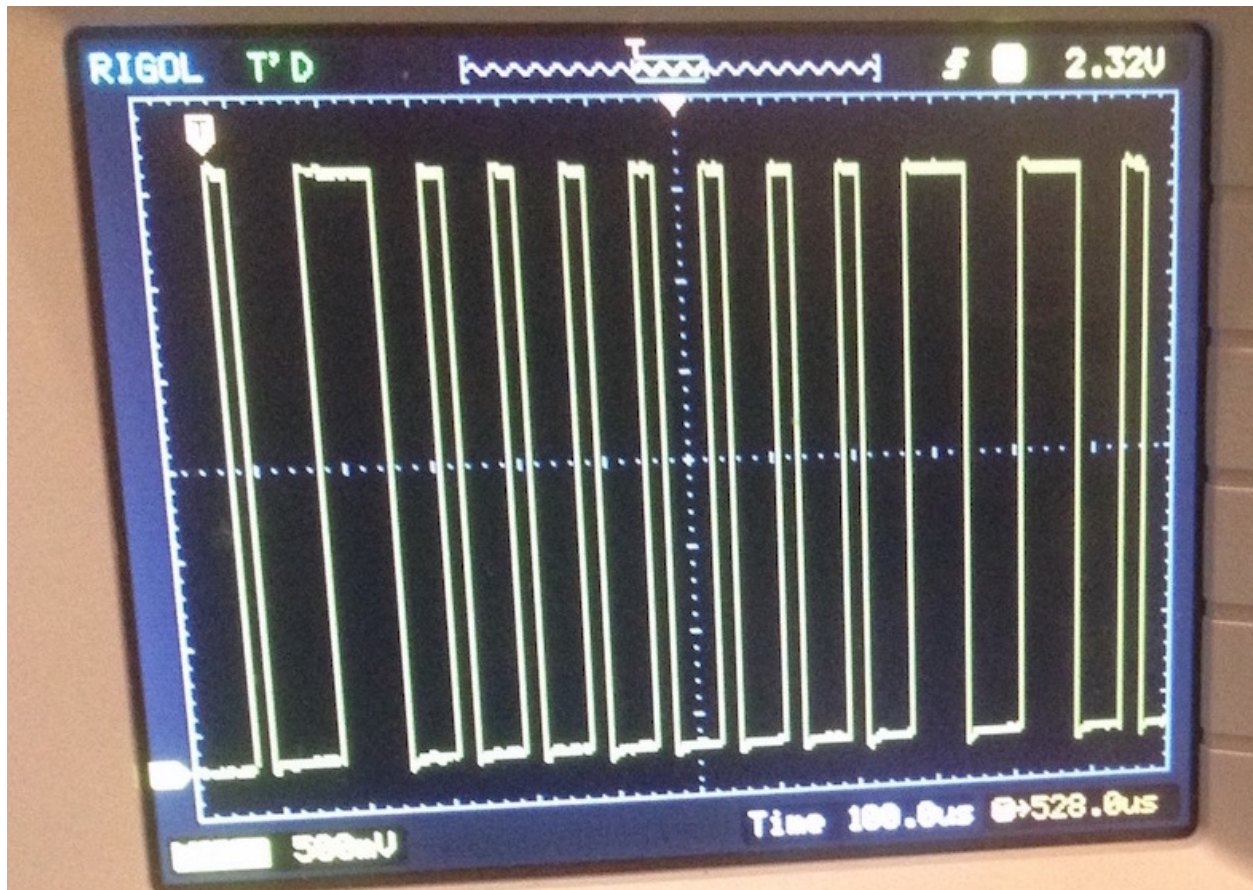

To the left you can see a tiny bit of the end of the 18ms period, ending in a rising edge (the transition from 0V to 3.3V) marked by **T** (the trigger point). From there on, the sensor takes over and starts alternating the data line between 3.3V and 0V.

The first 3.3V period is just a handshake, and after that the length of each 3.3V period determines whether data sent from the sensor is a logical 1 or a logical 0. For the screenshot above, the visible part of data is 0000000110.

What exactly does that mean? Well, I will tell you in the next part.

Humidity app

In the *first part* of this Humidity app tutorial, I showed how to connect a humidity sensor to Mono. Now, I will show how to get and display humidity and temperature readings.

Displaying readings

The humidity sensor measures both humidity and temperature, and I want these readings shown in a nice big font and funky colours.

```
#include <mono.h>
#include <ptmono30.h>
using mono::geo::Rect;
using mono::ui::TextLabelView;

class AppController
:
public mono::IApplication
{
    TextLabelView humidityLabel;
    TextLabelView humidityValueLabel;
    TextLabelView temperatureLabel;
    TextLabelView temperatureValueLabel;
public:
    AppController()
    :
        humidityLabel(Rect(0,10,176,20),"humidity"),
        humidityValueLabel(Rect(0,30,176,42),"--.--"),
        temperatureLabel(Rect(0,80,176,20),"temperature"),
        temperatureValueLabel(Rect(0,100,176,42),"--.--")
    {
    }
    void monoWakeFromReset ()
    {
        humidityLabel.setAlignment(TextLabelView::ALIGN_CENTER);
        humidityLabel.setTextColor(TurquoiseColor);
        humidityValueLabel.setAlignment(TextLabelView::ALIGN_CENTER);
        humidityValueLabel.setFont(PT_Mono_30);
        humidityValueLabel.setTextColor(AlizarinColor);
        temperatureLabel.setAlignment(TextLabelView::ALIGN_CENTER);
        temperatureLabel.setTextColor(TurquoiseColor);
        temperatureLabel.setAlignment(TextLabelView::ALIGN_CENTER);
        temperatureValueLabel.setAlignment(TextLabelView::ALIGN_CENTER);
        temperatureValueLabel.setFont(PT_Mono_30);
        temperatureValueLabel.setTextColor(AlizarinColor);
        humidityLabel.show();
        humidityValueLabel.show();
        temperatureLabel.show();
        temperatureValueLabel.show();
    }
    void monoWillGotoSleep () {}
    void monoWakeFromSleep () {}
};
```

Getting data from the sensor

From the *first part* of this tutorial, you know how to start a reading from the sensor, but it gets somewhat more complicated to capture and interpret the data from the sensor.

The data from the sensor is a series of bits, where each bit value is determined by the length of each wave. So I can make my app to trigger on the start of each new wave and then record the time that has passed since the the last wave started. The triggering can be done by attaching an interrupt handler to the data wire, which is done by using the `InterruptIn` class from the `mbed` library.

Compared to the *first version*, I now have an array `bits` and an index `bitIndex` into this array so that I can collect the bits I read from the sensor. The `requestSensorReading` function now resets `bitIndex` before requesting a new reading, and `IRQ_letGoOfWireAndListen` sets up the function `IRQ_falling` to get called every time there is a *falling edge* on the data line from the sensor:

```
#include <mono.h>
#include <mbed.h>
using mono::io::DigitalOut;

#define LEADBITS 3
#define TOTALBITS LEADBITS+5*8

class AppController
:
public mono::IApplication
{
    mono::Timer measure;
    mbed::Ticker ticker;
    mbed::InterruptIn in;
    DigitalOut out;
    uint8_t bits [TOTALBITS];
    size_t bitIndex;
    uint32_t usLastTimeStamp;
public:
    AppController()
    :
        measure(3*1000),
        /// It is important that InterruptIn in initialised...
        in(J_RING1),
        /// ...before DigitalOut because they use the same pin, and the initialisation
        /// sets the pin mode, which must be pull-up.
        out(J_RING1,1,PullUp)
    {
        measure.setCallback<AppController>(this,&AppController::requestSensorReading);
    }
    void monoWakeFromReset ()
    {
        put3V3onTip();
        measure.Start();
    }
    void monoWillGotoSleep ()
    {
        turnOffTip();
    }
    void monoWakeFromSleep () {}
    void put3V3onTip ()
    {
        DigitalOut(VAUX_EN,1);
    }
};
```

```

        DigitalOut (VAUX_SEL, 1);
        DigitalOut (JPO_nEN, 0);
    }
    void turnOffTip ()
    {
        DigitalOut (JPO_nEN, 1);
    }
    void requestSensorReading ()
    {
        bitIndex = 0;
        out = 0;
        ticker.attach_us(this, &AppController::IRQ_letGoOfWireAndListen, 18*1000);
    }
    void IRQ_letGoOfWireAndListen ()
    {
        out = 1;
        usLastTimeStamp = us_ticker_read();
        in.fall(this, &AppController::IRQ_falling);
    }
    void IRQ_falling ()
    {
        uint32_t usNow = us_ticker_read();
        uint32_t usInterval = usNow - usLastTimeStamp;
        usLastTimeStamp = usNow;
        uint8_t bit = (usInterval < 100) ? 0 : 1;
        bits[bitIndex] = bit;
        ++bitIndex;
        if (bitIndex >= TOTALBITS)
        {
            in.disable_irq();
            // TODO:
            //async(this, &AppController::collectReadings);
        }
    }
};

```

The `IRQ_falling` function calculates the time difference between the last falling edge on the data from the sensor, and if that interval is less than 100 μ s, then the received bit is a 0; otherwise it is a 1. When enough bits have been received, the interrupt is turned off so that I will stop receiving calls to `IRQ_falling`.

I use the `IRQ_` prefix on functions that are invoked by interrupts to remind myself that such functions should not do any heavy lifting. That is also why the (to be done) processing of the received bits is wrapped in an `async` call.

Interpreting the data from the sensor

Up until now, it has made no difference whether I was using a DHT11 or DHT22 sensor. But now I want to implement the `collectReadings` function to interpret the bits I get back from the sensor, and then the type of sensor matters.

I will start with the DHT11 sensor, which only gives me the integral part of the humidity and temperature value. So I need to go through the array of bits, skip the initial handshakes, dig out the humidity, dig out the temperature, and finally update the display with the new values:

```

// DHT11
void collectReadings ()
{
    uint16_t humidity = 0;
    for (size_t i = LEADBITS; i < LEADBITS + 8; ++i)

```

```
{
    size_t index = 7 - (i - LEADBITS);
    if (1 == bits[i])
        humidity |= (1 << index);
}
uint16_t temperature = 0;
for (size_t i = LEADBITS + 16; i < LEADBITS + 24; ++i)
{
    size_t index = 7 - (i - LEADBITS - 16);
    if (1 == bits[i])
        temperature |= (1 << index);
}
humidityValueLabel.setText(String::Format("%d%%", humidity)());
humidityValueLabel.scheduleRepaint();
temperatureValueLabel.setText(String::Format("%dC", temperature)());
temperatureValueLabel.scheduleRepaint();
}
```

For the DHT22 sensor, the [values have one decimal of resolution](#). So I need to do a little bit more manipulation to display the reading, because the Mono framework do not support formatting of floating point:

```
// DHT22
void collectReadings ()
{
    uint16_t humidityX10 = 0;
    for (size_t i = LEAD; i < LEAD + 16; ++i)
    {
        size_t index = 15 - (i - LEAD);
        if (1 == bits[i])
            humidityX10 |= (1 << index);
    }
    int humiWhole = humidityX10 / 10;
    int humiDecimals = humidityX10 - humiWhole*10;
    uint16_t temperatureX10 = 0;
    for (size_t i = LEAD + 16; i < LEAD + 32; ++i)
    {
        size_t index = 15 - (i - LEAD - 16);
        if (1 == bits[i])
            temperatureX10 |= (1 << index);
    }
    int tempWhole = temperatureX10 / 10;
    int tempDecimals = temperatureX10 - tempWhole*10;
    humidityValueLabel.setText(String::Format("%d.%0d%", humiWhole,
↪humiDecimals)());
    humidityValueLabel.scheduleRepaint();
    temperatureValueLabel.setText(String::Format("%d.%0dC", tempWhole,
↪tempDecimals)());
    temperatureValueLabel.scheduleRepaint();
}
```

What is still missing is detecting negative temperatures, unit conversion and [auto sleep](#), but I will leave that as an exercise. Of course, you *could* cheat and look at the full app in [MonoKiosk](#).

Quick Examples

Counting variable on mono's screen.

This is a small example of how to show a counting variable on mono's screen.

Warning: This is a *draft article*, that is *work in progress*. It still needs some work, therefore you might stumble upon missing words, typos and unclear passages.

When mono (and some Arduino's) runs a program there is more going on than what you can see in the setup() and main() loop. Every time the main loop is starting over, mono will do some housekeeping. This includes tasks as updating the screen and servicing the serial port. This means that if you use wait functions or do long intensive tasks in the main loop, mono will never have time for updating the screen or listening to the serial port. This will also affect monos ability to receive a reset announcement, which is important every time you are uploading a new sketch.

If you are running into this you can always put mono into bootloader manually

1. press and hold down the user button on the side.
2. press and release the reset switch with a clips.
3. release the user button.

To avoid doing this every time the following example uses an alternative to the wait function. To slow down the counting, we here use a variable to count loop iterations and an if() to detect when it reaches 1000 and then increment the counter and update the label on the screen.

Warning: When using this method the timing will be highly dependent on what mono is doing for housekeeping.

For the time being the housekeeping is not optimized, we will work on this in near future. This means that the timing in your program will change when we update the framework. We are working on making a tutorial that shows how to make time-critical applications.

```

/**
 *
 * This is a small example of how to show a counting variable on mono's screen.
 *
 * Instead of using a delay function to slow down the counting, I here use a
↪variable to count loop iterations
 * and an if() to detect when it reaches 1000 and then increment the counter and
↪update the label on the screen.
 *
 */
#include <mono.h>

mono::ui::TextLabelView textLbl(mono::geo::Rect(0,20,176,20),"Hi, I'm Mono");

int loopIterations;
int counter;

void setup()
{
    textLbl.setTextColor(mono::display::WhiteColor);
    textLbl.show();

    // to prevent the framework from dimming the light
    CY_SET_REG8( CYREG_PRT5_BYP, 0 );
↪this will affect all pins in port 5                                     // attention:

```

```
CyPins_SetPinDriveMode( CYREG_PRT5_PC1, CY_PINS_DM_STRONG ); // set drivemode_
↪to strong for TFT LED backlight
CyPins_SetPin( CYREG_PRT5_PC1 ); // set pin high_
↪for TFT LED backlight

}

void loop()
{
    loopIterations++;

    if( loopIterations >= 1000 )
    {
        loopIterations = 0;
        counter++;
        textLbl.setText( mono::String::Format("count: %i", counter));
    }
}
```

Attention: This example uses a hack to prevent dimmer of the display. This is only a temporary solution, and is not recommended. You should replace any use of the code when we release a best-practice method.

Adding a Button to the Screen

In this quick tutorial we shall see how to add a set of push buttons to the screen.

The SDK comes this standard classes for screen drawing and listening for touch input. One of these classes are `ButtonView`. `ButtonView` display a simple push button and accepts touch input.

Reacting to clicks

Let us go create a new Mono project, fire up your terminal and:

```
$ monomake project buttonExample
```

To create a button on the screen we first add a `ButtonView` object to `AppController`. Insert this into `app_controller.h`:

```
class AppController : public mono::IApplication {

    // This is the text label object that will displayed
    TextLabelView helloLabel;

    // We add this: our button object
    ButtonView btn;

public:

    // The default constructor
    AppController();

    // We also add this callback function for button clicks
    void buttonClick();
```

We added a member object for the button itself and a member method for its callback. This callback is a function that is called, then the button is clicked.

Now, in the implementation file (`app_controller.cpp`), we add the button the constructor initializer list:

```
AppController::AppController() :
    // Call the TextLabel's constructor, with a Rect and a static text
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!"),

    // Here we initialize the button
    btn(Rect(20, 175, 136, 40), "Click me!")
{
}
```

The button's constructor takes 2 arguments: *position and dimension* rectangle and its *text label*. The first argument is a `Rect` object, it defines the rectangle where the Button lives. This means it will draw itself in the rectangle and listen for touch input in this rectangle:

The second argument is the text label that is displayed inside the button. In this example it is just the text *Click me!*

To trigger a response when we click the button, we need to implement the function body for the `buttonClick` method. In `app_controller.cpp` add this method:

```
void AppController::buttonClick()
{
    helloLabel.setText("Button clicked!");
}
```

This method changes the content of the project templates existing `helloLabel` to a new text. Lastly, we connect the button click handler to call our function. From inside the `monoWakeFromReset` method, we append:

```
// tell the label to show itself on the screen
helloLabel.show();

// set the callback for the button click handler
btn.setClickCallback<AppController>(this, &AppController::buttonClick);
// set the button to be shown
btn.show();
```

That's it! Run `make install` and see the example run on Mono:



Periodically call a Function

*In this quick example we will see how to use a **Timer** to repetitively call a function*

A big part of developing apps is do tasks at regular intervals. Mono employs a timer architecture that allows you to schedule single or recurring function calls, ahead of time. The semantics are “*call this function 3 minutes from now*”, or “*call this method every 45 second*”.

Timers

The timer system on Mono is very powerful, you can schedule as many timers as of like! (Okay, you are limited by the amount of RAM). The timers are instances of the class `Timer` and they are built upon the `bed::Ticker` class. This architecture leverages the versatility of the *mbed* timers and adds thread safety from Mono’s own `Timer` class.

You can schedule a method to be called 5 minutes from now, by a single line of code:

```
mono::Timer::callOnce<MyClass>(5*60*1000, this, &MyClass::MyCallbackMethod);
```

This will create a timer instance on the heap, and it will deallocate itself after it has fired. Because we use C++ methods, and not C functions as callbacks, you must provide the `this` pointer and the type definition of the context. (`MyClass` in the example above.) The last parameter is the pointer to the actual method on the class. This makes the call a bit more verbose, compared to C function pointers, but being able define callback methods in C++ is extremely powerful.

Note: In recent versions of C++ (C++11 and C++14), lambda functions has been added. These achieve the same goal with a cleaner syntax. However, we cannot use C++11 or 14 on Mono, the runtime is simply too large!

Call a function every second

Now, let us see how to repeatedly call a function every second. First, we create a new project from the console / terminal:


```
$ monomake project timerExample
```

Open the `app_controller.h` file and add a `Timer` as a member on the `AppController` class, and define the method we want to be called:

```
class AppController : public mono::IApplication {

    // This is the text label object that will displayed
    TextLabelView helloLabel;

    // this is our timer object
    Timer timer;

public:

    //this is our method we want the timer to call
    void timerFire();
```

Because we want to repetitively call a function, we need the timer to stick around and not get deallocated. Therefore, it is declared as a member variable on `AppController`. In the implementation file (`app_controller.cpp`) we need to initialize it, in the constructors initialization list:

```
AppController::AppController() :

    // Call the TextLabel's constructor, with a Rect and a static text
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!"),
    // set our timers interval to 1000 ms
    timer(1000)
{
```

Let us add the body of the `timerFire` method to the implementation file, also:

```
void AppController::timerFire()
{
    printf("Timer did fire!\t\n");
}
```

Lastly, we tie the timer callback handler to our method. This is done from inside the `monoWakeFromReset` method:

```
void AppController::monoWakeFromReset()
{
    // tell the label to show itself on the screen
    helloLabel.show();

    // set the timers callback handler
    timer.setCallback<AppController>(this, &AppController::timerFire);
    // start the timer
    timer.Start();
}
```

All right, go to the console and run `make install` and our app should compile and upload to mono. Open a serial terminal and you should see:

```
Timer did fire!
Timer did fire!
Timer did fire!
Timer did fire!
```

Arriving with 1 second intervals.

Timing the UI

Now, let us step it up a bit. We want to toggle a UI element with our timer function. The SDK includes a class called `StatusIndicatorView`, it mimics a LED that just is *on* or *off*. Lets add it as a member on our `AppController`:

```
class AppController : public mono::IApplication {

    // This is the text label object that will displayed
    TextLabelView helloLabel;

    Timer timer;

    StatusIndicatorView stView;
```

We also need to initialize with position and dimension in the initializer list:

```
AppController::AppController() :

    // Call the TextLabel's constructor, with a Rect and a static text
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!"),
    // set our timers interval to 1000 ms
    timer(1000),

    stView(Rect(75,55,25,25))
{
```

Then, in the `monoWakeFromReset` method we must set its **visibility state* **to shown*:

```
// tell the label to show itself on the screen
helloLabel.show();

// set the timers callback handler
timer.setCallback<AppController>(this, &AppController::timerFire);
// start the timer
timer.Start();

stView.show();
```

Last we insert code to toggle its state in the `timerFire` method:

```
void AppController::timerFire()
{
    printf("Timer did fire!\t\n");

    stView.setState(!stView.State());
}
```

Go compile and run the modified code. You should see this on your mono:



Sample code

Here is the full source code for reference:

app_controller.h:

```
#ifndef app_controller_h
#define app_controller_h

// Include the Mono Framework
#include <mono.h>

// Import the mono and mono::ui namespaces into the context
// to avoid writing long type names, like mono::ui::TextLabel
using namespace mono;
using namespace mono::ui;

// The App main controller object.
// This template app will show a "hello" text in the screen
class ApplicationController : public mono::IApplication {

    // This is the text label object that will displayed
    TextLabelView helloLabel;

    Timer timer;

    StatusIndicatorView stView;

public:

    //this is our method we want the timer to call
    void timerFire();

    // The default constructor
    ApplicationController();
```

```
// Called automatically by Mono on device reset
void monoWakeFromReset();

// Called automatically by Mono just before it enters sleep mode
void monoWillGotoSleep();

// Called automatically by Mono right after after it wakes from sleep
void monoWakeFromSleep();

};

#endif /* app_controller_h */
```

app_controller.cpp:

```
#include "app_controller.h"

using namespace mono::geo;

// Contructor
// initializes the label object with position and text content
// You should init data here, since I/O is not setup yet.
AppController::AppController() :

    // Call the TextLabel's constructor, with a Rect and a static text
    helloLabel(Rect(0,100,176,20), "Hi, I'm Mono!"),
    // set our timers interval to 1000 ms
    timer(1000),

    stView(Rect(88,55,25,25))
{

    // the label is the full width of screen, set it to be center aligned
    helloLabel.setAlignment(TextLabelView::ALIGN_CENTER);

    // set another text color
    helloLabel.setTextColor(display::TurquoiseColor);
}

void AppController::timerFire()
{
    printf("Timer did fire!\t\n");

    stView.setState(!stView.State());
}

void AppController::monoWakeFromReset()
{
    // At this point after reset we can safely expect all peripherals and
    // I/O to be setup & ready.

    // tell the label to show itself on the screen
    helloLabel.show();

    // set the timers callback handler
    timer.setCallback<AppController>(this, &AppController::timerFire);
    // start the timer
    timer.Start();
}
```

```

    stView.show();
}

void AppController::monoWillGotoSleep()
{
    // Do any clean up here, before system goes to sleep and power
    // off peripherals.
}

void AppController::monoWakeFromSleep()
{
    // Due to a software bug in the wake-up routines, we need to reset here!
    // If not, Mono will go into an infinite loop!
    mono::IApplicationContext::SoftwareResetToApplication();
    // We never reach this point in the code, CPU has reset!

    // (Normally) after sleep, the screen memory has been cleared - tell the label to
    // draw itself again
    helloLabel.scheduleRepaint();
}

```

Measuring the Temperature

This quick tutorial will demonstrate how you measure the temperature, by using the standard temperature sensor API

Mono has a built-in thermometer that is situated on the PCB under the SD Card connector. We have a standard API for getting the temperature in degrees Celcius. If you wish to get convert to Fahrenheit, use this formula: $(^{\circ}\text{C} \times 1.8 + 32) = ^{\circ}\text{F}$

Example

Let us try to fetch the temperature! The Mono SDK uses a standard interface for getting the temperature, that abstracts away the hardware. The interface contains of only two functions:

- `Read()` To get the temperature in celcius (as an integer)
- `ReadMilliCelcius()` To get the temperature in an integer that is 1000th of a celcius. $(1^{\circ}\text{C} = 1000^{\circ}\text{mC})$

You acquire a reference (a pointer) to the interface through the global `IApplicationContext` variable:

```

sensor::ITemperature *temp = IApplicationContext::Instance->Temperature;
int mcel = temp->ReadMilliCelcius();

```

Now the variable `mcel` hold the temperature in millicelcius. Divide by 1000 to get the value in celcius. You can easily print the temperature on the serial port by using `printf`:

```

printf("%d.%d", mcel/1000, mcel%1000);

```

Caution: Please observe that we cannot use the `%f` format specifier in the `printf` function! To make the application binary smaller, it is not linked with `printf`'s floating point formatting. If you wish to add floating point I/O, then you should add `-u _printf_float` in the linker command!

That is it. You can now read the temperature! Go hack or keep reading, for a little more on temperature measurements.

Temperature measuring Caveats

Measuring the temperature seems like a simple operation, but you should know that it is actually quite difficult to get it right. First for all, unless you really invest money and time in advanced equipment and in calibrating this equipment, then you will not get a precise measurement. But then, what is a precise measurement?

First let us visit the terms: *absolute* and *relative* measurements. An absolute temperature measurement is a temperature measured against a fixed global reference. At the summer the sea temperature at the beaches reach (25°C) or (77°F) . This is an absolute measurement. In contrast if I say: The sea temperature has risen by (2°C) or $(3,5^{\circ}\text{F})$, rise in temperature is a relative measurement.

When measuring temperature you should know that absolute measurements are hard, and relative measurements are easy in comparison. Normal household thermometers *do not* achieve a precision below (1°C) or (1.8°F) , in absolute measurements. But their relative precision can be far better - like (0.1°C) or (0.18°F) .

Mono's built-in thermometer share the same characteristics. However, be aware that the thermometer is mounted on the PCB which get heated by the electronics inside the device. You are measuring the temperature of the PCB - not the air temperature. To overcome this you can put mono in sleep mode for some time, and then wake up and measure the temperature. When Mono is in sleep, the PCB will (over time) get the same temperature as the air around it.

Using the Buzzer

In this quick tutorial I will demonstrate how to make Mono buzz, using the simple API in the SDK

Mono has a built-in buzz speaker. The speaker is directly connected to a GPIO on Mono's MCU. We have configured the MCU such that the GPIO pin is used by a hardware PWM. This means the speaker is driven by a square pulse signal generated by the MCU hardware. The software only has to turn the PWM on and off.

Simple Example

Let us begin with a code snippet that beeps for 0.5 sec:

```
void AppController::monoWakeFromReset() {  
  
    // Get a pointer to the buzzer object  
    mono::sensor::IBuzzer *buzzer = mono::IApplicationContext::Instance->Buzzer;  
  
    // make a beep for 0.5 sec  
    buzzer->buzzAsync(500);  
}
```

First we get a pointer to the current buzzer object that has been created by the global `ApplicationContext` object. All buzz-speaker objects must implement the `IBuzzer` interface, that defines methods to emit buzzing sounds.

Then we use the method `buzzAsync` that turns on the speaker. The important thing here is to note that the buzzing is asynchronous. The signal sent to the speaker is hardware generated, so the software does not need to do anything. When `buzzAsync` returns, the buzzing is still going on - and will it do so for the next 0.5 sec.

Multiple Beeps

If you want to make, say 3 beeps in a row, you need to use callbacks. This is due to the asynchronous behaviour of the `IBuzzer` interface. Luckily there is a similar method called: `buzzAsync(void (*callback)(void))`. This method takes a callback function, that gets called when the buzzing has ended. We can use this function to chain the buzzing, thereby making multiple beeps.

To do this, we use the built-in `Timer` class to control the delay between beeps.

Note: This is the best practice approach. The lazy ones might choose to use several `wait_ms()` calls. But this approach will stall the CPU, making it unresponsive.

In our `AppController` we declare an integer count variable. We also add a callback function for the buzz (`buzzEnded()`) and one for the delay (`pauseEnded()`).

wakeFromReset:

```
void AppController::monoWakeFromReset() {  
  
    // init the count to 0  
    count = 0;  
  
    mono::sensor::IBuzzer *buzzer = mono::IApplicationContext::Instance->Buzzer;  
  
    // begin the buzzing (for 0.5 sec)  
    buzzer->buzzAsync<AppController>(500, this, &AppController::buzzEnded);  
}
```

buzzEnded:

```
void AppController::buzzEnded() {  
  
    // increment the buzz beep count  
    count++;  
  
    // If we have buzzed less the 3 times, start a delay timer  
    if (count < 3)  
        mono::Timer::callOnce<AppController>(500, this, &AppController::buzzEnded);  
}
```

pauseEnded:

```
void AppController::buzzEnded() {  
  
    //the delay timed out - begin buzzing again  
  
    // get the buzzer pointer  
    mono::sensor::IBuzzer *buzzer = mono::IApplicationContext::Instance->Buzzer;  
  
    // begin buzzing again (for 0.5 sec)  
    buzzer->buzzAsync<AppController>(500, this, &AppController::buzzEnded);  
}
```

Now, since we use Timers and async buzzing, Mono will stay responsive during both the buzzing and the pauses in between. This means it will keep sampling the touch input, updating display and running other timers in the background.

Killing a buzz

Say you might have called `buzzAsync(60000)`, which is a one minute long buzz tone. After some seconds you regret the decision and wish cancel the buzzing. To do that you use the `buzzKill()` method! Calling this method will immediate stop any buzzing started earlier.

Note: If you have installed a callback at the end of your buzz - the callback will still get called.

In-Depth Articles

In this chapter we shall take a dive into the structure and workings of *Mono Framework*. The purpose of each article is to give you an understanding of how mono internals works. You do not have to read these articles, but knowledge of the framework design and workings will definately help you. Especially if (when) you bump into problems.

Architectural Overview

In this article we take a quick tour of the complete framework, its classes and features. We will visit the most important topics and requirements for developing Mono applications.

Who should read this?

If you wish to understand the concepts and thoughts behind the frameworks structure, this article is for you. Or if you should choose to read only one in-depth article, it should definitely be this one!

Warning: This is a *draft article*, that is *work in progress*. It still needs some work, therefore you might stumble upon missing words, typos and unclear passages.

Overview

Mono Framework is a collection of C++ classes, all build on top of the [mbed library](#) created by ARM. The complete Mono software stack consists of 3 levels of abstractions, which are separate libraries:

1. **Mono layer** (C++): All high-level classes
2. **mbed layer** (C++/C): Hardware level I/O and functions (including most of stdlib)
3. **Cypress layer** (C): Hardware dependent code, generated by PSoC Creator

In this article we focus mainly on the *Mono layer*. Mono is an open system, so you have access to the underlying layers from your application. However, you should use only layer 3 (and some of mbed), if you really can not avoid it. Using these layers might break compatibility with future hardware releases and the *to-be-released* simulator.

API Overview

Below is a diagram of the features provided by *Mono Framework*. These are the high-level interfaces that makes it fast and easy, for you to take advantage of all Mono's features.

As you can see in the diagram, the features can be grouped by their function. Some framework classes are generic, like the *String* class. Other serves a specific purpose, like providing the accelerometer interface (*IAccelerometer*).

Core Concepts

Since there is no operating system, your application will run on *bare metal*, meaning it interfaces the hardware directly. On a versatile platform, such as Mono, it means that your application must deal with some critical events and concepts. In the next sections we shall take a look at the key functions and requirements of all applications targeting the OpenMono platform.

Application lifecycle

The application lifecycle is the time from execution of the first instruction to the last. In conventional environments this is from `main()` gets called, until it returns:

```
// This is a normal familiar C++ application main function:
int main(char *argv[], int argc)
{
    // Application lifecycle begins

    // do stuff

    // Application lifecycle ends
    return 0;
}
```

This is the case when you are inside an operating system. Mono is an embedded platform, so here the lifecycle is quite different and determined by the power *on* and power *off* events.

When the CPU powers up, it will immediately start executing your application. And it will not stop before you cut the CPU's power source - literally! There is no `return 0` that stops your application.

Mono is Always on

Mono's hardware is always powered, because there is just no power switch! You can not simply cut the power to the CPU, when you what to turn off Mono. The "turn off" feature needs to be the software that throttles down the CPU and puts all peripherals into a low power state. We call this state: *sleep mode*.

Mono Framework helps you with handling *sleep mode*. By default Mono's side-button will toggle sleep mode. It will put Mono to sleep, and wake Mono up again if pressed during sleep. You do not need to do anything to support sleep mode, it is provided to you by the framework. Only if you need to make use of the side-button for you own purpose, you must provide a way of going to sleep. This is done by calling the `IApplicationContext::EnterSleepMode` method:

```
// put mono into sleep mode:
mono::IApplicationContext::EnterSleepMode(); // execution halts here until wake-up

// only after wake-up will EnterSleepMode return
printf("Mono has awoken!");
```

Because power is never cut from the CPU, it rarely resets. The application state is preserved across sleep cycles, meaning that your application lifespan will be long. Even significantly longer when compared to desktop applications. The long lifespan makes the application more vulnerable to errors, such as memory leaks, corrupting memory or stack overflows. The point is: it is a tough job to be an embedded developer .

Power On Reset

The term *Power On Reset* or *POR* means the initial reset that occurs when the CPU powers on. This is when the power supply is first asserted or the physical H/W reset line is de-asserted. On Mono a POR is the same as a hardware reset.

A POR can be triggered in a number of different ways:

- Pressing Mono's reset button
- If Mono's battery is drained, the power control software will halt the CPU's. When Mono is charged, the system will wake the CPU and a software triggered POR happens.
- Uploading a new application to Mono, using `monoprog`.
- Your application can trigger a *SoftwareReset*, that results in a POR.

Every Mono application is required to handle the POR event. It is here your application must setup all needed peripherals, such as temperature sensor or SD Card file I/O. If you use any *UI Widgets*, you need to initialize them on POR as well.

Later in the *Required virtual methods* section, we shall see how you handle the POR event.

Sleep and Wake-up

When Mono goes to *sleep mode* it turns off all peripherals to minimize power consumption.

You have the option to handle the *go to sleep* and *wake from sleep* events, as we shall see in the section about the *The AppController*. We imagine you might need to do some book-keeping or I/O flushing before entering sleep. Likewise, you may need some setup after waking from sleep. If you use the display, you *will* need to take repaint actions when waking from sleep.

However, if you are lazy could could just trigger a *SoftwareReset* upon *wake from sleep*, but you would loose any state that is not serialized.

The run loop

Like most modern application runtimes, Mono has an internal *run loop* (also called an *event loop*). The loop handles periodic tasks, like sampling the touch system, updating the display, processing Timers and handling any other asynchronous task. You can inject your own tasks into the run loop, and there by achieve the Arduino-like `loop()` functionality.

The run loop is started right after your POR handler returns, and runs for the entire length of the application lifecycle.

Callback functions

Because we have a run loop we can make tasks asynchronous. This does not mean your code will run concurrently, it means that you can put tasks in the background. You do not need to think about race-conditions and other rough topics related to parallelism.

You use callback functions to handle events that arrive, and require your action. For example you can schedule a function call in the future. The *Timer* class can schedule a function getting called 5 secs from now:

```
mono::Timer::callOnce<MyClass>(5000, this, &MyClass::futureFunction);
```

Notice the syntax here. We use C++ templates and function pointers. Reason is the complexity of context and function pointers in C++. In C you create function pointers with ease:

```
void MyFunction() {}

mono::Timer::callOnce(5000, &MyFunction);
```

C functions has no context (do not belong to a class), and can be identified by a pointer. Functions (*methods* to be precise) in C++ exists as attributes on object instances. When we use these as callback handlers, we need to define 3 parameters:

1. The type of class where the *method* is defined
2. Provide a pointer to an instance of the class (the *object*)
3. Provide the actual function (*method*) pointer

Note: That we can have callback methods in old C++98 is a kind of hack. In more modern C++ version, *lambda functions* achieve the same - but less verbose. Unfortunately Mono do not have enough memory to contain the runtime libraries for either C++11 or C++14.

Timers

- Timers trigger a periodic event handler callback
- Real-Time apps might update its state/content on a regular interval
- Timers can also be used to call a function at some point in the future (as soon as possible).

Queued interrupts

- in embedded environment interrupts are hardware triggers, that call a C function (the ISR)
- the ISR should be fast and return very quickly - a lot of concurrency issues arise when using ISR.
- mono uses Queued interrupt, where the ISR is handled in the run loop.
- no concurrency issues
- you can longer lived ISR's
- they can debounce your hardware input signals, to create more robust handling of button or switches

The AppController

All application must have a app controller - this is there entry point

Required virtual methods

Application Entry Point & Startup

1. static inits
2. main func
3. app ctrl POR method
4. run loop

The Bootloader

Crashes and Exceptions

Best Praticce

some do and dont's

Further reading

in depth articles:

- Boot and Startup procedures
- Queued callbacks and interrupts
- [[Display System Architecturedisplay_system_architecture]]
- Touch System Architecture
- Wifi & networking
- Power Management Overview
- Memory Management: Stack vs heap objects?
- Coding C++ for bare metal
- The Build System

Display System Architecture

Mono display system is makes it easy and fast to create graphical user interfaces (GUIs). You can take advantage of the many high-level classes, that display controls or text in the screen.

Who should read this?

In this article we will take an in-depth look at Mono's display system. You should read this if you wish to create your own *User Interface* elements or if you experience issues related to displaying graphics. Also, if you simply would like to know more about how the software works under the hood. I presume you already are familiar with other GUI system programming, like iOS or Qt.

Overview

The Mono framework implements a display stack that closely assembles the first computer GUI systems, like the first Mac OS or Atari TOS. It is a single display buffer that your application paints in. The buffer is placed in the display chip, and is therefore not a part of the MCU systems internal RAM. This means writing (and reading) to the display buffer is expensive operations, and should only be done in an efficient way.

To paint on the display the view stack has 3 distinct layers:

1. **The Display controller:** An object that communicates with the hardware display chip, and can read and write to the display buffer. The display controller objects can write pixels in an file I/O like manner. It does not have any notion of text glyphs or graphical shapes.
2. **The Display Painter:** The painter object can translate geometrical shapes into pixels. It utilizes the *Display Controller* as a pixels drawing target. The painter can also draw individual text glyphs, and works with colors too.
3. **The Views:** A view is an abstract class that represents a User Interface element, like a button. It uses the *Display Painter* to composite a complete element from a series of shape painting routines. Some views also works with touch input.

We shall only visit the last layer (Views) in this tutorial.

The Views

All UI element classes inherit from the `View` class. The view class defines the properties and behaviors shared by all UI elements. The mono framework comes with a set of predefined UI views that comprises different UI elements. They all inherit from the `View` class, as seen on the figure below:

If you need learn about the specific UI classes can their usage, please see the reference documentation or the **Drawing UI Elements** tutorial.

As all classes inherit from the parent `View` class, they all define these central properties:

- **The View Rect:** A rectangle that defines the boundaries of the view. This is the views width and height, but also its X,Y position on the display.
- **Standard Colors:** All views share a palette of standard/default colors for borders, text, backgrounds and highlights. Changing one of these will affect all view subclasses.
- **Dirty state:** Views can be *dirty*, meaning that they need to be repainted on the screen. You might change the content of a `TextLabelView`, and the view will need to be repainted - therefore it is *dirty*. When the view has been repainted, the dirty state is cleared.
- **Repainting:** All `View` subclasses must define the protected method `repaint()`. Dirty views are scheduled for repaint by the display system, meaning that the `repaint()` method is automatically called to actually draw the view. If you create your own custom views, all your shape painting *must* happen inside the `repaint()` routine.
- **Visibility state:** Views can be visible or invisible. When first created, a view is always invisible. This means it will not be scheduled for repaints at all. To make a view appear on the display, you must first call the `show()` method. This will set its state to *visible*.

Since all views share a single global display buffer, you can (by mistake or on purpose) position one view overlapping another. The display system does not have any notion of a Z-axis. To the top-most view will be the one that gets its `repaint()` method called last. The display system keeps dirty views in a queue, so they are repainted in a FIFO style manner.

When you create your own views, it is your responsibility to respect the views boundaries. Say, a view with the dimensions 100x100, must not draw any shapes outside its 100x100 rectangle. Shape drawing inside the `repaint()`

method is not automatically clipped to the views bounding rectangle. It is perfectly possible to create a view, that completely ignores its bounding rectangle.

In contrast to many modern GUI systems, mono views cannot contain nested views. However, this does not mean a view cannot contain another. It just has to manually manage it.

Display Coordinate System

All views and painted shapes exists in the painter's coordinate system. This coordinate system is cartesian with origin in the top left corner. The positive Y direction is downward, while positive X is left to right. The coordinates are in pixels, meaning they are integers.

An example of the used coordinate system is seen in the figure above. Notice how the pixel's coordinate references the upper left corner of the pixel area - not the center.

Because views cannot be nested, we use only one global coordinate system. It is called the absolute coordinate system, and all shapes and views are painted relative to that. This means that if you position views with the offset coordinate `((20,20))`, you must offset all shape painting with `((20,20))`.

Rotations

Mono includes an accelerometer, that enables you to detect orientation changes. You can create an application that layout its content differently in landscape and portrait modes.

Unfortunately, at this time, I have yet to implement an automatic coordinate system rotation, that uses the accelerometer. I plan to augment the `Display Painter` class with the ability to rotate the coordinate system, to account for mono physical orientation. This will mean the coordinate system's origin will always be the upper left corner relative to gravity, and independent on the physical orientation.

Pixel Blitting

The *display painter* class takes commands like `drawRect(x,y,w,h)`, that paints an outlined rectangle on the display. It handles conversion from geometric shape parameters, into a series of pixels. These pixels are written to the display through the *Display Controller* object.

The pixel color is determined by the state of the painter. The painter has foreground and background color, that can be set before the calls to shape drawing routines. Shapes are painted using the foreground color by default, but you can explicitly tell the routines to use the background color instead.

The text glyphs drawing routine uses both the foreground and background colors, to draw the text glyphs against the background color.

Bitmaps & Colors

The display painter cannot take pixels as input. If you need to draw raw pixels or bitmaps from a file or memory, you need to interface the Display Controller directly. The display controller has a cursor that points to a location on the display. When you write a pixel, the cursor increments. The incrementation is from left to right, and downward. (Normal western reading direction.)

Basically you need only to use 2 methods: `write(color)` and `setCursor(x,y)`. You can see how if you take a look at the source code for the class `ImageView`. It blit pixels using the *display controller*, from within its `repaint()` method.

If you plan to use bitmaps, keep in mind that Mono's memory is very limited. Therefore I will encourage you *not* to use large in-memory pixel buffers. Instead use the SD Card file I/O, as done by the `ImageView` class.

When you write raw pixels, you must use the correct pixel color format. For mono this is **16 bit, 5-6-5 RGB colors**. Note that Mono's CPU architecture is little endian, and the display uses big endian. If you define a color like this:

```
uint16_t color = 0x07E0; // I think this might be a green color?
```

The color will be interpreted by the display as: 0xE007. For convenience you should use the `Color` class, that has a constructor that takes RGB components as separate values.

V-Sync and refreshes

The display hardware periodically refreshes the LCD. If you change the display buffer during a refresh, you will see weird artifacts. Especially animations are prone to such artifacts.

To counter this mono uses *tearing effect* interrupts. This interrupt works like the v-sync signal on RGB interfaced displays. It occurs the moment after a display refresh. After the interrupt there is a time window, where the display buffer can be changed, before the display refreshes again.

Modern systems uses a technique called double buffering, where two separate display buffers exists. This means that one can be modified while the other is shown. When all changes has been written, the buffer that is displayed are changed to the other one. This technique makes it possible is to (slowly) write a lot of changes to the display, and have them appear instantly.

Unfortunately we do not have this facility in Mono. There is only one display buffer. This means all drawing must have finished, by the time the display is refreshed again. To not exceed the time window between display refreshes, all painting routines must be very efficient and optimized. If you create your own view subclasses, keep in mind that your drawing must be highly efficient. It is best only to paint changes, and not the entire view again.

The display system automatically handle this *tearing effect* timing, and skips repainting, should the CPU be too busy at the moment of the interrupt.

Bare Metal C++: A Practical Guide

*If you what to be an embedded coding champ, you should really read Alex Robenko's book: **Practical Guide to Bare Metal C++ (and I mean: really!)***

Alex' book goes through very interesting topics of getting C++ running on embedded devices. It covers important shortcomings and advantages of C++ in an embedded environment.

If you know C++ you might want to use *Exceptions* and *RTTI* features, before you do: Read the book! In contrast, if you do not know C++ you might (will) make mistakes that can take hours to recover from. Again: Read the book!

Here is a short list of most interesting chapters of the book:

- Dynamic Memory Allocation
- Exceptions
- RTTI
- Removing Standard library
- Static objects
- Abstract classes
- Templates
- Event loops

As a Mono developer you will face most of these topics.

Read the Book

- Queued callbacks and interrupts
- Touch System Architecture
- Wifi & networking
- Boot and Startup procedures
- Power Management Overview
- Memory Management: Stack vs heap objects?
- The Build System

Schematics

This is the schematics for our hardware. These are meant to help you develop our own extensions to Mono, go create!

If you need more specific schematics than what is shown here, please consider posting a request on our [community](#).

Mono (Maker + Basic)



If you have a Mono Basic, it is the same as Maker, just without the Wifi / Bluetooth component mounted.

Mono Shield Adapter



MonoKiosk

Mono apps are distributed through the [Kiosk](#), and you can get your app into the Kiosk by following the recipe below.

GitHub

If your source code is hosted on [GitHub](#), you will need to make a [GitHub release](#) and attach three types of files to the release, namely

- The app description.
- A set of screenshots.
- The binary app itself.

App description

The release must contain a file named `app.json` that contains the metadata about your app, for example

```
{
  "id": "com.openmono.tictactoe"
  , "name": "Tic Tac Toe"
  , "author": "Jens Peter Secher"
  , "authorwebsite": "http://developer.openmono.com"
  , "license": "MIT"
  , "headline": "The classic 3x3 board game."
  , "description":
    [ "Play with a fun and exciting game with against another player."
    , "Can you beat your best friend in the most classic of board games?"
    ]
  , "binary": "ttt.elf"
  , "sourceurl": "https://github.com/getopenmono/ttt"
  , "required": ["display", "touch"]
  , "optional": []
  , "screenshots":
    [ "tic-tac-toe-part1.png"
    , "tic-tac-toe-part2.png"
    , "tic-tac-toe-part3.png"
    ]
  , "cover": "tic-tac-toe-part2.png"
  , "kioskapi": 1
}
```

As you can see, `app.json` refers to three distinct images (`tic-tac-toe-part1.png`, `tic-tac-toe-part2.png`, `tic-tac-toe-part3.png`) to be used on the app's page in MonoKiosk, so these three files must also be attached to the GitHub release. The metadata also refers to the app itself (`ttt.elf`), the result of you building the application, so that file must also be attached to the release.

The format of the metadata needs to be very strict, because it is used to automatically create an entry for your app in MonoKiosk. The metadata must be in **JSON** format, and the file must be named `app.json`. In the following, we will describe the format in detail.

id

The `id` must be unique within the Kiosk, so you should use **reverse domain name notation** like `uk.homebrewers.brewcenter`.

name

The name of the app as it should appear to people browsing the Kiosk.

author

Your name or Organisation, as it should appear to people browsing the Kiosk.

authorwebsite

An *optional* URL to your (organisation's) website.

license

How other people can use your app and the source code. We acknowledges the following licenses:

If you feel that you need another license supported, take it up in the [community](#).

headline

Your headline that accompanies the app on the Kiosk.

description

A list of paragraphs that give other people a detailed desription of the app, such as why they would need it and what it does.

binary

The name of the [ELF](#) file which has been produced by your compiler, and which you have attached to the release.

sourceurl

An URL to the source code of the app.

required

A list of hardware that must be present in a particular Mono to run the app. The acknowledged hardware is as follows.

- accelerometer
- buzzer
- clock
- display
- jack
- temperature
- touch
- wifi
- bluetooth

optional

A list of Mono hardware that the app will make use of if present. The acknowledged hardware is the same as for the `required` list.

screenshots

A list of images that will be presented in the Kiosk alongside the app description.

All images must be either 176x220 or 220x176 pixels, and they must be attached to the release.

cover

One of the screenshots that you want as cover for app in the Kiosk.

kioskapi

The format of the metadata. The format described here is version 1.

How to get your app included

When you have created a new (version) of your app, you can contact us at `kiosk@openmono.com` with the URL of your release (eg. `https://api.github.com/repos/getopenmono/ttt/releases/tags/v0.1.0`), and we will do a sanity check of the app and add to the official list used by the Kiosk.

For GitHub, the url for a release is `https://api.github.com/repos/:owner/:repo/releases/tags/:tag`

Datasheets

If you need to dive a little deeper into the inner workings of Mono, we have collected the datasheets for the components in Mono

You might need to consult specific datasheets for the components in Mono, if you are debugging or just need some advanced features not provided by the API.

Accelerometer

Mono's accelerometer is a *MMA8652FC* chip by Freescale. It is connected to Mono's I2C bus.

The accelerometer is handled by the `MonoAccelerometer` class in the software framework. If you need specific features, or just wish to play with the component directly, you should consult the datasheet.

MCU

Mono's Micro Controller Unit (MCU) is a Cypress PSoC5LP, that is an Arm Cortex-M3 CPU. You can use all its registers and functions for your application, the SDK includes headers for all pins and registers. (You must explicitly include the `project.h` file.)

The MCU model we use has 64 Kb SRAM, 256 Kb Flash RAM and runs at 66 Mhz.

The software framework encapsulates most MCU features in the *mbed* layer, such as GPIO, interrupts and timers. Power modes is also controlled by the registers in the MCU and utilized by the `PowerManagement` class.

Display Chip

The display is driven by an *ILITEK 9225G* chip. On mono we have hardwired the interface to 16 bit 5-6-5 color space and the data transfer to be 9-bit dedicated SPI, where the 9th bit selects data/command registers. (This should make sense, when you study the datasheet.)

In the framework the display controller class `ILI9225G` utilizes the communication and pixel blitting to the display chip.

Wireless

Mono uses the Redpine Wifi chip to achieve wireless communication. (The same chip includes Bluetooth for the Maker model, also.) The chip is connected via a dedicated SPI interface, and has a interrupt line connected as well.

The communication interface is quite advanced, including many data package layers. You can find our implementation of the communication in the `ModuleSPICommunication` class. This class utilizes the SPI communication from and to the module, it does not know anything about the semantics of the commands sent.

Temperature Sensor

The temperature sensor is an Amtel *AT30TS74* chip, connected via the internal I2C bus.

The temperature interface is used in the `AT30TS74Temperature` class.

API Reference

Common Utilities

DateTime

class `mono::DateTime`

A Date and time representation in the Gregorian calendar.

This class represents a point in time, defined in the gregorian calendar. Such a timestamp are given in year, month, day of month, hours since midnight, minutes and seconds. This class also defined if the timestamp is in UTC / GMT or a defined local time zone.

The class handles leap years and the varying length of months. You can add seconds, minutes, hours and days to a *DateTime* object and get the result as a new *DateTime* object.

When you create *DateTime* objects they are created in the local time zone by default. The local time zone is defined as a offset in hours relative to UTC. There is no notion of IANA Time Zone names of alike - just an offset to the UTC time.

There are two convenient method to print *DateTime* as readable strings. The *toString* method print a human readable (MySQL compatible) timestamp. The other *toISO8601* returns a string formatted in the ISO 8601 standard format used in JSON objects.

When printing *DateTime* objects, they are returned in the time zone that they are created in.

System Wall Clock

This class also has a global *DateTime* object reserved for use by a RTC feature. A subsystem manages the RTC and increments the global system *DateTime* object.

You can get the current *DateTime* time by using the static method *now*. To set the system clock use the static method *setSystemClock*.

Public Types

enum TimeTypes

DateTime timestamps can be one of three types

Values:

LOCAL_TIME_ZONE

The *DateTime* is specified in local time zone

UTC_TIME_ZONE

The *DateTime* is specified in UTC / GMT time zone

UNKNOWN_TIME_ZONE

The *DateTime* do not have a specified time zone

Public Functions

DateTime()

Construct an empty / invalid *DateTime* object.

DateTime(const time_t t, bool localTimeZone = true)

Create a *DateTime* from the a libc simple time.

This constructor takes a standard libc time variable and create a calendar *DateTime* object from that. It uses the systems timezone, and libc systems time stamp to calendar conversion.

You can set the optional argument *localTimeZone* to *false* to force the *DateTime* to be created in UTC time, instead of system time.

Times is converted to a date in the Gregorian calendar.

Parameters

- *t*: The libc simple time stamp
- *localTimeZone*: Optional: Use the systems timezone in conversion

DateTime(const tm *brokentime, bool localTimeZone = true)

Create a *DateTime* from the a libc broken-down time struct.

This constructor takes a standard libc broken-downtime variable and creates a calendar *DateTime* object from that. It uses the timezone present in libc structure.

You can set the optional argument *localTimeZone* to *false* to force the *DateTime* to be created in UTC time, instead of system time.

Parameters

- *brokentime*: The libc simple broken-down calendar time
- *localTimeZone*: Optional: Use the systems timezone in conversion

DateTime (uint16_t *years*, uint8_t *months*, uint8_t *days*, uint8_t *hours* = 0, uint8_t *minutes* = 0, uint8_t *seconds* = 0, TimeTypes *zone* = LOCAL_TIME_ZONE)
Construct a *DateTime* object with a given date and time.

Parameters

- *years*: The Year component of the date, for example 2016
- *months*: The month component of the date from 1 to 12, May is 5
- *days*: The day component of the date, 1-indexed, from 1 to 31
- *hours*: Optional: The hour component of the timestamp, range is 0 to 23
- *minutes*: The minute component of the timestamp, range is 0 to 59
- *seconds*: The seconds component of the timestamp, range is 0 to 59
- *zone*: The timezone where this *DateTime* define its time, default is the local timezone

String **toString () const**

Return the *DateTime* object as a human readable string.

Return A mono string on the format: yyyy-MM-dd hh:mm:ss

String **toISO8601 () const**

Return an ISO8601 formatted timestamp as a string.

This returned string is on the format: yyyy-MM-ddTHH:mm:ss+tt:00 if not UTC or yyyy-MM-ddTHH:mm:ssZ

String **toRFC1123 () const**

Get the *DateTime* as an RFC1123 compatible date/time string.

This is the standard used by the HTTP standard and therefore used in HTTP headers like *Date* and *Last-Modified*. Use this method to format a *DateTime* to this representation.

String **toTimeString () const**

Return only a time string from the *DateTime*.

The format is: HH:mm:ss

String **toDateString () const**

Return only a date string from the *DateTime*.

The format is: yyyy-MM-dd

uint32_t **toJulianDayNumber () const**

Return Julian day number of the *DateTime*.

uint32_t **toUnixTime () const**

Return Unix time of the *DateTime*.

struct tm **toBrokenDownUnixTime () const**

Return a libc broken-down time/date components.

This uses the default timezone of the local systems time zone

time_t **toLibcUnixTime () const**

Returns the libc style timestamp (simple time)

bool **isValid()** **const**

Return `true` if the *DateTime* is valid.

Invalid date object is constructed by the default constructor

DateTime **toUtcTime()** **const**

Convert this *DateTime* to UTC time.

uint8_t **Hours()** **const**

Get the hour component, from 0 to 23.

uint8_t **Minutes()** **const**

Get the Minute component, from 0 to 59.

uint8_t **Seconds()** **const**

Get the Seconds component, from 0 to 59.

uint8_t **Days()** **const**

Get the day of month component, first day of month is 1.

uint8_t **Month()** **const**

Get the month component, January is 1, December 12.

uint16_t **Year()** **const**

Get the year component.

DateTime **addSeconds** (int *seconds*) **const**

Return a new object with a number of seconds added.

This method increments the timestamp for the given second interval

Return The new *DateTime* object with seconds added

Parameters

- `seconds`: The seconds to add

DateTime **addMinutes** (int *minutes*) **const**

Return a new object with a number of minutes added.

This method increments the timestamp for the given minute interval

Return The new *DateTime* object with minutes added

Parameters

- `minutes`: The minutes to add

DateTime **addHours** (int *hours*) **const**

Return a new object with a number of hours added.

This method increments the timestamp for the given hour interval

Return The new *DateTime* object with hours added

Parameters

- `hours`: The hours to add

DateTime **addDays** (int *days*) **const**

Return a new object with a number of days added.

This method increments the timestamp for the given day interval

Return The new *DateTime* object with days added

Parameters

- days: The days to add

DateTime **addTime** (*const time_t *t*) **const**

Return a new object with the Unix simple time component added.

The provided pointer to a unix time is added to the existing *DateTime* and the result is returned as a new object.

Return The new *DateTime* object with the time interval added

Parameters

- t: The unix simple time to add

String **toString** (*const char *format*) **const**

Format the *DateTime* to a string, using *libc* *strftime* function.

Use this method to get a custom representation of the date/time as text. You control the format of the output using the string at format. It can contain two kinds of specifications: text to be copied literally into the formatted string, and time conversion specifications. Time conversion specifications are two- and three-character sequences beginning with “ (use ‘%’ to include a percent sign in the output). Each defined conversion specification selects only the specified field(s) of calendar time data from *timp, and converts it to a string in one of the following ways:

a The abbreviated weekday name according to the current locale. [tm_wday]

A The full weekday name according to the current locale. In the default “C” locale, one of ‘Sunday’, ‘Monday’, ‘Tuesday’, ‘Wednesday’, ‘Thursday’, ‘Friday’, ‘Saturday’. [tm_wday]

b The abbreviated month name according to the current locale. [tm_mon]

B The full month name according to the current locale. In the default “C” locale, one of ‘January’, ‘February’, ‘March’, ‘April’, ‘May’, ‘June’, ‘July’, ‘August’, ‘September’, ‘October’, ‘November’, ‘December’. [tm_mon]

c The preferred date and time representation for the current locale. [tm_sec, tm_min, tm_hour, tm_mday, tm_mon, tm_year, tm_wday]

C The century, that is, the year divided by 100 then truncated. For 4-digit years, the result is zero-padded and exactly two characters; but for other years, there may a negative sign or more digits. In this way, ‘Cy’ is equivalent to ‘Y’. [tm_year]

d The day of the month, formatted with two digits (from ‘01’ to ‘31’). [tm_mday]

D A string representing the date, in the form “’%m/%d/%y’”. [tm_mday, tm_mon, tm_year]

e The day of the month, formatted with leading space if single digit (from ‘1’ to ‘31’). [tm_mday]

Ex In some locales, the E modifier selects alternative representations of certain modifiers x. In newlib, it is ignored, and treated as x.

F A string representing the ISO 8601:2000 date format, in the form “’%Y-%m-%d’”. [tm_mday, tm_mon, tm_year]

g The last two digits of the week-based year, see specifier G (from ‘00’ to ‘99’). [tm_year, tm_wday, tm_yday]

G The week-based year. In the ISO 8601:2000 calendar, week 1 of the year includes January 4th, and begin on Mondays. Therefore, if January 1st, 2nd, or 3rd falls on a Sunday, that day and earlier belong to

the last week of the previous year; and if December 29th, 30th, or 31st falls on Monday, that day and later belong to week 1 of the next year. For consistency with Y, it always has at least four characters. Example: “%G” for Saturday 2nd January 1999 gives “1998”, and for Tuesday 30th December 1997 gives “1998”. [tm_year, tm_wday, tm_yday]

h Synonym for “%b”. [tm_mon]

H The hour (on a 24-hour clock), formatted with two digits (from ‘00’ to ‘23’). [tm_hour]

I The hour (on a 12-hour clock), formatted with two digits (from ‘01’ to ‘12’). [tm_hour]

j The count of days in the year, formatted with three digits (from ‘001’ to ‘366’). [tm_yday]

k The hour (on a 24-hour clock), formatted with leading space if single digit (from ‘0’ to ‘23’). Non-POSIX extension (c.p. I). [tm_hour]

l The hour (on a 12-hour clock), formatted with leading space if single digit (from ‘1’ to ‘12’). Non-POSIX extension (c.p. H). [tm_hour]

m The month number, formatted with two digits (from ‘01’ to ‘12’). [tm_mon]

M The minute, formatted with two digits (from ‘00’ to ‘59’). [tm_min]

n A newline character (‘ ’).

Ox In some locales, the O modifier selects alternative digit characters for certain modifiers x. In newlib, it is ignored, and treated as x.

p Either ‘AM’ or ‘PM’ as appropriate, or the corresponding strings for the current locale. [tm_hour]

P Same as ‘p’, but in lowercase. This is a GNU extension. [tm_hour]

r Replaced by the time in a.m. and p.m. notation. In the “C” locale this is equivalent to “%I:%M:%S %p”. In locales which don’t define a.m./p.m. notations, the result is an empty string. [tm_sec, tm_min, tm_hour]

R The 24-hour time, to the minute. Equivalent to “%H:%M”. [tm_min, tm_hour]

S The second, formatted with two digits (from ‘00’ to ‘60’). The value 60 accounts for the occasional leap second. [tm_sec]

t A tab character (‘ ’).

T The 24-hour time, to the second. Equivalent to “%H:%M:%S”. [tm_sec, tm_min, tm_hour]

u The weekday as a number, 1-based from Monday (from ‘1’ to ‘7’). [tm_wday]

U The week number, where weeks start on Sunday, week 1 contains the first Sunday in a year, and earlier days are in week 0. Formatted with two digits (from ‘00’ to ‘53’). See also W. [tm_wday, tm_yday]

V The week number, where weeks start on Monday, week 1 contains January 4th, and earlier days are in the previous year. Formatted with two digits (from ‘01’ to ‘53’). See also G. [tm_year, tm_wday, tm_yday]

w The weekday as a number, 0-based from Sunday (from ‘0’ to ‘6’). [tm_wday]

W The week number, where weeks start on Monday, week 1 contains the first Monday in a year, and earlier days are in week 0. Formatted with two digits (from ‘00’ to ‘53’). [tm_wday, tm_yday]

x Replaced by the preferred date representation in the current locale. In the “C” locale this is equivalent to “%m/%d/%y”. [tm_mon, tm_mday, tm_year]

X Replaced by the preferred time representation in the current locale. In the “C” locale this is equivalent to “%H:%M:%S”. [tm_sec, tm_min, tm_hour]

y The last two digits of the year (from ‘00’ to ‘99’). tm_year

Y The full year, equivalent to Cy. It will always have at least four characters, but may have more. The year is accurate even when tm_year added to the offset of 1900 overflows an int. [tm_year]

z The offset from UTC. The format consists of a sign (negative is west of Greewich), two characters for hour, then two characters for minutes (-hhmm or +hhmm). If `tm_isdst` is negative, the offset is unknown and no output is generated; if it is zero, the offset is the standard offset for the current time zone; and if it is positive, the offset is the daylight savings offset for the current timezone. The offset is determined from the TZ environment variable, as if by calling `tzset()`. [`tm_isdst`]

Z The time zone name. If `tm_isdst` is negative, no output is generated. Otherwise, the time zone name is based on the TZ environment variable, as if by calling `tzset()`. [`tm_isdst`]

%% A single character, ‘.’.

Public Static Functions

static *DateTime* **maxValue** ()

Get the maximum possible *DateTime* value (far in the future)

static *DateTime* **minValue** ()

Get the lowest possible *DateTime* value (the distant past)

bool **isLeapYear** (uint16_t year)

Check is a year is a leap year.

DateTime **fromISO8601** (String date)

Parse a subset of ISO 8601 compatible date time representations.

This static method takes a ISO 8601 formatted string, and creates a *DateTime* object from that. This method only parses a subset of the possible date representations allowed in ISO 8601. Specifically it can handle dates in these format:

- yyyy-MM-ddTHH:mm:ssZ
- yyyy-MM-ddTHH:mm:ss+01:00 or other time zones
- yyyy-MM-dd HH:mm:ssZ
- yyyy-MM-dd HH:mm:ss

Return The parsed *DateTime* object, that might be valid or invalid

void **setSystemDateTime** (*DateTime* dt)

Set a new system *DateTime*.

DateTime **now** ()

Get the current *DateTime* from the system RTC clock.

void **incrementSystemClock** ()

Internal method used by the RTC system to increment the system *DateTime*. You should not call this manually.

Public Static Attributes

int **LocalTimeZoneHourOffset** = 0

The systems current TimeZone setting.

The timezone is just an hour-offset from the UTC / GMT time

PowerSaver

class `mono::PowerSaver`

Auto dim the display and sleep Mono after a given period of inactivity.

This class will automatically dim the display and enter sleep mode, after a period of user inactivity. The uses 3 states:

1. Normal mode (full brightness on display)
2. After a period of no user touch input (default 10 secs.), display dims to 11%
3. After yet a period (default 10 secs.) of no touch input, sleep mode is entered.

Any touch input will reset the state to *1*.

You should add this object to your *AppController* class, to enable automatic power saving.

Multiple PowerSavers

If you want to use multiple instances of this class, remember to *deactivate* the instances that should be inactive. Having two active instances at one time, can be confusing to the users.

Catch-all Touches

TO capture all touches, any instance should be the first to respond to touch inputs. The touch system has a responder chain of objects that handles touch input. Any of these objects might choose to break the chain and allow no further processing of a given touch event.

Therefore the *PowerSaver* must be the first (or one of) to handle touch events. You accomplish this by initializing the *PowerSaver* object as the first member object of your *AppController*. Before any other touch related classes.

Inherits from *mono::TouchResponder*

Public Functions

PowerSaver (int *dimTimeoutMs* = 10000, int *sleepTimeoutMs* = 10000, int *dimBrightness* = 30, int *fullBrightness* = 255)
Construct a auto dimmer and sleep timer.

Parameters

- *dimTimeoutMs*: The delay before display is dimmed (in milliseconds)
- *sleepTimeoutMs*: The delay before sleep mode is entered (in milliseconds)
- *dimBrightness*: The brightness level when display is dimmed (0 to 255)
- *fullBrightness*: The full brightness level (normal mode) (0 to 255)

void **startDimTimer** ()

Starts the timer that will dim the display after the chosen timeout.

This call stops any running sleep timer. After the dim timer fires, the sleep timer is automatically started.

void **startSleepTimer** ()

Starts the sleep timer, that will sleep Mono after the chosen timeout.

This will stop a running *dim timer*, and trigger sleep mode on timeout.

void **dim** ()

Immediately dim the display and then start the sleep timer.

This will (asynchronously) dim the display to the chosen brightness level. When the display has been dimmed, the sleep timer is started.

void **undim** ()

Immediately undim the display to full brightness.

This will stop the sleep timer and re-start the dim timer.

void **deactivate** ()

Disable the *PowerSaver* all together.

No dimming or sleep is triggered. You must call *startDimTimer* to re-enabled the *PowerSaver*.

Queue

class `mono::Queue`

A pointer based FIFO style *Queue*.

See *GenericQueue*

Subclassed by `mono::GenericQueue< mono::redpine::ManagementFrame >`, `mono::GenericQueue< mono::ScheduledTask >`, `mono::GenericQueue< mono::TouchResponder >`, `mono::GenericQueue< mono::ui::View >`, `mono::GenericQueue< Item >`

Public Functions

void **Enqueue** (IQueueItem *item)

Add a new element to the back of the queue Insert a pointer to an element on the back of the queue.

IQueueItem ***Dequeue** ()

Returns and removes the oldest element in the queue.

IQueueItem ***Peek** ()

Return the oldest element in the queue, without removing it.

IQueueItem ***Next** (IQueueItem *item)

Get the next element in the queue, after the one you provide.

NOTE: There is no check if the item belongs in the parent queue at all!

Return The next element in the queue, after the item you provided.

Parameters

- `item`: A pointer to an item in the queue

bool **Exists** (IQueueItem *item)

Check that an object already exists in the queue. Because of the stack based nature of this queue, all objects can only exist one replace in the queue. You cannot add the same object to two different positions in the queue.

Parameters

- `item`: The element to search for in the queue

QueueInterrupt

class `mono::QueueInterrupt`

An queued input pin interrupt function callback handler This class represents an input pin on mono, and provides up to 3 different callback handler functions. You can installed callback function for rising, falling or both edges.

Queued interrupts

In Mono framework a queued interrupt is handled inside the normal execution context, and not the hardware interrupt routine. In embedded programming it is good practice not to do any real work, inside the hardware interrupt routine. Instead the best practice method is to set a signal flag, and handled the event in a run loop.

QueueInterrupt does this for you. The *rise*, *fall* and *change* callback are all executed by the default mono run loop (*AppRunLoop*) You can safely do heavy calculations or use slow I/O in the callback routines you assign to *QueueInterrupt*!

Latency

The run loop might handle the interrupt callback some time after it occur, if it is busy doing other stuff. Therefore you cannot expect to have your callback executed the instant the interrupt fires. (If you need that use *DirectInterrupt*) *QueueInterrupt* holds the latest interrupt trigger timestamp, to help you determine the latency between the actual interrupt and you callback. Also, many interrupt triggering signal edges might occur, before the run loop executes you handler. The timestamp only shows the latest one.

Inherits from *InterruptIn*, *mono::IRunLoopTask*

Public Functions

QueueInterrupt (PinName *inputPinName* = NC, PinMode *mode* = PullNone)

Assign a queued inetrupt handler to a physical pin

Parameters

- *inputPinName*: The actual pin to listen on (must be PORT0 - PORT15)
- *mode*: OPTIONAL: The pin mode, default is Hi-Impedance input.

void **DeactivateUntilHandled** (bool *deactive* = true)

Set this property to `true`, to turn off incoming interrupts while waiting for the run loop to finish process a pending interrupt.

If you want to do heavy calculations or loading in your interrupt function, you might want to not queue up new interrupts while you process a previous one.

Parameters

- *deactive*: OPTIONAL: Set this to false, to *not* disable interrupts while processing. Default is `true`

bool **IsInterruptsWhilePendingActive** () const

Get the state of the *DeactivateUntilHandled* property. If `true` the hardware interrupt is deactivated until the handler has run. If `false` (the default when constructing the object), all interrupt are intercepted, and will be handled. This means the handler can be executed two times in row.

Return `true` if incomming interrupt are displaed, until previous is handled.

void **setDebouncing** (bool *active*)

Enable/Disable interrupt de-bounce.

Switches state change might cause multiple interrupts to fire, or electrostatic discharges might cause nano seconds changes to I/O lines. The debounce ensures the interrupt will only be triggered, on sane button presses.

void **setDebounceTimeout** (int *timeUs*)

Change the timeout for the debounce mechanism.

Parameters

- *timeUs*: The time from interrupt to the signal is considered stable, in micro-seconds

void **rise** (void (**fptr*)) void

Attach a function to call when a rising edge occurs on the input

Parameters

- *fptr*: A pointer to a void function, or 0 to set as none

template <typename T>

void **mono::QueueInterrupt::rise** (T * *tptr*, void (T::*)(void) *mptr*)

Attach a member function to call when a rising edge occurs on the input

Parameters

- *tptr*: pointer to the object to call the member function on
- *mptr*: pointer to the member function to be called

void **fall** (void (**fptr*)) void

Attach a function to call when a falling edge occurs on the input

Parameters

- *fptr*: A pointer to a void function, or 0 to set as none

template <typename T>

void **mono::QueueInterrupt::fall** (T * *tptr*, void (T::*)(void) *mptr*)

Attach a member function to call when a falling edge occurs on the input

Parameters

- *tptr*: pointer to the object to call the member function on
- *mptr*: pointer to the member function to be called

uint32_t **FallTimeStamp** ()

On fall interrupts, this is the μ Sec. ticker timestamp for the falling edge inetrrupt. You can use this to calculate the time passed from the interrupt occurred, to the time you process it in the application run loop.

Return The ticker time of the falling edge in micro seconds

uint32_t **RiseTimeStamp** ()

On rise interrupts, this is the μ Sec. ticker timestamp for the rising edge inetrrupt. You can use this to calculate the time passed from the interrupt occurred, to the time you process it in the application run loop.

Return The ticker time of the rising edge in micro seconds

bool **Snapshot** ()

The pin value at the moment the H/W interrupt triggered The callback might be executed some time after the actual inetrrupt occurred. THis method return the pin state at the moment of the interrupt.

Return The pin state, at the time of the interrupt

bool **willInterruptSleep** () const

Interrupt will abort sleep mode to run handler.

If interrupt fires during sleep mode, Mono will wake up to service the handler in the run loop

void **setInterruptsSleep** (bool *wake*)

Set if this interrupt will wake Mono from sleep.

Set to true to wake from sleep and continue the run loop upon interrupts.

Parameters

- *wake*: true to enabled wake-from-sleep

template <typename T>

void **mono::QueueInterrupt::change** (T * *tptr*, void (T::*)(void) *mptr*)

Attach a member function to call when a rising or falling edge occurs on the input

Parameters

- *tptr*: pointer to the object to call the member function on
- *mptr*: pointer to the member function to be called

Protected Functions

void **taskHandler** ()

This is the method that gets called by the run loop.

NOTE that this is not an interrupt function, you can do stuff that take some time.

Regex

class **mono::Regex**

This class is a C++ wrapper around the C library called SLRE (Super Lightweight Regular Expressions)

Pattern syntax

(?*i*) Must be at the beginning of the regex. Makes match case-insensitive ^ Match beginning of a buffer \$ Match end of a buffer () Grouping and substring capturing \s Match whitespace \S Match non-whitespace \d Match decimal digit \n Match new line character \r Match line feed character \f Match form feed character \v Match vertical tab character \t Match horizontal tab character \b Match backspace character + Match one or more times (greedy) +? Match one or more times (non-greedy) * Match zero or more times (greedy) *? Match zero or more times (non-greedy) ? Match zero or once (non-greedy) x|y Match x or y (alternation operator) \meta Match one of the meta character: ^\$().[]*+?! \xHH Match byte with hex value 0xHH, e.g. [. . .] Match any character from set. Ranges like [a-z] are supported [^ . . .] Match any character but ones from set

<https://github.com/cesanta/slre>

Public Types

typedef slre_cap **Capture**

Regex Match capture object holding the first match capture

See [Regex](#)

Public Functions

Regex (String *pattern*)

Create a regular expression object from a pattern string

bool **IsMatch** (String *matchStr*)

Test if a string matches the regex pattern

Return true on match, false otherwise

bool **Match** (String *matchStr*, Capture **captureArray*, uint32_t *capArraySize*)

Get a the first capture group match from a string

The [Regex](#) class does not allocate any capure objects, so you must supply all needed objects for captures.

```
Regex::Capure caps[3];
Regex reg("(..) (..) (..)");
bool success = reg.Match("test my regex", caps, 3);
```

Return true on match, false otherwise

Parameters

- *matchStr*: The string to match against the regex pattern
- *captureArray*: A pointer to a array of Capture objects
- *capArraySize*: The size of the provided capture array

String **Value** (Capture *&cap*)

Return the string value from a match capture object

String

class mono::String

High level string class, that is allocated on the HEAP or rodata

The mono framework has it own string class, that either reside on the HEAP or inside the read-only data segment (.rodata).

We use this string class to pass string data to async routines like the View 's scheduleRepaint method. Because views might be repainted at any point in time, we cannot have view data reside on the stack. This string class hold its data on the HEAP, but behaves as it would reside on the stack.

THis string class takes care of all alloc and dealloc of memory. It is a referenced based string class. You should not pass pointers of C++ references to this class, but instead normal assignment or pass the full class to functions. The efficient copy / assignment operator methods on the class ensure only data references are passed, behind the scenes.

For example:

```
String str = String::Format("Hello World, number: %i", 1);
String str2 = str;
String str3 = str2;
```


In the code only 1 copy of the string data is present in memory. And only references are passed to the objects `str2` and `str3`. Only as the last object is deallocated is the data disposed from the HEAP.

These features makes the class very lightweight and safe to pass around functions and objects.

Subclassed by `mono::network::Url`

ScheduledTask

class `mono::ScheduledTask`

Schedule function a call at a point in the future using the RTC.

A `ScheduledTask` is a wrapper around a function call that is scheduled some time in the future. You create a task by defining a function to be called, and a [DateTime](#) on when it should be called.

A [ScheduledTask](#) differs from [Timer](#) by not being repetitive by nature. Also, the time resolution on is seconds, not milliseconds as on Timers.

An advantage of scheduled tasks is they can execute in sleep mode. They have the ability to wake Mono from sleep, either completely or just to execute simple house keeping code inside the sleep mode state!

Scheduled tasks rely on the RTC system to execute. They use the global system [DateTime](#) object to execute when they are due. A [ScheduledTask](#) executes once. If you wish to re-schedule the task at a new point in the future, use the method [reschedule](#).

Execution in Sleep Mode

You can opt-in to allow your task to run in sleep mode. This means Mono's CPU wake up and executes your task's callback function. You enabled sleep mode execution by:

```
ScheduledTask task(DateTime::now().addMinutes(30));
task.setRunInSleep(true);
task.setTask<MyClass>(this, &MyClass::myCallback);
```

The function is executed without exiting the frameworks sleep state. This means the auxillary power is not enabled. (Display, Wireless chip and sensors are off.) Inside you callback function you can do small lightweight tasks, and when your function returns Mono re-enter the sleep state.

Wake-up from a task

If you want to wake Mono from sleep, you must indicate to the `IPowerManager` that sleep mode should be exited. This is done by setting the flag:

```
IApplicationContext::Instance->PowerManager->__shouldWakeUp = true;
```

This will trigger a full wake-up, just as toggling the user button does.

RTC must run

Scheduled tasks *will not* work if the RTC system is not started. This system is automatically started on reset, so the system is enabled by default.

Just like [Timer](#) you are not guaranteed to have you function executed at the exact moment defined by the [DateTime](#) provided. The guarantee is that your function will not be executed *before* the provided time stamp.

Inherits from `mono::IQueueItem`

Public Functions

`ScheduledTask()`

Construct an empty (non-executable) Task.

You must provide a callback function and reschedule the task using the accessors in subsequent calls.

ScheduledTask (**const** DateTime &*scheduledTime*)

Construct a task that is due at a provided time stamp.

Create a *ScheduledTask* that is due on the given *DateTime*, which must be in the future. You must also provide the callback function using the *setTask* method.

Parameters

- *scheduledTime*: The point in the future where the task should run

void **reschedule** (**const** DateTime &*newTime*)

Reschedules the task at a new point in the future.

Tasks only executes once. To enable re-occurring tasks, use this method to schedule the task again.

Parameters

- *newTime*: The new point in the future where the task is run again

bool **willRunInSleep** () **const**

Get is this task will execute in sleep mode.

void **setRunInSleep** (bool *run*)

Allow this task to run in sleep mode.

If you set this to `true` the task will execute in sleep mode. Note that it does not abort sleep (wake up), it execute inside the sleep mode.

Task that do not run in sleep are executed ASAP after wake-up.

Parameters

- *run*: `true` if the task can run in sleep, `false` otherwise

template <typename *Class*>

void **mono::ScheduledTask::setTask** (**Class** * *context*, void (**Class**::*) (void) *memptr*)

Set the tasks callback function.

Here you provide the function that is called when the task is scheduled

Parameters

- *context*: The `this` pointer or object instance
- *memptr*: A pointer to a member method on a class

Public Static Functions

void **processScheduledTasks** (bool *isSleeping* = false)

System routine of run any due scheduled task.

the RTC system automatically calls this method, you should not call it yourself.

bool **pendingScheduledTasks** (bool *inSleep* = false)

Returns `true` if there are scheduling tasks pending for processing.

This means a running task has timed out and are ready to have its handler called. tasks with no callback handler are not regarded as pending.

Parameters

- `inSleep`: If this static method is called from inside sleep mode, set to `true`

Protected Functions

void **runTask** (bool *inSleep* = false)
Execute the tasks callback function

bool **isDue** () const
Return `true` if the tasks time stamp has been reached

Protected Static Attributes

GenericQueue<ScheduledTask> **queue**
The global singleton queue of pending tasks

Timer

class `mono::Timer`

A queued *Timer* class, recurring or single shot.

A timer can call a function at regular intervals or after a defined delay. You can use the timer to do periodic tasks, like house-keeping functions or display updates.

Queued callback

The timer uses the Application Run Loop to schedule the callback handler function. This means your callback are not executed inside a hardware interrupt context. This is very convenient since you can do any kind of heavy lifting in your callback handler, and your code is not pre-empted.

Precision

You should note that the timer are not guaranteed to be precisely accurate, it might fire later than your defined interval (or delay). The timer will not fire before your defined interval though. If you use any blocking `wait` statements in your code, you might contribute to loss in precision for timers.

If you want precise hardware timer interrupts consider the `mbed Ticker` class, but you should be aware of the hazards when using hardware interrupts.

Example

Create a recurring timer that fires each second:

```
Timer timr(1000);
timr.setCallback<MyClass>(this, &MyClass::callback);
timr.Start();
```

The member function `callback` will now be called every second. If you want to use a single shot callback with a delay, *Timer* has a convenience static function:

```
Timer delay = Timer::callOnce<MyClass>(100, this, &MyClass::callback);
```

Now `delay` is a running timer that calls `callback` only one time. *Note* that the timer object (`delay`) should not be deallocated. Deallocating the object will cause the timer to shut down.

Time slices

Say you set an interval of 1000 ms, and your callback takes 300 ms to execute. Then timer will delay for 700 ms and not 1000 ms. It is up to you to ensure your callback do not take longer to execute, than the timer interval.

Inherits from `mono::IRunLoopTask`

Public Functions

Timer ()

Construct an empty (zero-timeout) re-occurring timer.

After calling this constructor, you must set the time out and callback function. Then start the timer.

Timer (uint32_t intervalOrTimeoutMs, bool snglShot = false)

Create a new timer with with an interval or timeout time.

All newly created timers are stopped as default. You must also attach callback handler to the timer, before it can start.

Parameters

- `intervalOrTimeoutMs`: The timers time interval before it fires, in milliseconds
- `snglShot`: Set this to `true` if the timer should only fire once. Default `false`

void start ()

Start the timer and put into *running* state.

Note: You must set a callback handler, before starting the timer.

void Start ()

void stop ()

Stop the timer, any pending callback will not be executed.

void Stop ()

bool SingleShot () const

See if the timer is single shot.

bool Running () const

See if the timer is currently running

void setInterval (uint32_t newIntervalMs)

Set a new timer interval.

Parameters

- `newIntervalMs`: The timer interval in milliseconds

template <typename Owner>

void mono::Timer::setCallback (Owner * obj, void (Owner::*) (void) memPtr)

Sets a C++ callback member function to the timer.

Parameters

- `obj`: A pointer to the callback member function context (the `this` pointer)
- `memPtr`: A pointer to the member function, that is the callback

void setCallback (void (*cFunction)) void

Sets a callback handler C function to the timer.

Parameters

- `cFunction`: A pointer to the C function, that is the callback

Public Static Functions

template <typename Owner>

static Timer* **mono::Timer::callOnce**(uint32_t delayMs, Owner * obj, void(Owner::*)(void)

Create a single shot timer with a delay and callback function.

The timer object is created on the HEAP, which allows it to exist across stack frame contexts. You can safely create a `callOnce(...)` timer, and return from a function. Even if you do not have a reference to the timer object, it will still run and fire. The timer deallocates itself after it has fired. It cannot be reused.

Return A pointer to the single shot timer

Parameters

- `delayMs`: Delay time before the timer fires, in milliseconds.
- `obj`: A pointer to the callback function member context (the `this` pointer)
- `memPtr`: A pointer to the callback member function

static Timer* **callOnce**(uint32_t delayMs, void (*memPtr)) void

Create a single shot timer with a delay and callback function.

The timer object is created on the HEAP, which allows it to exist across stack frame contexts. You can safely create a `callOnce(...)` timer, and return from a function. Even if you do not have a reference to the timer object, it will still run and fire. The timer deallocates itself after it has fired. It cannot be reused.

Return A pointer to the single shot timer

Parameters

- `delayMs`: Delay time before the timer fires, in milliseconds.
- `memPtr`: A pointer to the callback C function

Protected Functions

void **taskHandler**()

This is the method that gets called by the run loop.

NOTE that this is not an interrupt function, you can do stuff that takes some time.

Core Classes

AppRunLoop

class **mono::AppRunLoop**

This is the event run-loop for all mono applications. This class is instantiated and used inside the *IApplication-Context* interface. You should not interact with this class directly.

The run loop handles non-critical periodic tasks. Classes can install tasks in the run-loop. Such classes are usually repetitive timers or lazy interrupt handlers.

Some standard system tasks are handled statically inside the loop, like the USB serial reads.

Public Functions

void **exec** ()

Start executing the run loop.

void **CheckUsbDtr** ()

Do a single check of the DTR on the virtual UART.

bool **addDynamicTask** (IRunLoopTask *task)

Add a task to the dynamic task queue. This task is repeated over and over, until it reports that its should not be scheduled.

The task is added to a linked list, runtime is *n*.

Return Always true at this point

bool **removeDynamicTask** (IRunLoopTask *task)

Remove a task from the dynamic task queue. This will search the queue for the pointer provided, and remove it.

Return `true` if the object was found and removed, `false` otherwise.

Parameters

- `task`: A pointer to the object, that should be removed

void **setResetOnUserButton** (bool *roub*)

Sets the *Reset on User Button* mode.

If `true` the run loop will check the user button, and if pressed it will trigger a software reset.

Parameters

- `roub`: `true` will reset on user button, `false` is normal functionality.

void **quit** ()

Terminate the run loop. Application events and more will stop working

You should use this, if you use your own embedded run loops.

Public Members

bool **resetOnDTR**

As default behaviour the run loop will force a reset on high-to-low transition on the serial ports DTR (Data Terminal Ready) line.

This property controls this feature, setting it to `true` will enable software reset via the serial connection. This means the *monoprogrammer* can reset the device and connect to the bootloader.

Setting this to `false` means *monoprogrammer* cannot automatically reset into the bootloader, you must press the reset button yourself.

uint32_t **TouchSystemTime**

The CPU time used on processing touch input. This includes:

- ADC sampling (approx 16 samples)
- Touch value evaluation, and possible conversion into events
- Traversing the responder chain

- Handling TouchBegin, TouchEnd & TouchMove, and any function they call

This time includes the execution of your code if you have any button handlers or touch based event callbacks.

uint32_t **DynamicTaskQueueTime**

The CPU time used on processing the dynamic task queue The time spend here include all queued tasks and callbacks. these could be:

- Timer* callback
- Any *QueueInterrupt* you might have in use
- All display painting routines (repainting of views subclasses)
- Any custom active *IRunLoopTask* you might use

Nearly all callbacks are executed with origin inside the dynamic task queue. Expect that the majority of your code are executed here.

Protected Functions

bool **runLoopActive** mono::AppRunLoop::__DEPRECATED("Will be removed in future releases")

As long as this is true the stadard run loop will run

If set to false, the run loop will exit and main() will return, which you should absolutely **not** do!.

void **processDynamicTaskQueue** ()

Execute all tasks in the dynamic task queue

void **removeTaskInQueue** (IRunLoopTask *task)

Internal method to sow together neighbourhoods in the linked list

void **process** ()

Process a single iteration of the run loop

void **checkUsbUartState** ()

read the UART DTR state if possible

Protected Attributes

bool **lastDtrValue**

The last seen serial DTR value. Reset can only happen in transitions.

bool **resetOnUserButton**

Set to true if you want the run loop to call software reset when pressing the user button. Initial value is false

IRunLoopTask ***taskQueueHead**

A pointer to the head task of the dynamic task queue. If no task are in the queue, this is NULL

GenericQueue

template <typename *Item*>

class `mono::GenericQueue`

A templated [Queue](#), where template defines the queue element type.

This class is identical to [Queue](#), but it uses templating to preserve type information.

See [Queue](#)

Inherits from `mono::Queue`

IApplication

class `mono::IApplication`

Entry point for all mono applications, abstract interface.

Every mono application must implement this interface. This is the starting point of the your application code, you must call it after the runtime initialization.

You do this from inside the `main()` function. Your main function should look like this:

```
int main()
{
    // Construct you IApplication subclass
    MyIApplicationSubclass appCtrl;

    // Tell the IApplicationContext of your existence
    IApplicationContext::Instance->setMonoApplication(&appCtrl);

    // Start the run loop... - and never come back! (Gollum!, Gollum!)
    return appCtrl.enterRunLoop();
}
```

Your mono applications entry point must be your own subclass of [IApplication](#). And you *must* initialize it inside (not outside) the `main()` function. This is strictly necessary, because the [IApplicationContext](#) must be ready when the [IApplication](#) is executed.

Also you must call the [enterRunLoop](#) method from main, to enter the event loop and prevent `main()` from returning.

Public Functions

`IApplication()`

Construct the global Application class.

Constructor for the global Application Controller. See [IApplication](#) for a description on when to call this constructor.

`virtual void monoWakeFromReset() = 0`

Called when mono boot after having been power off or after a reset This method is only called once, you should use it to do initial data and object setup.

When this method returns mono will enter in an event loop, so use this method to setup event listeners for your code.

Do not call this method yourself, it is intended only to be called by the mono framework runtime.

virtual void monoWillGotoSleep () = 0

The runtime library calls this function when the MCU will go into standby or sleep mode. Use this method to disconnect from networks or last-minute clean ups.

When you return from this method the system will goto sleep, and at wakeup the *monoWakeFromSleep()* method will be called automatically.

Do not call this method yourself, it is intended only to be called by the mono framework runtime.

virtual void monoWakeFromSleep () = 0

Called when mono comes out of a standby or sleep state, where the MCU instruction execution has been paused.

Use this method to reestablish I/O connections and refresh data objects.

You should not call this method your self, it is intended only to be called by the mono framework runtime.

int enterRunLoop ()

Start the mono application run loop.

Start the main run loop for your mono application. This method calls the global *IAApplicationContext* run loop.

The last line in the main.cpp file must be a call to this function:

```
int main()
{
    MyIAApplicationSubclass appCtrl;

    // Some app ctrl setup code here perhaps?

    return appCtrl.enterRunLoop();
}
```

Return The run loop never returns, the return type is only for comformaty.

IAApplicationContext

class mono::IAApplicationContext

The Application context class is a singleton class that is automatically instanciated by the framework. You should not need to interact with it directly. It is allocated on the stack, with its member objects.

The application context controls the application event loop at hardware event inputs. It is essential for communicating with Serial-USB and the display.

Depending on the execution context (hardware mono device or simulator), different subclasses of this interface it used. This interface is provided to give your application code a pointer to the concrete implementation of the application context. Regardless of running on a simulator or the actual device.

Subclassed by mono::ApplicationContext

Public Functions

virtual int exec () = 0

Start the application run loop.

This method starts the global run/event loop for the mono application. The method never returns, so a call to this function should be the last line in your `main()` function.

The event loop automatically schedules the sub system, such as the network, inputs and the display.

virtual void setMonoApplication (mono::*IApplication* *app) = 0

Sets a pointer to the mono application object

Public Members

power::*IPowerManagement* ***PowerManager**

A pointer the power management system.

Pointer to the global power management object, that controls power related events and functions. Use this pointer to go into sleep mode' or get the current battery voltage level.

AppRunLoop ***RunLoop**

A reference to the main run loop of the application. This pointer must be instantiated by subclasses

display::*IDisplayController* ***DisplayController**

Pointer to the display interface controller object. The object itself should be initialized differently depending on the ApplicationContext

ITouchSystem ***TouchSystem**

Pointer to the touch system controller object.

The touch system handles touch input from the display or other input device. It must be initialized by an ApplicationContext implementation.

The touch system is the source of *TouchEvent* and delegate these to the *TouchResponder* classes. It is the *ITouchSystem* holds the current touch calibration. To re-calibrate the touch system, you can use this reference.

See *ITouchSystem*

QueueInterrupt ***UserButton**

The User Button queued interrupt handler.

Here you add your application handler function for mono user button. To handle button presses you can set a callback function for the button push.

The callback function is handled in the *AppRunLoop*, see the *QueueInterrupt* documentation for more information.

Note that the default initialized callback handler will toggle sleep mode. This means that if you do not set your own handler, the user button will put mono into sleep mode. The default callback is set on the `.fall(...)` handler.

Example for replacing the user button handler, with a reset handler:

```
// the button callback function
void MyApp::handlerMethod()
{
    IApplicationContext::SoftwareReset();
}

// on reset install our own button handler callback
void MyApp::monoWakeFromReset()
{
    IApplicationContext::Instance->UserButton->fall<MyApp>(this, &
↪MyApp::handlerMethod);
}
```

sensor::*ITemperature* ***Temperature**

A pointer to the Temperature sensor, if present in hardware.

This is an automatically initialized pointer to the temperature object, that is automatically created by the framework.

sensor::*IAccelerometer* ***Accelerometer**

A pointer to the Accelerometer, if present in hardware.

This is an automatically initialized pointer to the accelerometer object, that is automatically created by the framework.

sensor::*IBuzzer* ***Buzzer**

A pointer to the buzzer, if present in hardware.

This is an automatically initialized pointer to the buzzer object, that is automatically created by the framework.

IRTCSystem ***RTC**

A Pointer to the current RTC interface, if such exists.

Mono has a RTC clock, that can control a system date time clock, that is accessed by the *DateTime* class

You can start or stop the RTC using this interface. Note that this pointer might be NULL

Public Static Functions

static void EnterSleepMode ()

The mono application controller should call this to give the Application Context a reference to itself.

This will ensure the Application Controllers methods gets called. Call this method to make mono goto sleep.

In sleep mode the CPU does not execute instruction and powers down into a low power state. The power system will turn off dynamically powered peripherals.

NOTE: Before you call this method make sure that you configured a way to go out of sleep.

static void ResetOnUserButton ()

Enable *Reset On User Button* mode, where user button resets mono.

If your application encounters unmet dependencies (missing SD Card) or gracefully handles any runtime errors, you can call this method. When called, the run loop will reset mono if the user button (USER_SW) is activated.

This method allows you to reset mono using the user button, instead of the reset button.

static void SleepForMs (uint32_t ms)

Enter MCU sleep mode for a short time only. Sets a wake-up timer as the preferred interval, and calls the *EnterSleepMode* method.

Parameters

- ms: The number of milli-second to sleep

static void SoftwareReset ()

Trigger a software reset of Mono's MCU.

Calls the MCU's reset exception, which will reset the system. When reset the bootloader will run again, before entering the application.

static void SoftwareResetToApplication ()

Trigger a software reset of MOno's MCU, that does not load the bootloader.

Use this to do a fast reset of the MCU.

static void SoftwareResetToBootloader ()

Trigger a software reset, and stay in bootloader.

Calls the MCU reset exception, which resets the system. This method sets bootloader parameters to stay in bootloader mode.

CAUTION: To get out of bootloader mode you must do a hard reset (by the reset button) or program mono using monoprogram.

Public Static Attributes

`IApplicationContext *Instance = NULL`

Get a pointer to the global application context

Protected Functions

virtual void enterSleepMode () = 0

Subclasses should override this method to make the system go to sleep

virtual void sleepForMs (uint32_t ms) = 0

Subclasses should override this to enable sleep mode for a specific interval only.

virtual void resetOnUserButton () = 0

Subclasses must implement this to enable the "Reset On User Button" behaviour. See [ResetOnUserButton](#)

virtual void _softwareReset () = 0

Subclasses must implement this method to enable software resets. See [SoftwareReset](#)

virtual void _softwareResetToApplication () = 0

Subclasses must implement this to enable software reset to application See [SoftwareResetToApplication](#)

virtual void _softwareResetToBootloader () = 0

Subclasses must implement this method to allow *reset to bootloader* See [SoftwareResetToBootloader](#)

IApplicationContext (`power::IPowerManagement *pwr, AppRunLoop *runLp, display::IDisplayController *dispCtrl, ITouchSystem *tchSys, QueueInterrupt *userBtn, sensor::ITemperature *temp = 0, sensor::IAccelerometer *accel = 0, sensor::IBuzzer *buzzer = 0, IRTCSysyem *irtc = 0`)

Protected constructor that must be called by the sub class. It sets up needed pointers for the required subsystems. This ensure the pointers are available when class members' constructors are executed.

If this constructor did not setup the pointers, the PowerManagement constructor would see the *Instance* global equal `null`.

IRTCSystem

class mono::IRTCSystem

Abstract interface for controlling a MCU specific RTC.

This interface defines methods for setting up the RTC component, and starting and stopping the RTC interrupt.

The *DateTime* class contains a static *DateTime* object that represents the system time. It is this RTC interface's task to maintain a valid system timestamp by incrementing the static system *DateTime* object.

Subclassed by `mono::MonoRTC`

Public Functions

virtual void **setupRtcSystem** () = 0

Setup the RTC system with all register setting and interrupts needed.

This should not start the RTC, just initialize it - making it ready for calling *startRtc()*.

Any subclass must implement this function - it is automatically called by the *IApplicationContext* class.

virtual void **startRtc** () = 0

Start the built-in RTC, effectively starting the system date/ time clock.

virtual void **stopRtc** () = 0

Stop the built-in RTC, effectively pausing the system date/ time clock.

Public Static Attributes

bool **__shouldProcessScheduledTasks** = false

The RTC should set this when it is time to process scheduled tasks.

The run loop and the sleep loop should check this variable to know when to process all scheduled tasks. You must set this variable in your RTC interrupt function.

IRunLoopTask

class `mono::IRunLoopTask`

This interface defines tasks or functions that can be inserted into the ApplicationRunLoop.

The interface defines a method that implements the actual logic. Also, the interface defines the pointers *previousTask* and *nextTask*. These define the previous and next task to be run, in the run loops task queue.

To avoid dynamic memory allocation of linked lists and queues in the run loop, the run loop handler functions, are themselves items in a linked list.

All classes that want to use the run loop, must inherit this interface.

NOTE that tasks in the run loop do not have any constraints on how often or how rare they are executed. If you need a function called at fixed intervals, use a Ticker or timer.

Subclassed by `mono::display::ILI9225G`, `mono::power::MonoPowerManagement`, *`mono::QueueInterrupt`*, *`mono::Timer`*, `mono::ui::Animator`

Protected Functions

virtual void **taskHandler** () = 0

This is the method that gets called by the run loop.

NOTE that this is not an interrupt function, you can do stuff that takes some time.

Protected Attributes

IRunLoopTask *previousTask

A pointer to the previous task in the run loop The the task is the first in queue, this is NULL

IRunLoopTask *nextTask

A pointer to the next task to be run, after this one. If this task is the last in queue, this is NULL

bool singleShot

Tasks are expected to be repetative. They are scheduled over and over again. Set this property to true and the task will not scheduled again, when handled.

ITouchSystem

class mono::ITouchSystem

Interface for the Touch sub-system

Subclassed by mono::MonoTouchSystem

Public Functions

virtual void init () = 0

Initialize the touch system controller.

NOTE: This method is called by the current *IApplicationContext* automatically upon reset. You should call this manually.

virtual void processTouchInput () = 0

Sample the touch inputs and dispatch events if needed.

This *AppRunLoop* calls this method automatically on each cycle. If you wish to limit the sample frequency, your subclass must manually abort some calls to this method.

Note: Inactive touch systems must ignores calls to this method.

virtual int ToScreenCoordsX (int touchPos, uint16_t screenWidth) = 0

Sub-classes must convert corrdinates to screen pixels (X axis)

virtual int ToScreenCoordsY (int touchPos, uint16_t screenHeight) = 0

Sub-classes must convert corrdinates to screen pixels (Y axis)

virtual TouchCalibration CurrentCalibration () = 0

Get the touch systems current calibration config.

virtual void setCalibration (TouchCalibration &cal) = 0

Set a new calibration config on the touch system.

virtual void activate ()

Activate (enables) the touch system.

virtual void deactivate ()

Deactivates (disables) the touch system.

virtual bool isActive () const

Retuern true if touch system is active.

Protected Functions

void **runTouchBegin** (geo::*Point* &pos)

Run the system system handlers of the begin touch event.

NOTE: You should not call this method manually. It is used by the sub- class of this interface.

Parameters

- pos: The begin event position on the screen

void **runTouchMove** (geo::*Point* &pos)

Run the system system handlers of the move touch event.

NOTE: You should not call this method manually. It is used by the sub- class of this interface.

Parameters

- pos: The move event position on the screen

void **runTouchEnd** (geo::*Point* &pos)

Run the system system handlers of the end touch event.

NOTE: You should not call this method manually. It is used by the sub- class of this interface.

Parameters

- pos: The end event position on the screen

ManagedPointer

template <typename ContentClass>

class mono::ManagedPointer

Pointer to a heap object, that keeps track of memory references.

The managed pointer is an object designed to live on the stack, but point to memory cobntent that live on the heap. The *ManagedPointer* keeps track of memory references, such that the it can be shared across multiple objects in your code.

It maintains an internal reference count, to keep track of how many objects holds a reference to itself. If the count reaches zero, then the content is deallocated.

With *ManagedPointer* you can prevent memory leaks, by ensuring un-references memory gets freed.

Public Functions

ManagedPointer ()

Create an empty pointer

void **Surrender** ()

Give up this ManagedPointers refrences to the content object, by setting its pointer to NULL.

This means that if the Reference count is 1, this pointer is the only existing, and it will not dealloc the content memory upon deletion of the *ManagedPointer*.

We Reference count is > 1, then other ManagedPointers might dealloc the content memory.

TouchEvent

`class mono::TouchEvent`

TouchResponder

`class mono::TouchResponder`

The TouchReponder handles incoming touch events.

The *TouchResponder* is an interface that classes and inherit from to receive touch input events. This class also defined global static method used by Mono's hardware dependend touch system. These static methods receives the touch events and delegates them to all objects in the responder chain.

You can make any object a receiver of touch events if you inherit from this interface. You need to override 3 methods:

- RespondTouchBegin
- RespondTouchMove
- RespondTouchEnd

These methods are called on any subclass when touch input events are received. *Note* that your subclass will receive all incoming events not handled by other responders.

If you want to make touch enabled graphical elements, you should use the interface ResponderView. This class is the parent class for all touch enabled views.

See ResponderView

See *ITouchSystem*

Inherits from `mono::IQueueItem`

Subclassed by *mono::PowerSaver*, *mono::ui::ResponderView*

Public Functions

TouchResponder ()

Create a new responder object that receives touch input.

Upon creation, this object is automatically inserted into the responder chain, to receive touch input events.

void **Activate ()**

Add this responder to the responder chain

void **Deactivate ()**

Remove this responder from the responder chain

Public Static Functions

TouchResponder ***FirstResponder ()**

Get the top of the responder queue, the first to handle touch.

If there are no objects repnding to touch, this will return `NULL`

UI Widgets

AbstractButtonView

class `mono::ui::AbstractButtonView`

Inherits from `mono::ui::ResponderView`

Subclassed by `mono::ui::OnOffButtonView`

Public Functions

template <typename Owner>

void `mono::ui::AbstractButtonView::setClickCallback(Owner * obj, void(Owner::*)(void) m)`

Attach a member function as the button click handler.

Provide the callback member function you want to be called when the button is clicked.

NOTE: There can only be one callback function

Parameters

- `obj`: A pointer to the object where the callback method exists
- `memPtr`: A pointer to the callback method itself

void `setClickCallback(void (*memPtr)) void`

Attach a C function pointer as the button click handler.

Provide a pointer to the callback C function, you want to be called when the button is clicked.

NOTE: There can only be one callback function.

Parameters

- `memPtr`: A pointer to the C function callback

Protected Functions

AbstractButtonView()

Cannot construct abstract buttons.

AbstractButtonView(`geo::Rect rect`)

Construct a button with a defined viewRect.

BackgroundView

class `mono::ui::BackgroundView`

A full screen solid colored background.

Use this view to paint the background any color you like. This view is by default the same size as Mono's display. It can be used as a solid colored background for your GUI.

To save memory you should only have one background view per app.

Painting on top of the background

To ensure that the background is *behind* all other UI widgets on the screen, it has to be rendered first. Then all other views will appear on top of the background. To achieve this, it is important to keep track of your repaint order. All paint calls must begin with a *scheduleRepaint* to the background view.

Example

```
// Construct the view (should always be a class member)
mono::ui::BackgroundView bg;

// set an exiting new background color
bg.setBackgroundColor(mono::display::RedColor);

//show the background
bg.show();

// show all my other views, after the call to bg.show()
```

Inherits from *mono::ui::View*

Public Functions

BackgroundView (display::Color *color* = StandardBackgroundColor)

Construct a Background view on the entire screen.

This constructor takes an optional color to use for the background. If no argument is provided the color default to the View::StandardBackgroundColor

Also by default the view dimension is the entire display, meaning it has a bounding rect (viewRect) that is (0,0,176,220).

Note: Remember to call *show* to make the view visible.

Parameters

- *color*: An optional background color

BackgroundView (geo::Rect *const* &*rect*, display::Color *color* = StandardBackgroundColor)

Construct a *BackgroundView* with a specific position and size.

If you need a solid color (as background) in a confined space on the screen, then you can use this constructor.

Parameters

- *rect*: The position and size of the view
- *color*: An optional color, default is StandardBackgroundColor

void **setBackgroundColor** (display::Color *color*)

Sets a new background color on the view.

Set a new background color on the view. If the view is shared between multiple UI scenes, you can use this method to change the background color.

When changing the background color the view is not automatically repainted. You must call *scheduleRepaint* yourself.

mono::display::Color **Color** () *const*

Gets the current background color.

void **repaint** ()

Repaint the view content, using the [View::painter](#).

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the [scheduleRepaint\(\)](#) method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of [View](#), this method *must* be overwritten.

ButtonView

class `mono::ui::ButtonView`

A Push Button UI Widget.

This is a common state-less push button. It is basically a bordered text label. This button reacts to touch input (pushes) and can call a function when it is pushed.

You provide the button with a callback function, that gets called when the button is pushed. A valid button push is a touch that begins *and ends* within the button boundaries. If a touch begins inside the buttons boudaries, but ends outside - the button click callback is not triggered.

You define the button dimensions by the Rect you provide in the constructor. Note that the resistive touch panel is not that precise, you should not create buttons smaller than 40x35 pixels. Also note that buttons do not automatically scale, when you set their text content.

Example

```
// Create the button (should normally be defined as a class member)
mono::ui::ButtonView btn(mono::geo::Rect(10,10,100,35), "Push Here")
```

```
// Setup a click handler
btn.setClickCallback<MyClass>(this, &MyClass::MyClickHandler);
```

```
// show the button on the screen
btn.show();
```

Inherits from [mono::ui::ResponderView](#)

Public Functions

ButtonView ()

Construct an empty button.

The button will have zero dimensions and no text.

ButtonView (geo::Rect *rect*, String *text*)

Construct a button with dimensions and text.

Creates a button with the provided dimensions and text to display. You still need to setup a callback and call [show](#).

Parameters

- *rect*: The view rect, where the button is displayed

- `text`: The text that is showed on the button

ButtonView (`geo::Rect rect`, `const char *text`)

Construct a button with dimensions and text.

Creates a button with the provided dimensions and text to display. You still need to setup a callback and call *show*.

Parameters

- `rect`: The view rect, where the button is displayed
- `text`: The text that is showed on the button

void **setText** (`String txt`)

Set the text content.

Sets the text that is displayed on the button. Note that the width and height of the button is not changed. You must change the buttons *viewRect* if your text is larger than the buttons dimensions.

When you set new text content, the button is automatically repainted

Parameters

- `txt`: The new text content

void **setFont** (`MonoFont const &newFont`)

Change the button fontface (font family and size)

You can change the buttons font to use a larger (or smaller) font.

void **setFont** (`GFXfont const &newFont`)

Change the buttons fontface (font family and size)

You can change the buttons font to use a larger (or smaller) font.

Parameters

- `newFont`: The font face to render the text content with

void **setBorder** (`Color c`)

Sets the border color.

This method will not schedule repaint! You must *scheduleRepaint* manually.

Parameters

- `c`: The new border color

void **setText** (`Color c`)

Sets the text color.

This method will not schedule repaint! You must *scheduleRepaint* manually.

Parameters

- `c`: The new text color

void **setHighlight** (Color *c*)

Sets the highlight color (border & text)

The highlight color is the color used to represented a button that is currently being pushed. This means that a touch event has started inside its boundaries. The highlight color is applied to both border and text.

This method will not schedule repaint! You must *scheduleRepaint* manually.

Parameters

- *c*: The new highlight color

void **setBackground** (Color *c*)

Sets the background color.

The background color of the fill color inside the button bounding rectangle.

This method will not schedule repaint! You must *scheduleRepaint* manually.

Parameters

- *c*: The new border and text color

void **setRect** (geo::Rect *rect*)

Set the view's position and size, by providing a rectangle object.

Note that this method does not repaint the view, you must do that explicitly.

Parameters

- *rect*: The view rectangle, containing size and position

const TextLabelView &**TextLabel** () const

Get a reference to the internal TextLabel object.

You get a `const` reference to the button internal *TextLabelView*

template <typename Owner>

void mono::ui::ButtonView::setClickCallback(Owner * obj, void(Owner::*)(void) memPtr)

Attach a member function as the button click handler.

Provide the callback member function you ewant to be called when the button is clicked.

NOTE: There can only be one callback function

Parameters

- *obj*: A pointer to the object where the callback method exists
- *memPtr*: A pointer to the callback method itself

void **setClickCallback** (void (**memPtr*)) void

Attach a C function pointeras the button click handler.

Provide a pointer to the callback C function, you ewant to be called when the button is clicked.

NOTE: There can only be one callback function.

Parameters

- *memPtr*: A pointer to the C function callback

void **repaint** ()
Painters.

ConsoleView

template <uint16_t W, uint16_t H>
class `mono::ui::ConsoleView`
Inherits from *mono::ui::View*

Public Functions

ConsoleView (geo::Point pos)
Construct a new *ConsoleView*, for viewing console output on the screen.

void **WriteLine** (String txt)
Write a string to the console, and append a new line.

Parameters

- `txt`: The string to write to the console

void **repaint** ()
Repaint the view content, using the *View::painter*.

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the *scheduleRepaint()* method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of *View*, this method *must* be overwritten.

int **lineLength** ()
Get the width of a line in characters.
<# description #>

Return Number of characters in one line

int **consoleLines** ()
Get the number lines in the console.
<# description #>

Return Numeber of text lines on the console view.

Protected Attributes

TextBuffer<(W-4)/5, (H-4)/9> **textBuffer**
Text buffer that hold the visible text in the console. When the console scrolls, the text in the buffer is overwritten.

bool **scrolls**

Becomes true when the console text has reached the bottom line of its view rectangle. And all text appending from now on, causes the console to scroll.

GraphView

class `mono::ui::GraphView`

Visualizes a data series as a graph, based on a associated data source.

This class can visualize an array of samples on a graph. You provide the data by subclasseing the *IGraphViewDataSource* to deliver to data to display.

This class only display the data, it does not hold or buffer it. In this sense the *GraphView* contains no state.

Example

To demonstrate a simple example of using the *GraphView* we must also create a data source. For an associated data source, let us wrap a simple C array as a *IGraphViewDataSource* subclass:

```
// Subclass the IGraphViewDataSource interface
class DataSource : public IGraphViewDataSource
{
private:

    // Use an internal array as data store
    uint8_t data[100];

public:

    // Override the method that provide data samples
    int DataPoint(int index) { return data[index]; }

    // Override the method that return the total length of the data set
    int BufferLenght() { return 100; }

    // Override the method that return the valid value range of the data
    // samples.
    int MaxSampleValueSpan() { return 256; }
};
```

The class `DataSource` is just an array with a length of 100. Note that we only store 8-bit data samples (`uint_t`), therefore the valid data range is 256. The *GraphView* expects the data values to be signed, meaning the valid range is from -127 to +127.

We have not provided any methods for putting data into the data source, but we will skip that for this example.

Now, we can create a *GraphView* that displays data from the array:

```
// Crate the data source object
DataSource ds;

// The view rectangle, where the graph is displayed
mono::geo::Rect vRect(0,0,150,100);

// create the graph view, providing the display rect and data
mono::ui::GraphView graph(vRect, ds);

//tell the graph view to be visible
```

```
graph.show();
```

Update Cursor

If you *IGraphViewDataSource* subclass overrides the method: `NewestSampleIndex()`, the *GraphView* can show an update cursor. The cursor is a vertical line drawn next to the latest or newest sample. The cursor is hidden by default, but you can activate it by overriding the data source method and calling `setCursorActive`.

Note that if you time span across the x-axis is less than 100 ms, the cursor might be annoying. I would recommend only using the cursor when your graph updates slowly.

Scaling and Zooming

the graph view will automatically scale down the data samples to be display inside its graph area. It displays the complete data set from the data source, and does not support displaying ranges of the data set.

If you wish to apply zooming (either on x or Y axis), you must do that by scaling transforming the data in the data source. You can use an intermediate data source object, that scales the data samples, before sending them to the view.

See *IGraphViewDataSource*

Inherits from *mono::ui::View*

Public Functions

GraphView()

Construct a *GraphView* with no *viewRect* and data source.

This constructor creates a *GraphView* object that needs a *viewRect* and source to be set manually.

You cannot display view objects that have a null-*viewRect*

See `setDataSource`

See *setRect*

GraphView (geo::Rect rect)

Construct a *GraphView* with a defined *viewRect*.

This constructor takes a *viewRect*, that defines the space where graph is displayed.

****No data will be displayed before you set a valid source****

See `setDataSource`

Parameters

- `rect`: The *viewRect* where the graph is displayed

GraphView (geo::Rect rect, const IGraphViewDataSource &dSource)

Construct a *GraphView* with *viewRect* and a data source.

Parameters

-

Protected Functions

void **repaint** ()

Repaint the view content, using the *View::painter*.

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the *scheduleRepaint()* method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of *View*, this method *must* be overwritten.

IGraphViewDataSource

class mono::ui::IGraphViewDataSource

Data provider interface for the *GraphView* class.

This interface defines the *DataSource* for *GraphView* objects. The graph view queries an associated data source object for the data to display. All *GraphView* objects must have a data source object that hold the data to be displayed. The data source interface exposes an array-like scheme for providing data to the *GraphView*.

This interface forces you to expose your data sample as an array, where all samples has an index. The index starts at index 0 and has variable length.

You must subclass this interface and override at least 3 virtual methods. These 3 methods are:

- *DataPoint(int)* : Return individual data samples
- *BufferLength()* : Return the full length of the data source
- *MaxSampleValueSpan()* : Return the full range of the data sample values

By providing the methods for retrieving data, getting the total length of the data buffer and defining the valid value range of the data samples.

If your subclass is representing a casual signal buffer, where samples are continuously written, you might override the method:

- *NewestSampleIndex()*

This method should return the index to the newest sample in the buffer. This enables the *GraphView* to display a scrolling cursor, that moves as the buffer data gets updates.

Note: You are in charge of notifying the associated *GraphView*'s when the data source content changes.

See *GraphView*

Public Functions

virtual int **DataPoint** (int *index*) = 0

Override this to return data point samples to the view.

Provides a sample from the data source. You must override this method to return samples at any given index.

Return the sample value at the given index

Parameters

- `index`: The 0-indexed sample position, that should be returned

virtual int BufferLength () = 0

Override this to return the data sample buffer length to the view.

Returns the length / the total number of data samples in the data source. You must override this method to return the total number of data sample in your data source implementation.

Return the size / length of the data source

virtual int MaxSampleValueSpan () = 0

The value span for the data samples. used to map the buffer samples to the screen (view height)

virtual int NewestSampleIndex ()

Return the position / index of the newest sample in the buffer.

Override this method to get a scrolling pointer on the *GraphView*, a pointer that is drawn at this index position.

Return Position of newest sample

ImageView

class mono::ui::ImageView

Displays a bitmap image on the display.

The *ImageView* can render a bitmap image on the display. It needs a image data source, that delivers the actual bitmap. (See *BMPImage*)

You provide the image data and a bounding rect where the *ImageView* is painted.

If you wish to use the class *BMPImage* as a image source, you must initialize the SD Card Filesystem first!

Example

```
// init the SD card before accessing the file system
```

```
// Open and prepare the BMP file to display
mono::media::BMPImage img("/sd/my_pic.bmp");
```

```
// create the view and provide the image source
mono::ui::ImageView imgView(&img);
```

```
// tell the image to be showed
imgView.show();
```

It is your responsibility to make sure the source image data object is staying around, and do not get deallocated. Preferreably you should make both the image source and the view class members.

Cropping

The image view can crop the source image, thereby only showing a selected portion. The default crop is defined by the views bounding rect. Naturally images larger than the view's rect will be cropped with respect to the upper left corner.

The default cropping Rect is therefore `*(0, 0, imageWidth, imageHeight)*`

Inherits from *mono::ui::View*

Public Functions

ImageView()

Construct an empty image view, where no image is displayed To display an image you need to call *setImage* later.

ImageView (media::Image *img)

Construct an UI image from an image file

At the moment only BMP images are supported! *Remember to initialize the mbed class object before calling this constructor!*

The image *viewRect* is set to the full screen size. Use *setRect* to adjust size and position.

Parameters

- *img*: The image data source to show

void **setImage** (media::Image *img)

Set a new image source object *Note: This method also resets the current cropping rectangle!*

Parameters

- *img*: A pointer to the new image to display

void **setCrop** (geo::Rect *crp*)

Set image cropping.

Define which portion of the image should be displayed inside the view's own bounding rectangle. By default as much of the original image as possible will be shown.

By defining a cropping rectangle you can define an offset and size to display from the source image.

The source image has the same coordinate system as the display. That is (0,0) is the upper left corner.

Parameters

- *crp*: A cropping rectangle

const mono::geo::Rect &Crop() **const**

Get the current cropping rectangle Get the current used cropping rectangle for the source image.

void **repaint** ()

Repaint the view content, using the *View::painter*.

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the *scheduleRepaint()* method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of *View*, this method *must* be overwritten.

Protected Attributes

`media::Image *image`

A pointer to the Image object that is to be displayed in the screen.

`geo::Rect crop`

Image crop rectangle. Setting this rect will crop the source image (non destructive).

OnOffButtonView

`class mono::ui::OnOffButtonView`

Inherits from `mono::ui::AbstractButtonView`

Public Functions

`void repaint ()`

Repaint the view content, using the `View::painter`.

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the `scheduleRepaint()` method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of `View`, this method *must* be overwritten.

ProgressBarView

`class mono::ui::ProgressBarView`

A UI widget displaying a common progress bar.

This progressbar is simply a rectangle with a line (progress indicator) inside. The indicator value is (by default) a value between 0 and 100, but you can set your own minimum and maximum points.

The progress value's minimum and maximum is automatically calculated into the correct pixel value, scaled to the pixel width of the progressbar.

Example

```
// Create the progressbar object
mono::ui::ProgressBarView prgs(mono::geo::Rect(10,10,156,100));

// set the progressbars indicator value to 50%
prgs.setValue(50);

// display it
prgs.show();
```

A common mistake

Be aware that the progressbar is painted asynchronously. This means you cannot increment its value inside a for-loop or alike.

This code will not work:

```
for (int i=0; i<100; i++) {
    prgs.setValue(i);
}
```

Even if the loop ran veery slow, you will not see a moving progress indicator. The reason is that the view is only painted in the run-loop, so no screen updates can happen from inside the for-loop!

You should use a continous timer, with a callback that increments the progress indicator:

```
void updateProgress() {
    prgs.setValue(i++);
}

mono::Timer tim(500);
tim.setCallback(&updateProgress);
```

This code inject a continous task to the run loop that can increment the progressbar. This is the correct way to animate a progressbar.

Inherits from *mono::ui::View*

Public Functions

ProgressBarView()

Create a ProgressBar with a zero view rect (0,0,0,0)

ProgressBarView (geo::Rect *rect*)

Create a *ProgressBarView* with values from 0 to 100.

Create a new *ProgressBarView*, with a defined view rect and default progress value span: 0 to 100, with a current value of 0.

Parameters

- *rect*: The view rect where the ProgressBar is painted

void **setValue** (int *newValue*)

Set a new progress value.

Set a new current value for the progress bar. The value is truncated to the existing value span (min and max values).

Changes to the value will trigger the *value changed callback* and cause the view to schedule itself for repaint.

Parameters

- *newValue*: The new value

void **setMaximum** (int *max*)

Define a new minimum value for the progress indicator.

SETTERS.

void **setMinimum** (int *min*)

define a new maximum value for the progress indicator

template <typename Owner>

```
void mono::ui::ProgressBarView::setValueChangedCallback(Owner * cnxt, void(Owner::*)(v)
    Set a progress value change callback function.
```

Get notification callback everytime this progressbar changes its value

Parameters

- `cnxt`: A pointer to the callback member context (the `this` pointer)
- `memPtr`: A pointer to the callback member function

```
int Minimum() const
    GETTERS.
```

```
int Maximum() const
    GETTERS.
```

Protected Functions

```
void init()
    convenience initializer
```

```
void repaint()
    MISC.
```

ResponderView

```
class mono::ui::ResponderView
```

Inherits from *mono::ui::View*, *mono::TouchResponder*

Subclassed by *mono::ui::AbstractButtonView*, *mono::ui::ButtonView*, *mono::ui::TouchCalibrateView*

Public Functions

```
void show()
    Shows (repaints) the view and insert into the responder chain.
```

See *View::show*

```
void hide()
    hides the view, and remove from the responder chain
```

See *View::hide*

Protected Functions

```
void RespondTouchBegin(TouchEvent &event)
    Internal touch handler, you should not overwrite this
```

```
void RespondTouchMove(TouchEvent &event)
    Internal touch handler, you should not overwrite this
```

void **RespondTouchEnd** (TouchEvent &event)
Internal touch handler, you should not overwrite this

StatusIndicatorView

class `mono::ui::StatusIndicatorView`

Indicate a boolean status, true/false, on/off or red/green.

The status indicator displays a circular LED like widget, that is red and green by default. (Green is true, red is false)

You use the method [setState](#) to change the current state of the indicator. This you change the state, the view automatically repaints itself on the screen.

Example

```
// Initialize the view (you should make it a class member)
mono::ui::StatusIndicatorView indicate(mono::geo::Rect(10,10,20,20), ↳
↳false);

// Change the default off color from red to to white
indicator.setOnStateColor(mono::display::WhiteColor);

// set the state to be On
indicator.setState(true);

// make the view visible
indicator.show();
```

Inherits from [mono::ui::View](#)

Public Functions

StatusIndicatorView ()

construct a StatusIndicator with default parameters

this view will be initialized in an empty *viewRect*, that is (0,0,0,0)

StatusIndicatorView (geo::Rect vRect)

Construct a Indicator and provide a [View](#) rect.

This create a view rect the exists in the provided Rect and has the default state `false`

Note: You need to call [show](#) before the view can be rendered

Parameters

- `vRect`: The bounding view rectangle, where the indicator is displayed

StatusIndicatorView (geo::Rect vRect, bool status)

Construct a Indicator and provide a [View](#) rect and a initial state.

This create a view rect the exists in the provided Rect

Note: You need to call [show](#) before the view can be rendered

Parameters

- `vRect`: The bounding view rectangle, where the indicator is displayed
- `status`: The initial state of the indicator

void **setOnStateColor** (display::Color *col*)

Sets the *on* state color.

If you change the color, you must call [*scheduleRepaint*](#) to make the change have effect.

Parameters

- `col`: The color of the indicator when it is *on*

void **setOffStateColor** (display::Color *col*)

Sets the *off* state color.

MARK: SETTERS.

If you change the color, you must call [*scheduleRepaint*](#) to make the change have effect.

Parameters

- `col`: The color of the indicator when it is *off*

void **setState** (bool *newState*)

Sets a new on/off state.

Note that the view repaints itself if the new state differs from the old.

Parameters

- `newState`: The value of the new state (`true` is *on*)

bool **State** () const

Gets the state of the indicator.

MARK: GETTERS.

Return `true` if the state is *on*, `false` otherwise.

Protected Functions

void **initializer** ()

MARK: Constructors.

void **repaint** ()

Repaint the view content, using the [*View::painter*](#).

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the [*scheduleRepaint\(\)*](#) method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of [*View*](#), this method *must* be overwritten.

TextLabelView

class `mono::ui::TextLabelView`

A Text Label displays text strings on the display.

Use this UI view whenever you need to display text on the screen.

A text label renders text strings on the display. As all views the label lives inside a defined rectangle (*viewRect*), where the text is rendered. If the rectangle is smaller than the length of the text content, the content will be cropped. If the rectangle is larger, then you can align the text inside the rectangle (left, center or right).

Example

You can mix and match mono strings with standard C strings when constructing TextLabels.

Create a label using a C string:

```
TextLabelView lbl("This is a constant string");
```

Also you can use C strings allocated on the stack:

```
char text[4] = {'m', 'o', 'n', 'o'};
```

```
TextLabelView lbl(text);
```

Above the TextLabel will take a copy of the input string, to ensure it can be accessed asynchronously.

Content

The text view contains its content (a *String* object), and therefore has a state. You get and set the content to update the rendered text on the display. When you set new text content the label automatically re-renders itself. (By calling *scheduleRepaint*)

Because the view is rendered asynchronously, its text content must be allocated on the heap. Therefore it uses the *String* as text storage. You can provide it with C strings, but these must be allocated inside the .rodata segment of your binary. (Meaning they are `static const`.)

Text Format

Currently there are only one font type. But the text color and font can be changed. You change these for parameters:

- Text font (including size)
- Text color
- Text background color (the color behind the characters)

Getting text dimensions

To help you layout your views, you can query the TextLabel of the current width and height of its contents. The methods *TextPixelWidth* and *TextPixelHeight*, will return the text's dimensions in pixels

- regardless of view rectangle. Also, you can use these methods before the view has been rendered.

Inherits from *mono::ui::View*

Public Types

enum `TextAlignment`

Three ways of justifying text inside the TextLabel.

Values:

ALIGN_LEFT

Align text to the left

ALIGN_CENTER

Align text in the center

ALIGN_RIGHT

Align text to the right

enum VerticalTextAlignment

The Vertical justification of the text, inside the labels Rect.

Values:

ALIGN_TOP

Align the text at the top of the label

ALIGN_MIDDLE

Align the text at in the middle of the label

ALIGN_BOTTOM

Align the text at the bottom of the label

Public Functions

TextLabelView (*String* txt = String ())

Construct a text label with defined content, but no dimensions.

Before you can render the label you still need to set the view dimensions. This constructor take the *String* object as defined in the mono framework.

Parameters

- txt: The labels text content (as a mono lightweight string)

TextLabelView (const char *txt)

Construct a text label with defined content, but no dimensions.

Before you can render the label you still need to set the view dimensions. This constructor takes a `static const C` string pointer that must *not* exist on the stack! (It must live inside the `.rodata` segment.

Parameters

- txt: A pointer to the static const C string (.rodata based)

TextLabelView (geo::Rect rct, String txt)

Construct a label in a defined rectangle and with a string.

You provide the position and size of the label, along with its text content. You can call this constructor using a mono type string or a stack based C string - and it is automatically converted to a mono string:

```
int celcius = 22;

// char array (string) on the stack
char strArray[50];

// format the string content
sprintf(strArray, "%i celcius", celcius);

// construct the label with our stack based string
TextLabelView lbl (geo::Rect (0,0,100,100), strArray);
```

TextLabelView (geo::Rect *rect*, **const** char **txt*)

Construct a label in a defined rectangle and with a string.

You provide the position and size of the label, along with its text content. You can call this constructor using `static const C string`:

```
// construct the label with our stack based string
TextLabelView lbl(gio::Rect(0,0,100,100), "I am a .rodata string!");
```

uint8_t TextSize () **const**

The text size will be phased out in coming releases. You control text by changing the font.

`mono::display::Color` **TextColor** () **const**

Get the current color of the text.

`TextLabelView::TextAlignment` **Alignment** () **const**

Get the current horizontal text alignment.

`TextLabelView::VerticalTextAlignment` **VerticalAlignment** () **const**

Get the current vertical text alignment.

uint16_t TextPixelWidth () **const**

Get the width of the current text dimension.

uint16_t TextPixelHeight () **const**

Get the height of the current text dimension.

const MonoFont *Font () **const**

If not NULL, then returns the current selected MonoFont.

const GFXfont *GfxFont () **const**

If not NULL, then returns the current selected GFXfont.

`mono::gio::Rect` **TextDimension** () **const**

Returns the dimensions (*Size* and offset Point) of the text.

void setTextSize (uint8_t *newSize*)

We will phase out this attribute in the coming releases. To change the font size you should rely on the font face.

If you set this to 1 the old font (very bulky) font will be used. Any other value will load the new default font.

void setTextColor (display::Color *col*)

void setBackgroundColor (display::Color *col*)

void setText (display::Color *col*)

Set the text color.

void setBackground (display::Color *col*)

Set the color behind the text.

void setAlignment (TextAlignment *align*)

Controls text justification: center, right, left.

void setAlignment (VerticalTextAlignment *vAlign*)

Set the texts vertical alignment: top, middle or bottom.

void **setText** (**const** char **text*)

Change the text content of the Text label, and schedules repaint.

This method updates the text that is rendered by the textlabel. It automatically schedules an incremental (fast) repaint.

Parameters

- *text*: The C string text to render

void **setText** (*String text*)

Change the text content of the Text label, and schedules repaint.

This method updates the text that is rendered by the textlabel. It automatically schedules an incremental (fast) repaint.

Parameters

- *text*: The Mono string text to render

void **setText** (**const** char **txt*, bool *resizeViewWidth*)

void **setText** (*String text*, bool *resizeViewWidth*)

void **setFont** (MonoFont **const** &*newFont*)

Set a new font face on the label.

You can pass any MonoFont to the label to change its appearance. Fonts are header files that you must include yourself. Each header file defines a font in a specific size.

The header file defines a global `const` variable that you pass to to this method.

Parameters

- *newFont*: The mono-spaced to use with the textlabel

void **setFont** (GFXfont **const** &*font*)

Set a new font face on the label.

You can pass any Adafruit GfxFont to the label to change its appearance. Fonts are header files that you must include yourself. Each header file defines a font in a specific size.

The header file defines a global `const` variable that you pass to to this method.

mono::*String* **Text** () **const**

Gets the content of the text label.

void **scheduleFastRepaint** ()

Repaints the view, using incremental repaints if possible.

This method might be faster than *scheduleRepaint*, since this repaint allows the text to be repainted incrementally. This means fast repaint of counters or fade animations.

If you experience rendering errors, you should use the normal *scheduleRepaint* method.

void **scheduleRepaint** ()

Schedule this view for repaint at next display refresh.

This method add the view to the display systems re-paint queue. The queue is executed right after a display refresh. This helps prevent graphical artifacts, when running on a single display buffer system.

Because views have no state information, they do not know when to repaint themselves. You, or classes using views, must call this repaint method when the view is ready to be repainted.

void **repaint** ()

Repaint the view content, using the *View::painter*.

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the *scheduleRepaint()* method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of *View*, this method *must* be overwritten.

Public Members

bool **incrementalRepaint**

This indicate if the next repaint should only repaint differences

void **setBackground**

Set the color behind the text

Public Static Functions

static const MonoFont* StandardTextFont mono::ui::TextLabelView::__DEPRECATED("use the

This is the default font for all *TextLabelView*'s.

This points to the default Textlabel font. You can overwrite this in your own code to change the default appearance of all TextLabels.

You can also overwrite it to use a less memory expensive (lower quality) font face.

Public Static Attributes

const GFXfont *StandardGfxFont

This is the default font for all *TextLabelView*'s.

This points to the default Textlabel font. You can overwrite this in your own code to change the default appearance of all TextLabels.

You can also overwrite it to use a less memory expensive (lower quality) font face.

Protected Functions

bool **isTextMultiline** () const

Check if the current text has newline characters.

This runs O(n)

Return true is newlines are found

TouchCalibrator

Warning: doxygenclass: Cannot find class “mono::ui::TouchCalibrator” in doxygen xml output for project “monoapi” from directory: xml

View

class `mono::ui::View`

Abstract interface for all UI Views, parent class for all views.

Abstract [View](#) class/interface. All UI view/widgets that paint to the screen must inherit from this class. Views handle repaint queues, touch input and painting to the display buffer automatically.

All views have a width and height, along with an absolute x,y coordinate that defines the upper left corner of the view rectangle.

Views must not contain any state. They only draw data to the display. Therefore views might contain or have references to objects holding the actual state information. Some simple views, like [TextLabelView](#), are exceptions to this rule, since it is highly convenient to let them hold some state. (Like text content.)

Something on dependence of AppContext and Appctrl design pattern

See [ResponderView](#)

Inherits from `mono::ui::IViewALike`, `mono::IQueueItem`

Subclassed by [mono::ui::BackgroundView](#), [mono::ui::ConsoleView< W, H >](#), [mono::ui::GraphView](#), [mono::ui::IconView](#), [mono::ui::ImageView](#), [mono::ui::ProgressBarView](#), [mono::ui::ResponderView](#), [mono::ui::StatusIndicatorView](#), [mono::ui::TextLabelView](#)

Public Types

enum `Orientation`

Define the 4 different orientations of the display. The display controller applies the orientation transformation to the real display. For the UI Views the coordinate system remains the same, it just changes width and height. The origin is always the top left corner (defined relative to gravity), no matter the physical orientation of mono's display.

Values:

PORTRAIT = 0

Expected standard orientation of mono, where the thick edge is at the bottom

PORTRAIT_BOTTOMUP = 1

Upside-down of [PORTRAIT](#), where the thick edge is at the top

LANDSCAPE_RIGHT = 2

[PORTRAIT](#) rotated 90 degrees clockwise

LANDSCAPE_LEFT = 3

[PORTRAIT](#) rotated 90 degrees counter-clockwise

Public Functions

View()

Construct an empty view, you should not do this! You should not use *View* directly, subclass it instead.

View (geo::Rect *rect*)

Construct a view with dimensions, you should not do this! You should not use *View* directly, subclass it instead.

void **setPosition** (geo::Point *pos*)

Change the view's position on the screens coordinate system.

Changes the view's position on the screen. Note that changing the position does not implicitly redraw the view. This means you will need to update the screen the affected areas to make the change visible.

Parameters

- *pos*: The new position of the view

void **setSize** (geo::Size *siz*)

Change the size (width, height) of the view.

Changes the view's dimensions. The effect of size changes might depend on the specefic view subclass. Some views might use their size to calculate their internal layout - others might only support fixed size.

Note that changing the size here does not redraw the view. The screen needs to be redrawn to make the size change visible.

Parameters

- *siz*: The new size of the view

void **setRect** (geo::Rect *rect*)

Set the view's position and size, by providing a rectangle object.

Note that this method does not repaint the view, you must do that explicitly.

Parameters

- *rect*: The view rectangle, containing size and position

mono::geo::Point &**Position** ()

Get the current position of the view's upper left corner.

Return A reference to the current position

mono::geo::Size &**Size** ()

Get the view's current size rectangle.

Return A reference to the view's size rectangle

const mono::geo::Rect &**ViewRect** () const

Get the views *view rect*

This method returns a reference to the views current view rect.

void **scheduleRepaint** ()

Schedule this view for repaint at next display refresh.

This method add the view to the display systems re-paint queue. The queue is executed right after a display refresh. This helps prevent graphical artifacts, when running on a single display buffer system.

Because views have no state information, they do not know when to repaint themselves. You, or classes using views, must call this repaint method when the view is ready to be repainted.

bool **Visible** () const

Returns the view's visibility.

Get the view visible state. Non-visible view are ignored by the method *scheduleRepaint*. You change the visibility state by using the methods *show* and *hide*

Return `true` if the view can/should be painted on the screen, `false` otherwise.

See *show*

See *hide*

void **show** ()

Set the view to visible, and paint it.

Change the view's visibility state to visible. This means it can be scheduled for repaint by *scheduleRepaint*. This method automatically schedules the view for repaint.

See *hide*

See *Visible*

void **hide** ()

Set the view to be invisible.

Change the view's state to invisible. This method will remove the view from the *dirtyQueue*, if it has already been scheduled for repaint.

Any calls to *scheduleRepaint* will be ignored, until the view is set visible again.

See *show*

See *Visible*

Public Static Functions

uint16_t **DisplayWidth** ()

Returns the horizontal (X-axis) width of the display canvas, in pixels. The width is always defined as perpendicular to gravity

uint16_t **DisplayHeight** ()

Returns the vertical (Y-axis) height of the display canvas, in pixels. The height axis is meant to be parallel to the gravitational axis.

View::Orientation **DisplayOrientation** ()

Returns the current physical display orientation of the display The orientation is controlled by the *IDisplayController*

Public Static Attributes

uint32_t **RepaintScheduledViewsTime** = 0

The CPU time used to repaint the latest set of dirty views. This measure includes both the painting algorithms and the transfer time used to communicate with the display hardware.

Protected Functions

void **callRepaintScheduledViews** ()

A member method to call the static method *repaintScheduledViews*.

See *repaintScheduledViews*

virtual void **repaint** () = 0

Repaint the view content, using the *View::painter*.

Re-paint the view content. This method should be called when the view content has changed. You can call this method directly, but it might cause graphics artifacts because the display is not double buffered. Instead you should schedule a repaint by calling the *scheduleRepaint()* method. This method will schedule the repaint, right after the next display update.

The display system will not schedule any repaints automatically. The view does not contain any state information, so you or other classes utilizing view must schedule repaints.

In subclasses of *View*, this method *must* be overwritten.

Protected Attributes

geo::Rect **viewRect**

The rect defines the position and size of this view on the screen. This defines where the view rectangles upper left corner is situated, and the width and height in pixels.

bool **isDirty**

Indicate is this view should be repainted on next display refresh.

bool **visible**

Views can be visible or non-visible (hidden). When a view is *not* visible *scheduleRepaint* will ignore requests.

You should use the methods *show* and *hide* to toggle visibility.

See *show*

See *hide*

See *Visible*

Protected Static Functions

void **repaintScheduledViews** ()

This class method will run through the scheduled re-paints queue and call the *repaint* method on all of them.

This method is called automatically by the display system, you do not need to call it yourself.

Protected Static Attributes

`mono::display::DisplayPainter painter`

Global *View* painter object. Once the first *View* is included in the code, this painter is initialized on the stack. Every view object uses this painter to paint itself.

The painter is initialized with the display controller of the application context. If you want views to draw themself on another display, you must subclass or change the current display controller of the `mono::ApplicationContext` object.

`mono::GenericQueue<View> dirtyQueue`

The global re-paint queue.

When you call the *scheduleRepaint* method, your views is added to the re-paint queue.

Network

HttpClient

class `mono::network::HttpClient`

A HTTP GET Request Client.

This class implements a HTTP GET Request, and provide you with a notification, when the response arrives.

You provide an URL and one or more callback functions, for getting the response data.

Example

```
HttpClient client("http://www.myip.com");
client.setDataReadyCallback<MyClass>(this, &MyClass::httpData);
```

Now your method `httpData` is called when response data arrives. Note that the callback can be called multiple times. A flag in the returned data object indicates, when this was the last data to be received.

DNS resolution is done automatically. You can also change the HTTP port to something other than 80 by providing an alternative port via the URL: . Likewise, you can use raw IPv4 addresses: .

Headers

You can provide additional headers for the request by using the constructors optional second argument. Just remember to end each header line with a . Like this: `Accept: text/html\r\n`

Error handling

This client class handles error that arise from:

- DNS lookup failed (no such domain name)
- No server response (host does not respond)

This class does not handle errors based on HTTP status codes or content types.

If you wish to handle errors you should setup a callback for the `setErrorCallback`

Inherits from `mono::network::INetworkRequest`

Subclassed by *`mono::network::HttpPostClient`*

Public Functions

HttpClient ()

Construct an empty invalid client object.

HttpClient (String *anUrl*, String *headers* = String ())

Construct a new HTTP request to a given URL.

To receive the response, also setup the callback *setDataReadyCallback*

Parameters

- *anUrl*: The URL string
- *headers*: Any additional headers to add

template <typename Owner>

void mono::network::HttpClient::setDataReadyCallback (Owner * *cnxt*, void (Owner::*) (const

Provide your callback function to handle response data.

Parameters

- *cnxt*: A pointer to the callback member function context (the *this* pointer)
- *memPtr*: A pointer to the member function, that is the callback

Protected Functions

void **dnsResolutionError** (INetworkRequest::ErrorEvent **evnt*)

Error callback for dns resolver

void **dnsComplete** (INetworkRequest::CompletionEvent **evnt*)

dns resolver completion event handler

void **httpCompletion** (redpine::ManagementFrame::FrameCompletionData **data*)

when the HTTP GET frame completes, check for error

class **HttpResponseData**

Class to represent HTTP response data.

This class defines the response data chunk return by an HTTP request. It defines only public accessible properties, that indicate the response state and the raw data.

Public Members

HttpClient ***Context**

Pointer to the originating *HttpClient* object.

String **bodyChunk**

The raw HTTP response chunk. More chunk might arrive later.

bool **Finished**

true if this response chunk is the final.

HttpPostClient

class `mono::network::HttpPostClient`

HTTP POST Request Client.

This class can send a HTTP POST request with body data. You provide callbacks to provide the body length (in bytes) and content. This is to avoid caching the content, and save memory.

Before this class works you must setup a working wifi connection.

Example

```
HttpPostClient client("http://www.postrequest.org/");
client.setBodyLengthCallback<MyClass>(this, &MyClass::getDataLength);
client.setBodyDataCallback<MyClass>(this, &MyClass::getData);
client.post();
```

This will post the request with no default `Content-Type` header. You can provide your own `Content-Type` by using the second (optional) argument in the constructor. If you do, remember to insert a `\r\n` at the end of the header string.

Trailing white space

Due to a bug in the Redpine module protocol, the post body risk getting trailing whitespace characters (spaces: 0x20). There can up to 3 trailing spaces: . The reason is the redpine frame must end on a 4-byte byte boundry. Instead of appending NULL characters, we append spaces. Most HTTP servers does not respond well to NULL character being part of a text body.

This is of course an issue when sending binary data via POST requests. In these cases you should (at this point) avoid binary formats. (Maybe use base64 encoding.)

Inherits from `mono::network::HttpClient`

Public Functions

HttpPostClient ()

Construct an empty invalid HTTP client.

HttpPostClient (String *anUrl*, String *headers* = String ())

Construct a client with a target URL.

Headers like `Host` and `Content-Length` are created automatically. The DNS resolution of the host-name is also done automatically.

The actual POST request is not execute before you call `post`. However, DNS resolution is started immediately.

Parameters

- `anUrl`: The URL to call
- `headers`: Optional extra headers to add to the request

template <typename *Class*>

void `mono::network::HttpPostClient::setBodyLengthCallback` (Class * *context*, uint16_t (C1

Callback for providing the length of the HTTP POST body.

You should provide a efficient method of getting the body length, since this callback is used multiple times under the request execution.

Parameters

- `context`: pointer to the object to call the member function on
- `method`: pointer to the member function to be called

template <typename `Class`>

void `mono::network::HttpPostClient::setBodyDataCallback`(`Class * context`, `void(Class::*`
Callback for providing the body content of the HTTP POST.

The internals of the request will ensure the provided `char*` is large enough to hold the size of the HTTP body.

Parameters

- `context`: pointer to the object to call the member function on
- `method`: pointer to the member function to be called

void `post` ()

Execute the POST request.

Commit the request sending it to the server.

Protected Functions

void `dnsComplete` (`INetworkRequest::CompletionEvent *evnt`)
dns resolver completion event handler

Drawing

Color

class `mono::display::Color`

A RGB color representation, generic for display devices.

This class implements a 16-bit RGB 5-6-5 color model. It support methods for calculating color blendings and more.

The class definition also define a set of global constant predefined colors, like white, red, green, blue and black. Further, it includes a set of the FlatUI colors that Mono uses:

- `Clouds`
- `WetAsphalt`
- `Concrete`
- `Silver`
- `Asbestos`
- `BelizeHole`
- `MidnightBlue`
- `Alizarin`
- `Turquoise`
- `Emerald`

Public Functions

`uint8_t Red () const`
Return 8-bit red color component

`uint8_t Green () const`
Return 8-bit green color component

`uint8_t Blue () const`
Return 8-bit blue color component

`Color scale (uint8_t factor) const`
Misc.
Multiply each RGB channel by a factor from 0-255
Return the scaled color

`Color blendMultiply (Color other) const`
Return the product of two colors
Return the multiply blended color

`Color blendAdditive (Color other) const`
Add this color with another

`Color invert () const`
Return the inverse

`mono::String toString () const`
Get a human readable string representatio of the color.
Returns a string of the form: (RR, GG, BB)
Return a color string

DisplayPainter

class `mono::display::DisplayPainter`

The *DisplayPainter* draws shapes on a display, using the DisplayController interface.

You should use this class to draw shapes on the screen, and use it from inside view only. The standard view class has a reference to to an instance of this class.

The coordinate system used by the painter is the same as used by the display interface. This means all shape coords are relative to the display origo at the top left corner for the screen, when screen is in portrait mode.

A painter keeps track of an active foreground and background color. You can set new colors at any time, and the succeeding draw calls will paint in that color. The standard draw color is the active foreground color, but some draw routines might use the background color also. An example is the font drawing routines.

Like colors, the painter object keeps a active line width and textsize. When drawing shapes based on lines *drawLine*, *drawPolygon*, *drawRect* and *drawEllipse*, the line width used is the currently active line width property of the painter object.

When painting text characters the character size is dependend on the textsize property. Text painting is not affected by the current line width.

Public Functions

DisplayPainter (IDisplayController *displayController, bool assignRefreshHandler = true)

Construct a new painter object that are attached to a display. A painter object is automatically initialized by the view/UI system and shared among the view classes.

In most cases you should not have to initialize your own display painter.

Parameters

- displayController: A pointer to the display controller of the active display
- Take: ownership of the DisplayControllers refresh callback handler

template <typename Owner>

void mono::display::DisplayPainter::setRefreshCallback(Owner * obj, void(Owner::*)(void))

Set/Overwrite the display tearing effect / refresh callback.

Set the Painters display refresh callback handler. The display refreshes the screen at a regular interval. To avoid graphical artifacts, you should restrict your paint calls to right after this callback gets triggered.

The default View painter already has a callback installed, that triggers the View's re-paint queue. If you create you own painter object you can safely overwrite this callback.

Parameters

- obj: The this pointer for the object who shoould have its member function called
- memPtr: A pointer the the class' member function.

void setForegroundColor (Color color)

Set the painters foreground pencil color.

Parameters

- color: The new foreground color

void setBackgroundColor (Color color)

Sets the painters background pencil color.

Parameters

- color: the new background color

Color FForegroundColor () const

Gets the painters current foreground pencil color.

Return The current foreground color

Color BackgroundColor () const

Gets the painters current background pencil color.

Return The current foreground color

void **useAntialiasedDrawing** (bool *enable* = true)

Turn on/off anti-aliased line drawing.

You can enable or disable anti-aliased drawing if you need nicer graphics or faster rendering. Anti-aliasing smoothes lines edges, that can otherwise appear jagged.

Parameters

- *enable*: Optional: Switch to turn on/off anti-aliasing. Deafult is enabled.

bool **IsAntialiasedDrawing** ()

Returns `true` if anti-aliased drawing is enabled.

See [*useAntialiasedDrawing*](#)

Return `true` if enabled, `false` otherwise.

uint16_t **CanvasWidth** () **const**

Get the canvas width in pixels. This is the display display width as well.

Return The canvas/display width in pixels

uint16_t **CanvasHeight** () **const**

Get the canvas height in pixels. This is the display display height as well.

Return The canvas/display height in pixels

IDisplayController ***DisplayController** () **const**

Get a pointer to the painters current display controller You can use this method to obtain the display controller interface if you need to blit pixels directly to the display.

Return A pointer to an object implementing the [*IDisplayController*](#) interface

void **drawPixel** (uint16_t *x*, uint16_t *y*, bool *background* = false)

Draw a single pixel on a specific position on the display.

The pixel will be the active foreground color, unless you set the third parameter to true.

Parameters

- *x*: The X-coordinate
- *y*: The Y coordinate
- *background*: Optional: Set to true to paint with active background color.

void **drawPixel** (uint16_t *x*, uint16_t *y*, uint8_t *intensity*, bool *background* = false)

Draw a pixel and blend it with the background/foreground color.

Use this method to draw transparent pixels. You define an intensity of the pixel, that corrsponds to its Alpha value or opacity. 0 is totally transparent and 255 is fully opaque.

Only the foreground is influenced by the alpha value, the background is always treated as fully opaque.

Parameters

- *x*: The pixels x coordinate

- `y`: The pixels y coordinate
- `intensity`: The alpha value, 0 to 255 where 0 is transparent.
- `Optionaluse`: the background color as foreground and vice versa

void **drawFillRect** (uint16_t `x`, uint16_t `y`, uint16_t `width`, uint16_t `height`, bool `background` = false)
Draw a filled rectangle.

Paints a filled rectangle in the active foreground color. Coordinates defining the point of the rectangles upper left corner and are given in screen coordinates. (Absolute coordinates)

Parameters

- `x`: X coordinate of upper left corner, in screen coordinates.
- `y`: Y coordinate of upper left corner, in screen coordinates.
- `width`: The width of the rectangle
- `height`: The height of the rectangle
- `background`: Optional: Set to `true` to paint in active background color

void **drawLine** (uint16_t `x1`, uint16_t `y1`, uint16_t `x2`, uint16_t `y2`, bool `background` = false)
Draw a straight line between two points.

Draw a line on the display. The line is defined by its two end points. End point coordinates are in absolute screen coordinates.

The line is *not* anti-aliased.

Based on Bresenham's algorithm. But If the line you intend to draw is horizontal or vertical, this method will use more efficient routines specialized for these cases.

Parameters

- `x1`: The X coordinate of the line's first endpoint
- `y1`: The Y coordinate of the line's first endpoint
- `x2`: The X coordinate of the line's second endpoint
- `y2`: The Y coordinate of the line's second endpoint
- `background`: Optional: Set this to `true` to paint in active background color

void **drawRect** (uint16_t `x`, uint16_t `y`, uint16_t `width`, uint16_t `height`, bool `background` = false)
Draw an outlined rectangle.

Draw an outlined rectangle with the current line width and the active color.

Parameters

- `x`: Top left corner X coordinate
- `y`: Top left corner Y coordinate
- `width`: The rectangle's width
- `height`: The rectangle's height
- `background`: Optional: Set this to `true` to paint in active background color

void **drawChar** (uint16_t x, uint16_t y, char *character*)

Draw a single character on the display.

Paint a single ASCII character on the display. Characters are always painted in the foreground color, with the background color as background fill.

The character is painted in the currently selected text size. The text is a monospaced font, with a minimum size of (5,3) per character. The origo of a character is the upper left corner of the (5,3) rectangle.

If you want write text on the screen, you should use the TextLabel view, or the Console view.

Parameters

- x: The X coordinate of the characters upper left corner
- y: The Y coordinate of the characters upper left corner
- character: The text character to draw

void **drawVLine** (uint16_t x, uint16_t y1, uint16_t y2, bool *background* = false)

Helper function to draw a vertical line very fast. This method uses much less communication with the display.

*This method is automatically called by *drawLine**

Parameters

- x: The lines X coordinate (same for both end points)
- y1: The first end points Y coordinate
- y2: The second end points Y coordinate
- background: Optional: Set this to `true` to paint in active background color

void **drawHLine** (uint16_t x1, uint16_t x2, uint16_t y, bool *background* = false)

Helper function to draw a horizontal line very fast. This method uses much less communication with the display.

*This method is automatically called by *drawLine**

Parameters

- x1: The first end points X coordinate
- x2: The second end points X coordinate
- y: The lines Y coordinate (same for both end points)
- background: Optional: Set this to `true` to paint in active background color

void **drawCircle** (uint16_t x0, uint16_t y0, uint16_t r, bool *background* = false)

Paint an outlined circle.

Protected Functions

void **swap** (uint16_t &a, uint16_t &b)

Inline swap of two numbers.

Protected Attributes

`mbed::FunctionPointer displayRefreshHandler`

Handler for the DisplayControllers action queue, that gets triggered when the display refreshes.

This handler is normally used by the first View that gets constructed, to enable the re-paint queue.

IDisplayController

class `mono::display::IDisplayController`

Abstract Interface for display controllers like ILITEK chip etc.

This interface a simple set of function that display interface must implement.

Mono display system build upon this interface, and all drawing is done through these functions.

You must override all the defined methods in this interface. The interface does not define or depend on a communication protocol, like parallel or SPI.

Author Kristoffer Andersen

Subclassed by `mono::display::HX8340`, `mono::display::ILI9225G`

Public Functions

IDisplayController (*int width, int height*)

Setup the display controller object, init variables and the screen size. The width is the horizontal measure, when mono is held in portrait mode.

This constructor should not transfer any data or initialize the display. You must do that in the *init* method.

Return The display controller instance.

Parameters

- *width*: The display width (horizontal) in pixels
- *height*: The display height (vertical) in pixels

virtual void **init** () = 0

Initializes the hardware display controller.

Initializing the hardware display controller means setting up the power, gamma control and sync options. The display should be ready to draw graphics when this method returns.

It is not necessary to do any draw commands from this method, other classes will take care of clearing the screen to black, etc.

virtual void **setWindow** (*int x, int y, int width, int height*) = 0

Changes the current active window to a new rectangle.

The display controller must support windowing in software or in hardware. The window is the active painting area of the screen, where you can paint. Upon drawing a single pixel the display cursor increments inside the window. This means you can sometime skip calls to the *setCursor* method.

Parameters

- *x*: X-coordinate of the new windows upper left corner

- `y`: Y-coordinate of the new windows upper left corner
- `width`: The window width
- `height`: The window height

void **setRefreshHandler** (mbed::FunctionPointer **handler*)

Set the callback for display refreshes.

Set the callback function, that is called whenever the display has just repainted itself. This means it is time to repaint any dirty views, that needs to be updated.

IMPORTANT: You should re-paint graphics from within this callback, since it might run inside a hardware interrupt. It is better to just schedule the repaint from here.

Parameters

- `obj`: The owner object of the callback method (the `this` context)
- `memPtr`: A pointer to the owner objects callback member function

virtual void **setCursor** (int *x*, int *y*) = 0

Set the drawing cursor to a new absolute position.

Sets the current drawing cursor to a new position (must be within the currently active window).

When setting the cursor you must use absolute coordinates (screen coordinates), not coordinates inside the active window.

Parameters

- `x`: The new X position (screen coordinates)
- `y`: The new X position (screen coordinates)

virtual void **write** (*Color pixelColor*) = 0

Draw a pixel with the given color, at cursor position.

Write a pixel color to the display, at the cursor position. This method will automatically increment the cursor position.

If the increment happens automatically in hardware, the controller implementation must keep its own cursor in sync.

Parameters

- `pixelColor`: The 16-bit 5-6-5 RGB color to draw

virtual void **setBrightness** (uint8_t *value*) = 0

Set the display backlight brightness. Higher values means more brightness. The display controller implementation might use a PWM to switch backlight LED's.

Parameters

- `value`: The brightness 0: off, 255: max brightness

virtual void **setBrightnessPercent** (float *percent*)

Set the display backlight brightness. Higher values means more brightness. The display controller implementation might use a PWM to switch backlight LED's.

Parameters

- `percent`: The brightness percentage, 0.00: off, 1.00: max brightness

virtual uint8_t **Brightness** () **const** = 0

Gets the current LES backlight brightness The display controller implementation might use a PWM to dim the display, this method returns the PWM duty cycle.

Return The current brightness level in 8-bit format: 0: off, 255: max brightness

Public Members

uint32_t **LastTearingEffectTime**

The last tearing effect interrupt time (`us_ticker_read()`)

To calculate the time since the last tearing effect interrupt (display refresh), you can use this member variable. On each interrupt this value is updated.

If too much time has passed between the interrupt occurred and you handle the painting, you might want to skip the painting. This is to avoid artifacts, when drawing on a refreshing display.

Any implementation of the *IDisplayController* must update this value in its tearing effect interrupt handler.

TextRender

class mono::display::**TextRender**

Text Render class to paint Text paragraphs on a DisplayController.

This is a Text glyph and paragraph render. It uses a bitmap based fonts and typesets the text to provide.

You need to provide the text render with either a *DisplayPainter* or *IDisplayController* that serves as a target for the text rendering.

The *TextRender* does not include any Font definitions. When you render your text, you need to provide a pointer to wither the MonoFont structure, or a Adafruit compatible GFXfont structure. One these is used as the rendered font.

Monospaced MonoFonts

Mono has its own monospace-only font format MonoFont

This renderer has a palette like *DisplayPainter*, and uses it the blend the semi-transparent pixels in the font anti-aliasing. The font bitmap defines pixel intensities, that are the foreground opacity.

The MonoFont defines the text size and the anti-aliasing quality. Some fonts has 2 bit pixels, others have 4 bit pixels.

Adafruit GFXfonts

TextRender can also work with Adafruits proportionally spaced fonts, that include many different styles: Sans, serif, plain, italic, bold and combinations of these.

This format is still bitmap based, but it does not used semi-transparent pixels to achieve anti-aliasing. The bitmaps are one bit per pixel.

Because coherent glyphs might overlap each others bounding rects, this format does not draw text backgrounds. Since this will overwrite overlapping areas of text glyphs.

Line Layouts

The text rendering has two modes: line layout or not. Line layout means a text line always has a fixed height: the line separation height. This is critically when rendering multiline text layouts. But single line text will appear off-centered in a vertically centered box. The reason is the line height is much higher than the visual center of the text glyphs.

If you need to render a single line of text at the center of a box, you want to not use line layout mode. In this mode, text dimension height are the distance from the texts highest to lowest point.

Public Types

enum HorizontalAlignment

The horizontal text alignment, when rendering inside rects.

Values:

ALIGN_LEFT

Left justify text inside containing Rect

ALIGN_CENTER

Justify at center of containing Rect

ALIGN_RIGHT

Right justify text inside containing Rect

enum VerticalAlignmentType

The horizontal text alignment, when rendering inside rects.

Values:

ALIGN_TOP

Place text at the top of containing Rect

ALIGN_MIDDLE

Place text at the vertical center of containing Rect

ALIGN_BOTTOM

Place text at the bottom of containing Rect

typedef void (*charDrawFunction)(geo::Point &position, char character, **const** GFXfont &font, geo::Rect **const** &boundRect, int lineHeight)
Function interface that for character drawing routines

Public Functions

TextRender (IDisplayController *displayCtrl = 0)

Construct a *TextRender* that renders to a DisplayController Text Colors default to View::Standard colors.

Parameters

- displayCtrl: A pointer to the display controller that is the render target

TextRender (IDisplayController *displayCtrl, Color foreground, Color background)

Construct a *TextRender* that renders to a DisplayController You provide explicit text colors.

Parameters

- displayCtrl: A pointer to the display controller that is the render target
- foreground: The text color

- background: the background color

TextRender (const DisplayPainter &painter)

Construct a *TextRender* that renders to the DisplayController provided by a *DisplayPainter*. The painter current pencil colors are used for the text color.

Parameters

- painter: The display painter to copy DisplayController and color palette from

template <typename Context>

void **mono::display::TextRender::layoutInRect** (geo::Rect rect, const String text, const

Layout the string in a rect, using af callback to handle characters.

This method will parse a text string and trigger a callback for each character, providing the position and allowed dimension of each character.

Parameters

- rect: The rectangle to render in
- text: The text string to render
- fontFace: A pointer the Adafruit GFX font to use
- self: A pointer to the callback method context object
- memptr: A pointer to the callback method
- lineLayout: Default: true, Render text as a multiline layout

void **drawInRect** (geo::Rect rect, String text, const MonoFont &fontFace)

Renders a text string in a provided Rectangle.

THIS method paints / renders the text in bounding rectangle. The text is always rendered with origin in the rectangles top left corner. If the provided Rect is not large enough, the text is clipped!

Parameters

- rect: The rectangle to render in
- text: The text string to render
- fontFace: A pointer the fontface to use

geo::Size **renderDimension** (String text, const MonoFont &fontFace)

Return the resulting dimension / size of some rendered text.

The final width and height of a rendered text, with the defined font face.

Parameters

- text: The text to calculate the dimensions of
- fontFace: The font to use

void **drawChar** (const geo::Point &position, const GFXfont &font, const GFXglyph *gfxGlyph,
geo::Rect const &boundingRect, const int lineHeight)

Render a single Adafruit GfxFont character.

Parameters

- `position`: The point where the glyph is rendered
- `font`: The Adafruit GfxFont to use
- `gfxGlyph`: The specific glyph to render
- `boundingRect`: The Rect that limits the render canvas (no paints beyond this Rect)
- `lineHeight`: The glyph height offset, to align glyphs on the same baseline

void **drawInRect** (**const** geo::*Rect* &*rect*, *String* *text*, **const** GFXfont &*fontFace*, bool *lineLayout* = true)

Renders a text string in a provided Rectangle.

This method paints / renders the text in bounding rectangle. The text is always rendered with origin in the rectangles top left corner. If the provided Rect is not large enough, the text is clipped!

Parameters

- `rect`: The rectangle to render in
- `text`: The text string to render
- `fontFace`: A pointer the Adafruit GFX font to use
- `lineLayout`: Default: `true`, Render text as a multiline layout

geo::*Size* **renderDimension** (*String* *text*, **const** GFXfont &*fontFace*, bool *lineLayout* = true)

Return the resulting dimension / size of some rendered text.

The final width and height of a rendered text, with the defined font face.

Parameters

- `text`: The text to calculate the dimensions of
- `fontFace`: The font to use
- `lineLayout`: Default: `true`, use line layout or not

mono::geo::*Rect* **renderInRect** (**const** geo::Rect &*rect*, *String* *text*, **const** GFXfont &*fontFace*, bool *lineLayout* = true)

Return the calculated offset of the text in the drawing Rect.

The offset is returned in absolute coords, *not* the relative coords inside the drawing rect. The offset matters for text that is aligned other than left and top.

Parameters

- `rect`: The drawing Rect, that the text should be rendered inside
- `text`: The text
- `fontFace`: The GFXfont to use
- `lineLayout`: Default: `true`, sets if lineLayout is used

void **setForeground** (Color *fg*)

Set the text color.

void **setBackground** (Color *bg*)

Set the background color. Transparent pixels will be blended with this color.

void **setAlignment** (HorizontalAlignment *align*)
Sets the texts justification within the drawing rect.

Parameters

- *align*: The alignment

void **setAlignment** (VerticalAlignmentType *vAlign*)
Set the texts vertical alignment within the drawing rect.

Parameters

- *vAlign*: The vertical alignment

Color **Foreground** () **const**
Get the current text color.

Color **Background** () **const**
Get the current text background color.

TextRender::HorizontalAlignment **Alignment** () **const**
Get the horizontal text alignment.

TextRender::VerticalAlignmentType **VerticalAlignment** () **const**
Get the vertical text alignment.

Protected Functions

void **drawChar** (geo::Point *position*, char *character*, **const** MonoFont &*font*, geo::Rect **const** &*boundingRect*)
Render a single MonoFont character.

int **calcUnderBaseline** (String *text*, **const** GFXfont &*font*)
Calculated the maximum offset under the text baseline.

This method returns the maximum offset under the baseline for some text. Some characters (glyphs) has parts under the baseline, examples are lower-case *g*, *p*, *q* and *j*.

To align all glyphs in a text line, the character with the largest undershoot is found and returned here.

Return The maximum offset below the text baseline

Parameters

- *text*: The text content to process font The font face to use

void **writePixel** (uint8_t *intensity*, bool *bg* = false)
Blend and emit a single pixel to the DisplayController.

uint32_t **remainingTextlineWidth** (**const** GFXfont &*font*, **const** char **text*)
Returns the pixel width of the text provided.

This method is used in multiline text rendering, to get the width of a stand-alone line inside a multiline text blob. Unlike `renderDimensions` that gets the width of the longest line, this method get the length of the current line.

Return The pixel width of the line

Parameters

- `font`: The font face to use
- `The`: C string text to get the current line from (until newline or end)

Geometry

Circle

class `mono::geo::Circle`
Inherits from `mono::geo::Point`

Point

class `mono::geo::Point`
Representation of a point in a 2D cartesian coordinate system. The point has no width or height, only an x-coordinate and a y-coordinate.

This class defines the coordinates, as well as methods to manipulate the point. Also functions for geometrical calculus is present.

Subclassed by `mono::geo::Circle`, `mono::geo::Rect`

Rect

class `mono::geo::Rect`
A Rectangle in a Cartesian coordinate system, having a size and position.

This class defines a geometric rectangle. It exists in a std. cartesian coordinate system. It is defined by its upper left corner (X,Y), and a width and height.

The rectangle cannot be rotated, its sides are parallel to the coordinate system axis.

It defines helper methods to calculate different positions and properties. You can also extract interpolation information.

See [Size](#)
See [Point](#)

Inherits from `mono::geo::Point`, `mono::geo::Size`

Public Functions

Rect (int *x*, int *y*, int *width*, int *height*)
Construct a rectangle from position coordinates and size.

Rect (const *Point* &*p*, const *Size* &*s*)
Construct a rectangle from [Point](#) and [Size](#) objects.

Rect ()
Construct an empty rectangle having position (0,0) and size (0,0)

Point **UpperLeft** () **const**

Return the position of the upper left corner.

This method is the same as casting the *Rect* to a *Point*

Return The point of the upper left corner

Point **LowerRight** () **const**

Return the position of the lower right corner.

Return The point of the lower right corner

Point **UpperRight** () **const**

Return the position of the upper right corner.

Return The point of the upper right corner

Point **LowerLeft** () **const**

Return the position of the lower left corner.

Return The point of the lower left corner

class Point **Center** () **const**

Return the position of the Rectangles center.

void **setPoint** (class Point *p*)

Move (translate) the rectangle by its upper left corner.

void **setSize** (class Size *s*)

Set a new size (width/height) of the rectangle.

bool **contains** (class Point &*p*) **const**

Check whether or not a *Point* is inside this rectangle.

Rect **crop** (Rect **const** &*other*) **const**

Return this *Rect* cropped by the boundaries of another rect

mono::*String* **ToString** () **const**

Return a string representation of the rectangle.

Return A string of the form `Rect (x, y, w, h)`

Size

class mono::geo::Size

Class to represent a rectangular size, meaning something that has a width and a height. A size class does not have any position in space, it only defines dimensions.

Subclassed by *mono::geo::Rect*

Public Functions

Size ()

Construct a NULL size. A size that has no width or height.

Size (int *w*, int *h*)

Construct a size with defined dimensions

Size (const *Size* &*s*)

Construct a size based on another size

Sensors

IAccelerometer

class `mono::sensor::IAccelerometer`

Abstract interface for interacting with the accelerometer.

Subclassed by `mono::sensor::MMAAccelerometer`

Public Functions

virtual void **Start** ()

Start the accelerometer.

Before you can sample any acceleration, you must start the accelerometer. When the accelerometer is running its power consumption will likely increase. Remember to *Stop* the accelerometer, when you are done sampling the acceleration.

virtual void **Stop** ()

Stops the accelerometer.

A stopped accelerometer can not sample acceleration. *Start* the accelerometer before you sample any axis.

virtual bool **IsActive** () = 0

Return the current Start/Stop state of the accelerometer.

Return `true` only if the accelerometer is started and sampling data

virtual int16_t **rawXAxis** (bool *monoOrientation* = true) = 0

<# brief desc #>

Return <# return desc #>

virtual int16_t **rawYAxis** (bool *monoOrientation* = true) = 0

<# brief desc #>

Return <# return desc #>

virtual int16_t **rawZAxis** (bool *monoOrientation* = true) = 0

<# brief desc #>

Return <# return desc #>

IBuzzer

class `mono::sensor::IBuzzer`

Generic Buzzer interface.

This interface defines a generic API for buzzers used in the framework. You should not construct any subclass of this interface yourself. The system automatically creates a buzzer object for you, that you can obtain through the `IApplicationContext`:

Example

```
mono::sensor::IBuzzer *buzz = mono::IApplicationContext::Instance->Buzzer;
```

To make a short buzz sound do:

```
mono::IApplicationContext::Instance->Buzzer->buzzAsync(100);
```

Subclassed by `mono::sensor::MonoBuzzer`

Public Functions

virtual void **buzzAsync** (uint32_t *timeMs*) = 0

Buzz for a given period of time, then stop.

Sets the buzzer to emit a buzz for a defined number of milliseconds. Then stop. This method is asynchronous, so it returns immediately. It relies on interrupts to mute the buzzer later in time.

You should not call it multiple times in a row, since it behaves asynchronously. Instead use [Timer](#) to schedule multiple beeps.

Parameters

- `timeMs`: The time window where the buzzer buzzes, in milliseconds

virtual void **buzzKill** () = 0

Stop any running buzz.

Use this method to cancel a buzz immediately. This method will not have any impact on callback functions. They will still be called, when the buzz was suppose to end.

template <typename *Object*>

void **mono::sensor::IBuzzer::buzzAsync** (uint32_t *timeMs*, *Object* * *self*, void(*Object*::*) (

Buzz for some time, and when done call a C++ member function.

Sets the buzzer to emit a buzz for a defined number of milliseconds. Then stop. This method is asynchronous, so it return immediately. It relies on the run loop to mute the buzzer later in time. You also provide a callback function, that gets called when the buzz is finished.

You should not call it multiple times in a row, since it behaves asynchronously. Instead you should use the callback function to make a new beep.

Example

```
buzzAsync<AppController>(100, this, &AppController::buzzDone);
```

This will buzz for 100 ms, then call `buzzDone`.

Parameters

- `timeMs`: The time window where the buzzer buzzes, in milliseconds
- `self`: The `this` pointer for the member function
- `member`: A pointer to the member function to call

void **buzzAsync** (uint32_t *timeMs*, void (**function*)) void
Buzz for some time, and when done call a C function.

Sets the buzzer to emit a buzz for a defined number of milliseconds. Then stop. This method is asynchronous, so it return immediately. It relies on the run loop to mute the buzzer later in time. You also provide a callback function, that gets called when the buzz is finished.

You should not call it multiple times in a row, since it behaves asynchronously. Instead you should use the callback function to make a new beep.

Example

```
buzzAsync(100, &buzzDone);
```

This will buzz for 100 ms, then call global C function `buzzDone`.

Parameters

- `timeMs`: The time window where the buzzer buzzes, in milliseconds
- `function`: A pointer to the global C function to call

Protected Attributes

MBED_DECLARE_CALLBACK_HANDLER **timeoutHandler**

A Handler to call when buzzing finished.

This member is setup when you provide a callback to the *buzzAsync* methods. Your subclass must call this when buzzing ends.

ITemperature

class mono::sensor::ITemperature

Abstract Interface for temperature sensors.

This interface creates a hardware-independent abstraction layer for interacting with temperature sensors. Any hardware temperature sensor in Mono must subclass this interface.

In Mono Framework there is only initialized one global temperature sensor object. To obtain a reference to the temperature sensor, use the *IApplcationContext* object:

```
ITemperature *temp = mono::IApplcationContext::Instance->Temperature;
```

This object is automatically initialized by the *IApplcationContext* and the current *ITemperature* subclass. IT is the *IApplcationContext*'s job to initialize the temperature sensor.

Subclassed by mono::sensor::AT30TS74Temperature, mono::sensor::Edu1,
mono::sensor::PCT2075Temperature

Public Functions

virtual int **Read** () = 0

Reads the current temperature from the temperature sensor

Return the temperature in Celcius

virtual int **ReadMilliCelcius** ()

Reads the temperature in fixed point milli-Celcius.

To get a higher precision output, this method will return milliCelcius such that: 22,5 Celcius == 22500 mCelcius

Return The temperature in mCelcius

Power

IPowerManagement

class `mono::power::IPowerManagement`

Generic abstract interface for the power management system.

A PowerManagement implementation class handles power related events and sets up the system. The ApplicationContext object initializes an instance of this class automatically. Use can find a pointer to the PowerManagement object in the static *ApplicationContext* class.

Depending on the system (mono device or simulator), the concrete sub-class implementation of this interface varies.

The active *ApplicationContext* initializes this class and calls its POR initialization functions. Implementations of this class then calls and initializes any nessasary related classes, like the power supply IC sub-system (IPowerSubSystem).

This interface defines queues of objects that implement the IPowerAware interface. This interface lets classes handle critical power events like:

- Power-On-Reset (POR)**: Called when the chip powers up after a reset
- Enter Sleep Mode**: Called before system goes in to low power sleep mode
- Awake From Sleep**: Called when nornal mode is restored after sleep

Power Awareness

Classes that handle components like I2C, Display, etc can use the PowerAware interface to receive these type of events. Its the PowerManagement object task to call these IPowerAware objects.

The interface defines a protected member object *powerAwarenessQueue* that is a pointer to the first object in the queue. The Power Awareness *Queue* is a list of objects that implment the IpowerAware interface and have added themselves to the queue by calling *AppendToPowerAwareQueue*

Objects in the queue receive power aware notifications on event like enter sleep mode, wake from sleep and battery low. You can add your own objects to the queue to make them “power aware” or you remove the system components that gets added by default. (But why would you do that?)

Subclassed by `mono::power::MonoPowerManagement`

Public Functions

virtual void **EnterSleep** () = 0

Send Mono to sleep mode, and stop CPU execution. In sleep mode the CPU does not excute instruction and powers down into a low power state. The power system will turn off dynamically powered peripherals.

Any power aware objects (IPowerAware), that has registered itself in the powerAwarenessQueue must have its onSystemEnterSleep method called.

NOTE: Before you call this method, make sure you have configured a way to go out of sleep.

virtual void AppendToPowerAwareQueue (IPowerAware *object)

Add a IPowerAware object to the awareness queue

By added object to the Power Awareness *Queue* they receive callbacks on power related events, such as reset and sleep.

Parameters

- object: A pointer to the object that is power aware

virtual bool RemoveFromPowerAwareQueue (IPowerAware *object)

Remove an object from the Power Awareness *Queue*.

Searches the Power Awareness *Queue* for the object and removes it, if it is found. This object will no longer receive power related notifications.

Return `true` if object was removed, `false` if the object was not in the queue

Parameters

- object: A pointer to the object that should be removed from the queue

Public Members

IPowerSubSystem ***PowerSystem**

A pointer to the initialized power sub-system. This is initialize automatically and depends on compiled environment. The power system to used to control power supply to peripherals and to give interrupt on power related events.

WARNING: Use this class with extreme caution! Wrong power settings can fry the MCU and other peripherals!

Public Static Attributes

volatile bool __shouldWakeUp = false

This variable must be `true` before sleep mode is aborted.

EnterSleep() must set this to `false`, you should set it to `true` to abort sleep mode and re-enter the run loop execution. *EnterSleep()* will not *return* before this is set to `true`.

****Note:** The class QueuedInterrupt will set this automatically!**

volatile bool __busySleep = false

Global flag to indicate to not halt CPU during sleep mode.

Some processes might require hardware to run async under what is normally sleep mode, where hardware peripherals are halted.

Set this flag to `true` to keep the the CPU awake inside the sleep mode loop. This is especially useful when handled debouncing of edge triggered interrupts.

Note: You should keep this flag `false` to ensure power presevation

Protected Functions

virtual void **processResetAwarenessQueue** ()

Call all the power aware objects right after Power-On-Reset The singleton power management object must call this method on reset

Protected Attributes

IPowerAware ***powerAwarenessQueue**

A pointer to the top object in the *Power Awareness Queue*

The Power Awareness queue is realized by having the power object themselves hold references to the next and previous object in the queue. This eliminates the need for dynamic memory allocation a runtime.

The IPowerAware interface defines the *next* and *previous* pointers for the object in the linked list. This class only holds a reference to the first object in the queue.

IPowerSubSystems

Warning: doxygenclass: Cannot find class “mono::power::IPowerSubSystems” in doxygen xml output for project “monoapi” from directory: xml

mbed API

If you need to interact with the *GPIO*, *Hardware interrupts*, *SPI*, *I2C*, etc. you should use the *mbed* layer in the SDK. Take a look at the documentation for mbed:

[mbed documentation](#)

Direct Download

Go straight to our download page: [Download SDKs](#)

Implementation status

As with this site, the software is also being finished right now. The *current status* page include a list of all the planned features of the framework - and their implementation status:

- **Current Status**

Contribute

The source to this documentation is available publicly on our [GitHub](#). Please just fork it, correct all our *bad english* - and submit a pull request. We would just loooove that!

You can contribute to this documentation through the [GitHub repository](#). Note that everything you contribute will be free for anyone to use because it falls under the site license.

What is Mono anyway?

Haven't you heard the word? Mono is an embedded hardware platform that brings all the goods from [Arduino](#) and [mbed](#) to a whole new level! No fiddling with voltage levels, open-drain vs pull-up configurations. We take care of all this low-level stuff for you. You just focus on building your application, taking advantage of all the build-in hardware functionalities - like:

- Arm Cortex-M3 MCU
- Touch display
- Battery
- Wifi
- Bluetooth
- Accelerometer
- Temperature Sensor
- SD Card
- General Purpose 3.5mm jack connector

On this developer documentation site, you learn how to use all these features through our high-level API.

A

AbstractButtonView::AbstractButtonView (C++ function), 117
AppRunLoop::addDynamicTask (C++ function), 106
AppRunLoop::CheckUsbDtr (C++ function), 106
AppRunLoop::checkUsbUartState (C++ function), 107
AppRunLoop::exec (C++ function), 106
AppRunLoop::process (C++ function), 107
AppRunLoop::processDynamicTaskQueue (C++ function), 107
AppRunLoop::quit (C++ function), 106
AppRunLoop::removeDynamicTask (C++ function), 106
AppRunLoop::removeTaskInQueue (C++ function), 107
AppRunLoop::setResetOnUserButton (C++ function), 106

B

BackgroundView::BackgroundView (C++ function), 118
BackgroundView::Color (C++ function), 118
BackgroundView::repaint (C++ function), 119
BackgroundView::setBackgroundColor (C++ function), 118
ButtonView::ButtonView (C++ function), 119, 120
ButtonView::repaint (C++ function), 121
ButtonView::setBackground (C++ function), 121
ButtonView::setBorder (C++ function), 120
ButtonView::setHighlight (C++ function), 120
ButtonView::setRect (C++ function), 121
ButtonView::setText (C++ function), 120
ButtonView::TextLabel (C++ function), 121

C

Color::blendAdditive (C++ function), 146
Color::blendMultiply (C++ function), 146
Color::Blue (C++ function), 146
Color::Green (C++ function), 146
Color::invert (C++ function), 146
Color::Red (C++ function), 146
Color::scale (C++ function), 146

Color::toString (C++ function), 146

D

DateTime::addDays (C++ function), 91
DateTime::addHours (C++ function), 91
DateTime::addMinutes (C++ function), 91
DateTime::addSeconds (C++ function), 91
DateTime::addTime (C++ function), 92
DateTime::DateTime (C++ function), 89
DateTime::Days (C++ function), 91
DateTime::fromISO8601 (C++ function), 94
DateTime::Hours (C++ function), 91
DateTime::incrementSystemClock (C++ function), 94
DateTime::isLeapYear (C++ function), 94
DateTime::isValid (C++ function), 90
DateTime::LocalTimeZoneHourOffset (C++ member), 94
DateTime::Minutes (C++ function), 91
DateTime::Month (C++ function), 91
DateTime::now (C++ function), 94
DateTime::Seconds (C++ function), 91
DateTime::setSystemDateTime (C++ function), 94
DateTime::toBrokenDownUnixTime (C++ function), 90
DateTime::toDateString (C++ function), 90
DateTime::toISO8601 (C++ function), 90
DateTime::toJulianDayNumber (C++ function), 90
DateTime::toLibcUnixTime (C++ function), 90
DateTime::toRFC1123 (C++ function), 90
DateTime::toString (C++ function), 90, 92
DateTime::toTimeString (C++ function), 90
DateTime::toUnixTime (C++ function), 90
DateTime::toUtcTime (C++ function), 91
DateTime::Year (C++ function), 91
DisplayPainter::BackgroundColor (C++ function), 147
DisplayPainter::CanvasHeight (C++ function), 148
DisplayPainter::CanvasWidth (C++ function), 148
DisplayPainter::DisplayController (C++ function), 148
DisplayPainter::DisplayPainter (C++ function), 147
DisplayPainter::drawChar (C++ function), 149
DisplayPainter::drawCircle (C++ function), 150

DisplayPainter::drawFillRect (C++ function), [149](#)
DisplayPainter::drawHLine (C++ function), [150](#)
DisplayPainter::drawLine (C++ function), [149](#)
DisplayPainter::drawPixel (C++ function), [148](#)
DisplayPainter::drawRect (C++ function), [149](#)
DisplayPainter::drawVLine (C++ function), [150](#)
DisplayPainter::ForegroundColor (C++ function), [147](#)
DisplayPainter::IsAntialiasedDrawing (C++ function), [148](#)
DisplayPainter::setBackgroundColor (C++ function), [147](#)
DisplayPainter::setForegroundColor (C++ function), [147](#)
DisplayPainter::swap (C++ function), [150](#)
DisplayPainter::useAntialiasedDrawing (C++ function), [147](#)

G

GraphView::GraphView (C++ function), [124](#)
GraphView::repaint (C++ function), [125](#)

H

HttpClient::dnsComplete (C++ function), [143](#)
HttpClient::dnsResolutionError (C++ function), [143](#)
HttpClient::HttpClient (C++ function), [143](#)
HttpClient::httpCompletion (C++ function), [143](#)
HttpPostClient::dnsComplete (C++ function), [145](#)
HttpPostClient::HttpPostClient (C++ function), [144](#)
HttpPostClient::post (C++ function), [145](#)

I

IApplicationContext::Instance (C++ member), [112](#)
ImageView::Crop (C++ function), [127](#)
ImageView::ImageView (C++ function), [127](#)
ImageView::repaint (C++ function), [127](#)
ImageView::setCrop (C++ function), [127](#)
ImageView::setImage (C++ function), [127](#)
IPowerManagement::__busySleep (C++ member), [164](#)
IPowerManagement::__shouldWakeUp (C++ member), [164](#)
IRTCSystem::__shouldProcessScheduledTasks (C++ member), [113](#)

M

mono::AppRunLoop (C++ class), [105](#)
mono::AppRunLoop::DynamicTaskQueueTime (C++ member), [107](#)
mono::AppRunLoop::lastDtrValue (C++ member), [107](#)
mono::AppRunLoop::resetOnDTR (C++ member), [106](#)
mono::AppRunLoop::resetOnUserButton (C++ member), [107](#)
mono::AppRunLoop::taskQueueHead (C++ member), [107](#)
mono::AppRunLoop::TouchSystemTime (C++ member), [106](#)
mono::DateTime (C++ class), [88](#)

mono::DateTime::LOCAL_TIME_ZONE (C++ class), [89](#)
mono::DateTime::maxValue (C++ function), [94](#)
mono::DateTime::minValue (C++ function), [94](#)
mono::DateTime::TimeTypes (C++ type), [89](#)
mono::DateTime::UNKNOWN_TIME_ZONE (C++ class), [89](#)
mono::DateTime::UTC_TIME_ZONE (C++ class), [89](#)
mono::display::Color (C++ class), [145](#)
mono::display::DisplayPainter (C++ class), [146](#)
mono::display::DisplayPainter::displayRefreshHandler (C++ member), [151](#)
mono::display::IDisplayController (C++ class), [151](#)
mono::display::IDisplayController::Brightness (C++ function), [153](#)
mono::display::IDisplayController::IDisplayController (C++ function), [151](#)
mono::display::IDisplayController::init (C++ function), [151](#)
mono::display::IDisplayController::LastTearingEffectTime (C++ member), [153](#)
mono::display::IDisplayController::setBrightness (C++ function), [152](#)
mono::display::IDisplayController::setBrightnessPercent (C++ function), [152](#)
mono::display::IDisplayController::setCursor (C++ function), [152](#)
mono::display::IDisplayController::setRefreshHandler (C++ function), [152](#)
mono::display::IDisplayController::setWindow (C++ function), [151](#)
mono::display::IDisplayController::write (C++ function), [152](#)
mono::display::TextRender (C++ class), [153](#)
mono::display::TextRender::ALIGN_BOTTOM (C++ class), [154](#)
mono::display::TextRender::ALIGN_CENTER (C++ class), [154](#)
mono::display::TextRender::ALIGN_LEFT (C++ class), [154](#)
mono::display::TextRender::ALIGN_MIDDLE (C++ class), [154](#)
mono::display::TextRender::ALIGN_RIGHT (C++ class), [154](#)
mono::display::TextRender::ALIGN_TOP (C++ class), [154](#)
mono::display::TextRender::charDrawFunction (C++ type), [154](#)
mono::display::TextRender::drawChar (C++ function), [155](#), [157](#)
mono::display::TextRender::drawInRect (C++ function), [155](#), [156](#)
mono::display::TextRender::HorizontalAlignment (C++ type), [154](#)

[mono::display::TextRender::renderDimension](#) (C++ function), [155](#), [156](#)
[mono::display::TextRender::VerticalAlignmentType](#) (C++ type), [154](#)
[mono::GenericQueue](#) (C++ class), [107](#)
[mono::geo::Circle](#) (C++ class), [158](#)
[mono::geo::Point](#) (C++ class), [158](#)
[mono::geo::Rect](#) (C++ class), [158](#)
[mono::geo::Size](#) (C++ class), [159](#)
[mono::IApplication](#) (C++ class), [108](#)
[mono::IApplication::enterRunLoop](#) (C++ function), [109](#)
[mono::IApplication::IApplication](#) (C++ function), [108](#)
[mono::IApplication::monoWakeFromReset](#) (C++ function), [108](#)
[mono::IApplication::monoWakeFromSleep](#) (C++ function), [109](#)
[mono::IApplication::monoWillGotoSleep](#) (C++ function), [108](#)
[mono::IApplicationContext](#) (C++ class), [109](#)
[mono::IApplicationContext::_softwareReset](#) (C++ function), [112](#)
[mono::IApplicationContext::_softwareResetToApplication](#) (C++ function), [112](#)
[mono::IApplicationContext::_softwareResetToBootloader](#) (C++ function), [112](#)
[mono::IApplicationContext::Accelerometer](#) (C++ member), [111](#)
[mono::IApplicationContext::Buzzer](#) (C++ member), [111](#)
[mono::IApplicationContext::DisplayController](#) (C++ member), [110](#)
[mono::IApplicationContext::EnterSleepMode](#) (C++ function), [111](#)
[mono::IApplicationContext::enterSleepMode](#) (C++ function), [112](#)
[mono::IApplicationContext::exec](#) (C++ function), [109](#)
[mono::IApplicationContext::IApplicationContext](#) (C++ function), [112](#)
[mono::IApplicationContext::PowerManager](#) (C++ member), [110](#)
[mono::IApplicationContext::ResetOnUserButton](#) (C++ function), [111](#)
[mono::IApplicationContext::resetOnUserButton](#) (C++ function), [112](#)
[mono::IApplicationContext::RTC](#) (C++ member), [111](#)
[mono::IApplicationContext::RunLoop](#) (C++ member), [110](#)
[mono::IApplicationContext::setMonoApplication](#) (C++ function), [110](#)
[mono::IApplicationContext::SleepForMs](#) (C++ function), [111](#)
[mono::IApplicationContext::sleepForMs](#) (C++ function), [112](#)
[mono::IApplicationContext::SoftwareReset](#) (C++ function), [111](#)
[mono::IApplicationContext::SoftwareResetToApplication](#) (C++ function), [111](#)
[mono::IApplicationContext::SoftwareResetToBootloader](#) (C++ function), [112](#)
[mono::IApplicationContext::Temperature](#) (C++ member), [110](#)
[mono::IApplicationContext::TouchSystem](#) (C++ member), [110](#)
[mono::IApplicationContext::UserButton](#) (C++ member), [110](#)
[mono::IRTCSystem](#) (C++ class), [112](#)
[mono::IRTCSystem::setupRtcSystem](#) (C++ function), [113](#)
[mono::IRTCSystem::startRtc](#) (C++ function), [113](#)
[mono::IRTCSystem::stopRtc](#) (C++ function), [113](#)
[mono::IRunLoopTask](#) (C++ class), [113](#)
[mono::IRunLoopTask::nextTask](#) (C++ member), [114](#)
[mono::IRunLoopTask::previousTask](#) (C++ member), [114](#)
[mono::IRunLoopTask::singleShot](#) (C++ member), [114](#)
[mono::IRunLoopTask::taskHandler](#) (C++ function), [113](#)
[mono::ITouchSystem](#) (C++ class), [114](#)
[mono::ITouchSystem::activate](#) (C++ function), [114](#)
[mono::ITouchSystem::CurrentCalibration](#) (C++ function), [114](#)
[mono::ITouchSystem::deactivate](#) (C++ function), [114](#)
[mono::ITouchSystem::init](#) (C++ function), [114](#)
[mono::ITouchSystem::isActive](#) (C++ function), [114](#)
[mono::ITouchSystem::processTouchInput](#) (C++ function), [114](#)
[mono::ITouchSystem::runTouchBegin](#) (C++ function), [115](#)
[mono::ITouchSystem::runTouchEnd](#) (C++ function), [115](#)
[mono::ITouchSystem::runTouchMove](#) (C++ function), [115](#)
[mono::ITouchSystem::setCalibration](#) (C++ function), [114](#)
[mono::ITouchSystem::ToScreenCoordsX](#) (C++ function), [114](#)
[mono::ITouchSystem::ToScreenCoordsY](#) (C++ function), [114](#)
[mono::ManagedPointer](#) (C++ class), [115](#)
[mono::ManagedPointer::ManagedPointer](#) (C++ function), [115](#)
[mono::ManagedPointer::Surrender](#) (C++ function), [115](#)
[mono::network::HttpClient](#) (C++ class), [142](#)
[mono::network::HttpClient::HttpResponseBodyData](#) (C++ class), [143](#)
[mono::network::HttpClient::HttpResponseBodyData::bodyChunk](#) (C++ member), [143](#)
[mono::network::HttpClient::HttpResponseBodyData::Context](#) (C++ member), [143](#)
[mono::network::HttpClient::HttpResponseBodyData::Finished](#) (C++ member), [143](#)
[mono::network::HttpPostClient](#) (C++ class), [144](#)
[mono::power::IPowerManagement](#) (C++ class), [163](#)

mono::power::IPowerManagement::AppendToPowerAwareQueue (C++ function), 163
 mono::power::IPowerManagement::EnterSleep (C++ function), 163
 mono::power::IPowerManagement::powerAwarenessQueue (C++ member), 165
 mono::power::IPowerManagement::PowerSystem (C++ member), 164
 mono::power::IPowerManagement::processResetAwarenessQueue (C++ function), 165
 mono::power::IPowerManagement::RemoveFromPowerAwareQueue (C++ function), 164
 mono::PowerSaver (C++ class), 95
 mono::Queue (C++ class), 96
 mono::QueueInterrupt (C++ class), 97
 mono::QueueInterrupt::fall (C++ function), 98
 mono::QueueInterrupt::rise (C++ function), 98
 mono::Regex (C++ class), 99
 mono::Regex::Capture (C++ type), 99
 mono::ScheduledTask (C++ class), 101
 mono::sensor::IAccelerometer (C++ class), 160
 mono::sensor::IAccelerometer::IsActive (C++ function), 160
 mono::sensor::IAccelerometer::rawXAxis (C++ function), 160
 mono::sensor::IAccelerometer::rawYAxis (C++ function), 160
 mono::sensor::IAccelerometer::rawZAxis (C++ function), 160
 mono::sensor::IAccelerometer::Start (C++ function), 160
 mono::sensor::IAccelerometer::Stop (C++ function), 160
 mono::sensor::IBuzzer (C++ class), 161
 mono::sensor::IBuzzer::buzzAsync (C++ function), 161
 mono::sensor::IBuzzer::buzzKill (C++ function), 161
 mono::sensor::IBuzzer::timeoutHandler (C++ member), 162
 mono::sensor::ITemperature (C++ class), 162
 mono::sensor::ITemperature::Read (C++ function), 162
 mono::sensor::ITemperature::ReadMilliCelcius (C++ function), 162
 mono::String (C++ class), 100
 mono::Timer (C++ class), 103
 mono::Timer::callOnce (C++ function), 105
 mono::Timer::setCallback (C++ function), 104
 mono::Timer::start (C++ function), 104
 mono::Timer::stop (C++ function), 104
 mono::TouchEvent (C++ class), 116
 mono::TouchResponder (C++ class), 116
 mono::ui::AbstractButtonView (C++ class), 117
 mono::ui::AbstractButtonView::setClickCallback (C++ function), 117
 mono::ui::BackgroundView (C++ class), 117
 mono::ui::ButtonView (C++ class), 119
 mono::ui::ButtonView::setClickCallback (C++ function), 121
 mono::ui::ButtonView::setFont (C++ function), 120
 mono::ui::ConsoleView (C++ class), 122
 mono::ui::ConsoleView::consoleLines (C++ function), 122
 mono::ui::ConsoleView::ConsoleView (C++ function), 122
 mono::ui::ConsoleView::lineLength (C++ function), 122
 mono::ui::ConsoleView::repaint (C++ function), 122
 mono::ui::ConsoleView::scrolls (C++ member), 122
 mono::ui::ConsoleView::textBuffer (C++ member), 122
 mono::ui::ConsoleView::WriteLine (C++ function), 122
 mono::ui::GraphView (C++ class), 123
 mono::ui::IGraphViewDataSource (C++ class), 125
 mono::ui::IGraphViewDataSource::BufferLenght (C++ function), 126
 mono::ui::IGraphViewDataSource::DataPoint (C++ function), 125
 mono::ui::IGraphViewDataSource::MaxSampleValueSpan (C++ function), 126
 mono::ui::IGraphViewDataSource::NewestSampleIndex (C++ function), 126
 mono::ui::ImageView (C++ class), 126
 mono::ui::ImageView::crop (C++ member), 128
 mono::ui::ImageView::image (C++ member), 128
 mono::ui::OnOffButtonView (C++ class), 128
 mono::ui::ProgressBarView (C++ class), 128
 mono::ui::ResponderView (C++ class), 130
 mono::ui::StatusIndicatorView (C++ class), 131
 mono::ui::TextLabelView (C++ class), 133
 mono::ui::TextLabelView::ALIGN_BOTTOM (C++ class), 134
 mono::ui::TextLabelView::ALIGN_CENTER (C++ class), 133
 mono::ui::TextLabelView::ALIGN_LEFT (C++ class), 133
 mono::ui::TextLabelView::ALIGN_MIDDLE (C++ class), 134
 mono::ui::TextLabelView::ALIGN_RIGHT (C++ class), 134
 mono::ui::TextLabelView::ALIGN_TOP (C++ class), 134
 mono::ui::TextLabelView::GfxFont (C++ function), 135
 mono::ui::TextLabelView::incrementalRepaint (C++ member), 137
 mono::ui::TextLabelView::scheduleFastRepaint (C++ function), 136
 mono::ui::TextLabelView::setBackground (C++ function), 135
 mono::ui::TextLabelView::setFont (C++ function), 136
 mono::ui::TextLabelView::setText (C++ function), 135, 136

mono::ui::TextLabelView::StandardGfxFont (C++ member), 137
 mono::ui::TextLabelView::TextAlignment (C++ type), 133
 mono::ui::TextLabelView::TextLabelView (C++ function), 134
 mono::ui::TextLabelView::VerticalTextAlignment (C++ type), 134
 mono::ui::View (C++ class), 138
 mono::ui::View::isDirty (C++ member), 141
 mono::ui::View::LANDSCAPE_LEFT (C++ class), 138
 mono::ui::View::LANDSCAPE_RIGHT (C++ class), 138
 mono::ui::View::Orientation (C++ type), 138
 mono::ui::View::PORTRAIT (C++ class), 138
 mono::ui::View::PORTRAIT_BOTTOMUP (C++ class), 138
 mono::ui::View::repaint (C++ function), 141
 mono::ui::View::viewRect (C++ member), 141
 mono::ui::View::visible (C++ member), 141

O

OnOffButtonView::repaint (C++ function), 128

P

PowerSaver::deactivate (C++ function), 96
 PowerSaver::dim (C++ function), 95
 PowerSaver::PowerSaver (C++ function), 95
 PowerSaver::startDimTimer (C++ function), 95
 PowerSaver::startSleepTimer (C++ function), 95
 PowerSaver::undim (C++ function), 96
 ProgressBarView::init (C++ function), 130
 ProgressBarView::Maximum (C++ function), 130
 ProgressBarView::Minimum (C++ function), 130
 ProgressBarView::ProgressBarView (C++ function), 129
 ProgressBarView::repaint (C++ function), 130
 ProgressBarView::setMaximum (C++ function), 129
 ProgressBarView::setMinimum (C++ function), 129
 ProgressBarView::setValue (C++ function), 129

Q

Queue::Dequeue (C++ function), 96
 Queue::Enqueue (C++ function), 96
 Queue::Exists (C++ function), 96
 Queue::Next (C++ function), 96
 Queue::Peek (C++ function), 96
 QueueInterrupt::DeactivateUntilHandled (C++ function), 97
 QueueInterrupt::FallTimeStamp (C++ function), 98
 QueueInterrupt::IsInterruptsWhilePendingActive (C++ function), 97
 QueueInterrupt::QueueInterrupt (C++ function), 97
 QueueInterrupt::RiseTimeStamp (C++ function), 98
 QueueInterrupt::setDebounceTimeout (C++ function), 98
 QueueInterrupt::setDebouncing (C++ function), 97

QueueInterrupt::setInterruptsSleep (C++ function), 99
 QueueInterrupt::Snapshot (C++ function), 98
 QueueInterrupt::taskHandler (C++ function), 99
 QueueInterrupt::willInterruptSleep (C++ function), 99

R

Rect::Center (C++ function), 159
 Rect::contains (C++ function), 159
 Rect::crop (C++ function), 159
 Rect::LowerLeft (C++ function), 159
 Rect::LowerRight (C++ function), 159
 Rect::Rect (C++ function), 158
 Rect::setPoint (C++ function), 159
 Rect::setSize (C++ function), 159
 Rect::ToString (C++ function), 159
 Rect::UpperLeft (C++ function), 158
 Rect::UpperRight (C++ function), 159
 Regex::IsMatch (C++ function), 100
 Regex::Match (C++ function), 100
 Regex::Regex (C++ function), 100
 Regex::Value (C++ function), 100
 ResponderView::hide (C++ function), 130
 ResponderView::RespondTouchBegin (C++ function), 130
 ResponderView::RespondTouchEnd (C++ function), 130
 ResponderView::RespondTouchMove (C++ function), 130
 ResponderView::show (C++ function), 130

S

ScheduledTask::isDue (C++ function), 103
 ScheduledTask::pendingScheduledTasks (C++ function), 102
 ScheduledTask::processScheduledTasks (C++ function), 102
 ScheduledTask::queue (C++ member), 103
 ScheduledTask::reschedule (C++ function), 102
 ScheduledTask::runTask (C++ function), 103
 ScheduledTask::ScheduledTask (C++ function), 101, 102
 ScheduledTask::setRunInSleep (C++ function), 102
 ScheduledTask::willRunInSleep (C++ function), 102
 Size::Size (C++ function), 160
 StatusIndicatorView::initializer (C++ function), 132
 StatusIndicatorView::repaint (C++ function), 132
 StatusIndicatorView::setOffStateColor (C++ function), 132
 StatusIndicatorView::setOnStateColor (C++ function), 132
 StatusIndicatorView::setState (C++ function), 132
 StatusIndicatorView::State (C++ function), 132
 StatusIndicatorView::StatusIndicatorView (C++ function), 131

T

TextLabelView::Alignment (C++ function), 135
TextLabelView::Font (C++ function), 135
TextLabelView::isTextMultiline (C++ function), 137
TextLabelView::repaint (C++ function), 137
TextLabelView::scheduleRepaint (C++ function), 136
TextLabelView::setAlignment (C++ function), 135
TextLabelView::setBackground (C++ member), 137
TextLabelView::setBackgroundColor (C++ function), 135
TextLabelView::setTextColor (C++ function), 135
TextLabelView::setTextSize (C++ function), 135
TextLabelView::Text (C++ function), 136
TextLabelView::TextColor (C++ function), 135
TextLabelView::TextDimension (C++ function), 135
TextLabelView::TextLabelView (C++ function), 134
TextLabelView::TextPixelHeight (C++ function), 135
TextLabelView::TextPixelWidth (C++ function), 135
TextLabelView::TextSize (C++ function), 135
TextLabelView::VerticalAlignment (C++ function), 135
TextRender::Alignment (C++ function), 157
TextRender::Background (C++ function), 157
TextRender::calcUnderBaseline (C++ function), 157
TextRender::Foreground (C++ function), 157
TextRender::remainingTextlineWidth (C++ function), 157
TextRender::renderInRect (C++ function), 156
TextRender::setAlignment (C++ function), 156, 157
TextRender::setBackground (C++ function), 156
TextRender::setForeground (C++ function), 156
TextRender::TextRender (C++ function), 154, 155
TextRender::VerticalAlignment (C++ function), 157
TextRender::writePixel (C++ function), 157
Timer::Running (C++ function), 104
Timer::setInterval (C++ function), 104
Timer::SingleShot (C++ function), 104
Timer::Start (C++ function), 104
Timer::Stop (C++ function), 104
Timer::taskHandler (C++ function), 105
Timer::Timer (C++ function), 104
TouchResponder::Activate (C++ function), 116
TouchResponder::Deactivate (C++ function), 116
TouchResponder::FirstResponder (C++ function), 116
TouchResponder::TouchResponder (C++ function), 116

V

View::callRepaintScheduledViews (C++ function), 141
View::dirtyQueue (C++ member), 142
View::DisplayHeight (C++ function), 140
View::DisplayOrientation (C++ function), 140
View::DisplayWidth (C++ function), 140
View::hide (C++ function), 140
View::painter (C++ member), 142
View::Position (C++ function), 139

View::repaintScheduledViews (C++ function), 141
View::RepaintScheduledViewsTime (C++ member), 141
View::scheduleRepaint (C++ function), 139
View::setPosition (C++ function), 139
View::setRect (C++ function), 139
View::setSize (C++ function), 139
View::show (C++ function), 140
View::Size (C++ function), 139
View::View (C++ function), 139
View::ViewRect (C++ function), 139
View::Visible (C++ function), 140